

Power on/off

1



2 Enter or exit mute mode



Pc's Windows key.

3



6 Pc's Alt+F4 key.



Pc's Space key.

4

5 Pc's Alt+Tab key



7 Numeric input keys.



Display channel information

8



9 /

Pop up Touch Menú-General Setting

10



12 Pop up Touch Menu-audio

Enable or disable front keyboard and touch

13



11 Return to android main Screen key.

Enable or disable front keyboard

17



15 Enable or disable Touch.

Turn off or turn on the screen backlight

14



16 Pop out or close the screen freezing tools

Quickly start writing software

21



18 Pc's Backspace key

Page up, down

22



19 Scroll up, left, right, down.

20 Enter



Quickly start writing software

21



23 Increase/reduce the volume

Page up, down

22



24 Pc's F1-F12 Function keys