Measurement condition
PUMY-SP112, 125, 140VKM(-BS)
PUMY-SP112, 125, 140YKM(-BS)

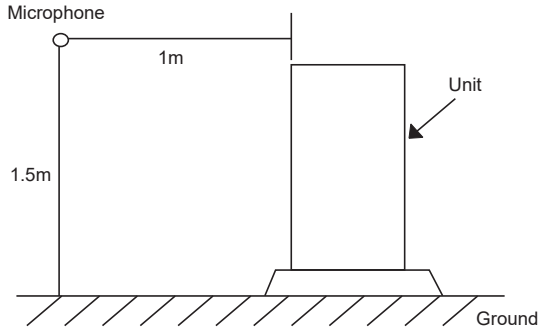

Sound level of PUMY-SP140VKM, YKM(-BS)

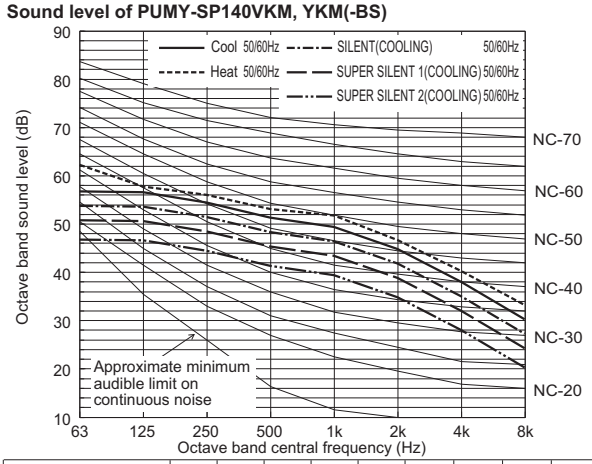

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard Cooling	50/60Hz	56.8	56.6	54.5	51.3	49.4	44.8	38.0	30.3	54.0
Standard Heating	50/60Hz	62.3	57.8	56.1	53.1	51.8	46.7	40.3	33.2	56.0
SILENT(COOLING)	50/60Hz	53.8	53.6	51.5	48.3	46.4	41.8	35.0	27.3	51.0
SUPER SILENT 1(COOLING)	50/60Hz	50.8	50.6	48.5	45.3	43.4	38.8	32.0	24.3	48.0
SUPER SILENT 2(COOLING)	50/60Hz	46.8	46.6	44.5	41.3	39.4	34.8	28.0	20.3	44.0

When Silent/Super Silent1/Super Silent2 mode is set,the A/C system's capacity is limited. The system could return to normal operation from Silent/Super Silent1/Super Silent2 mode automatically in the case that the operation condition is severe.

Sound level of PUMY-SP112VKM, YKM(-BS)

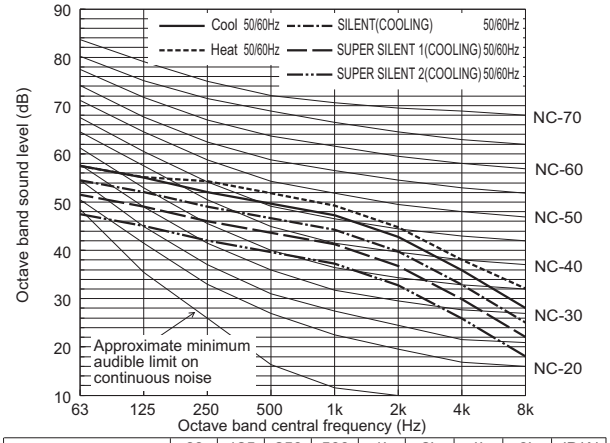

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard Cooling	50/60Hz	57.5	55.1	52.0	49.6	47.3	42.8	35.9	28.1	52.0
Standard Heating	50/60Hz	57.4	55.1	54.3	51.8	49.3	44.8	38.0	32.1	54.0
SILENT(COOLING)	50/60Hz	54.5	52.1	49.0	46.6	44.3	39.8	32.9	25.1	49.0
SUPER SILENT 1(COOLING)	50/60Hz	51.5	49.1	46.0	43.6	41.3	36.8	29.9	22.1	46.0
SUPER SILENT 2(COOLING)	50/60Hz	47.5	45.1	42.0	39.6	37.3	32.8	25.9	18.1	42.0

When Silent/Super Silent1/Super Silent2 mode is set,the A/C system's capacity is limited. The system could return to normal operation from Silent/Super Silent1/Super Silent2 mode automatically in the case that the operation condition is severe.

Sound level of PUMY-SP125VKM,YKM(-BS)

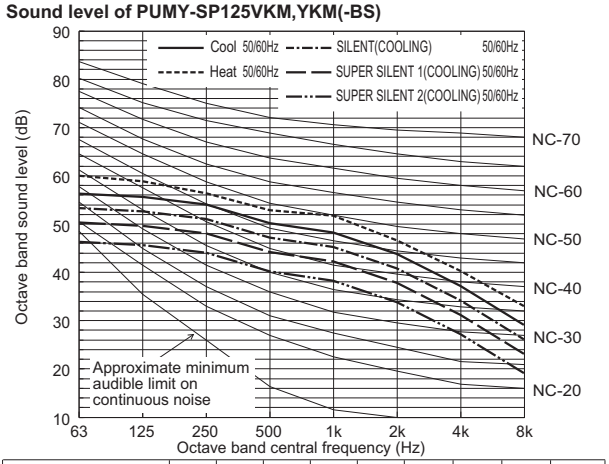

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard Cooling	50/60Hz	56.3	55.6	54.1	50.2	48.3	43.8	37.2	29.1	53.0
Standard Heating	50/60Hz	60.0	58.9	56.4	52.9	51.8	46.6	40.3	33.0	56.0
SILENT(COOLING)	50/60Hz	53.3	52.6	51.1	47.2	45.3	40.8	34.2	26.1	50.0
SUPER SILENT 1(COOLING)	50/60Hz	50.3	49.6	48.1	44.2	42.3	37.8	31.2	23.1	47.0
SUPER SILENT 2(COOLING)	50/60Hz	46.3	45.6	44.1	40.2	38.3	33.8	27.2	19.1	43.0

When Silent/Super Silent1/Super Silent2 mode is set,the A/C system's capacity is limited. The system could return to normal operation from Silent/Super Silent1/Super Silent2 mode automatically in the case that the operation condition is severe.

Measurement condition
PUMY-P112, 125, 140VKM4(-BS)
PUMY-P112, 125, 140YKM4(-BS)
PUMY-P112, 125, 140YKME4(-BS)

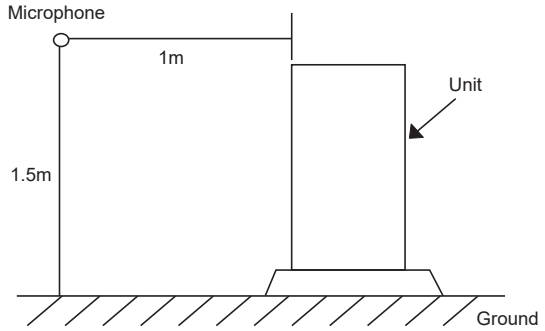

Sound level of PUMY-P140VKM4/PUMY-P140YKM(E)4

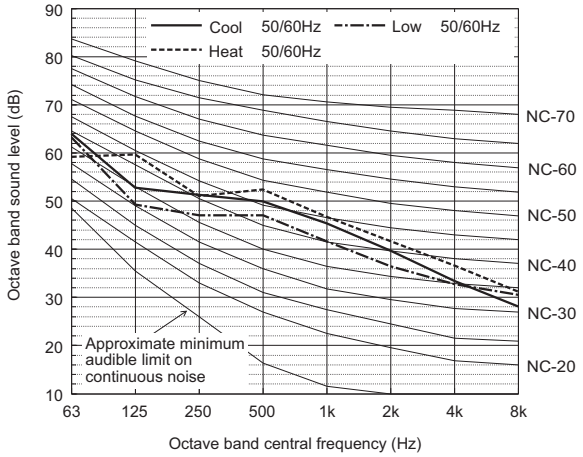

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard Cooling	50/60Hz	64.0	52.8	51.3	50.0	45.4	39.7	33.5	28.2	51.0
Standard Heating	50/60Hz	59.2	59.7	51.1	52.4	46.8	41.7	36.7	31.2	53.0
Low noise mode	50/60Hz	63.2	49.2	47.0	47.1	41.6	36.5	32.8	30.6	48.0

When Low noise mode is set,the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

Sound level of PUMY-P112VKM4/PUMY-P112YKM(E)4

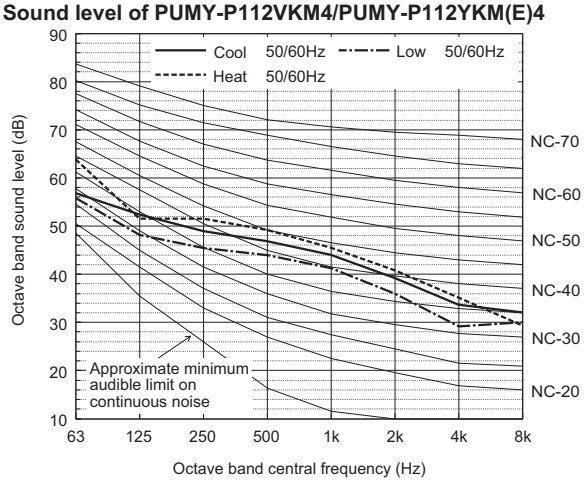

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard Cooling	50/60Hz	56.9	52.4	49.0	46.9	44.0	39.2	33.7	32.1	49.0
Standard Heating	50/60Hz	63.9	51.6	51.6	49.2	45.5	40.8	35.1	29.3	51.0
Low noise mode	50/60Hz	55.8	48.1	45.5	44.0	41.2	36.0	29.2	30.0	46.0

When Low noise mode is set,the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

Sound level of PUMY-P125VKM4/PUMY-P125YKM(E)4

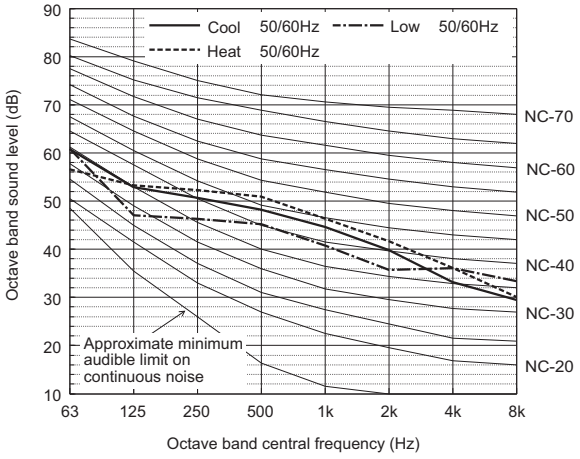

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard Cooling	50/60Hz	60.8	52.8	50.6	48.2	44.7	39.9	33.2	29.5	50.0
Standard Heating	50/60Hz	56.6	53.3	52.2	50.9	46.4	41.7	36.2	30.1	52.0
Low noise mode	50/60Hz	60.9	47.1	46.3	45.2	40.7	35.7	36.1	33.4	47.0

When Low noise mode is set,the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

Measurement condition
PUMY-P200YKM2(-BS)

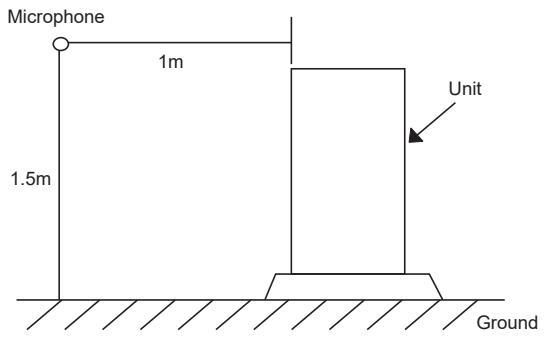

Sound level of PUMY-P200YKM2

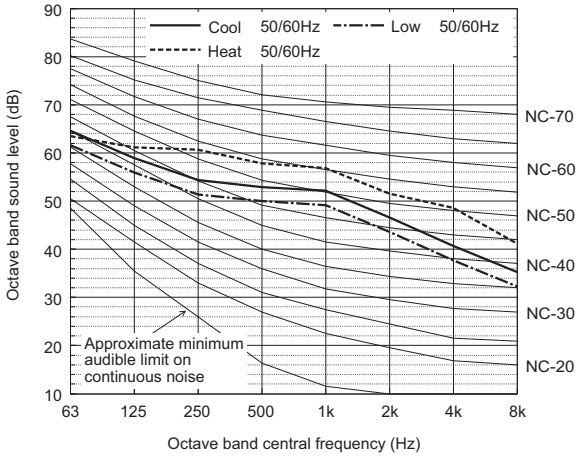

		63	125	250	500	1k	2k	4k	8k	dB(A)
Standard Cooling	50/60Hz	64.6	58.9	54.4	53.0	52.1	46.6	40.7	35.3	56.0
Standard Heating	50/60Hz	63.4	61.2	60.7	57.8	56.9	51.6	48.6	41.1	61.0
Low noise mode	50/60Hz	61.6	55.9	51.4	50.0	49.1	43.6	37.7	32.3	53.0

When Low noise mode is set,the A/C system's capacity is limited. The system could return to normal operation from Low noise mode automatically in the case that the operation condition is severe.

• **Cooling**

PUMY-SP-VKM/YKM

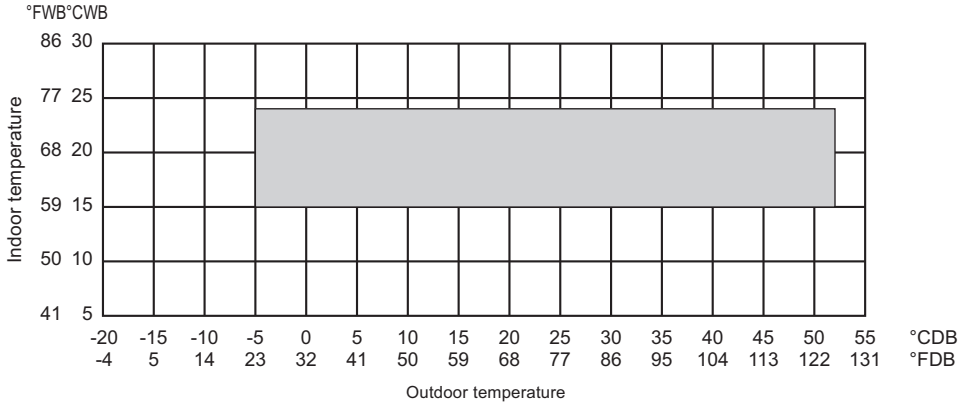

* 10 to 52°CDB (50 to 126°FDB): in case of connecting PKFY-P15/P20/P25VBM, PFFY-P20/P25/P32VKM, PFFY-P20/P25/P32VLE(R)M, PEFY-P-VMA3 type indoor unit and M series , S series , and P series type indoor unit with branch box , M series type indoor unit with connection kit.

• **Heating**

PUMY-SP-VKM/YKM

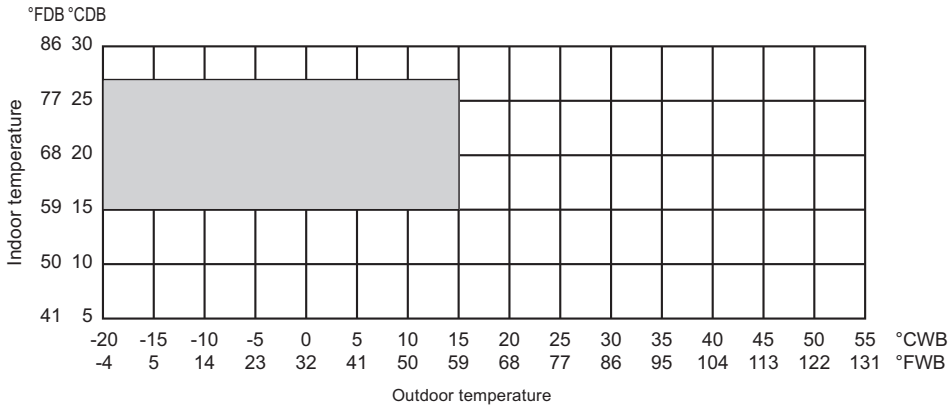

• **Cooling**

PUMY-P-VKM4/YKM4/YKME4
PUMY-P-YKM2

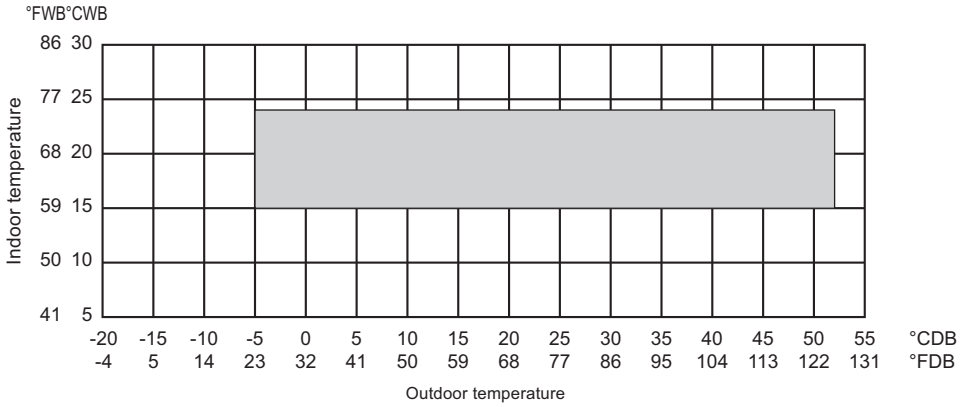

* [PUMY-P-VKM4/YKM4/YKME4]
10 to 52°CDB (50 to 126°FDB), when connecting following models: PKFY-P15/20/25VBM, PFFY-P20/25/32VLE(R)M, PFFY-P20/25/32VKM, PEFY-P25/32/40VMA3; and M-Series, S-Series, and P-Series type indoor unit.
[PUMY-P-YKM2]
10 to 52°CDB (50 to 126°FDB), when connecting following models: PKFY-P15/20/25VBM, PFFY-P20/25/32VLE(R)M, PFFY-P20/25/32VKM, PEFY-P40/63VMA3-E; and M-Series, S-Series, and P-Series type indoor unit.

• **Heating**

PUMY-P-VKM4/YKM4/YKME4
PUMY-P-YKM2

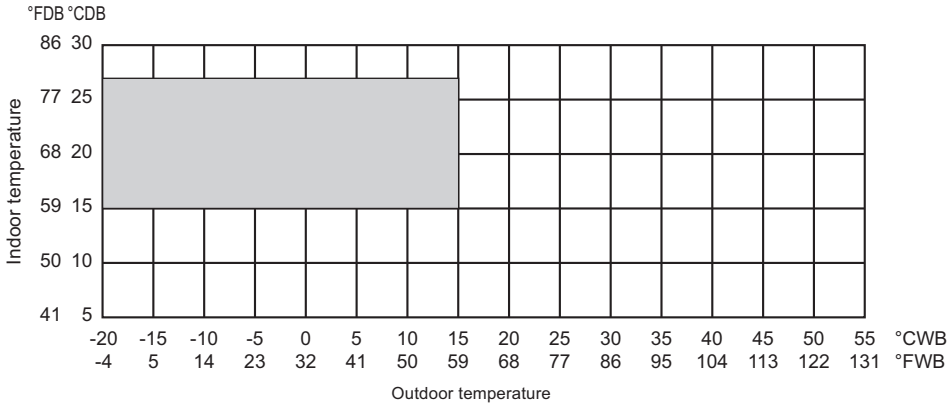

7-1. Selection of Cooling/Heating Units

How to determine the capacity when less than or equal 100% indoor model size units are connected in total:

The purpose of this flow chart is to select the indoor and outdoor units. For other purposes, this flow chart is intended only for reference.

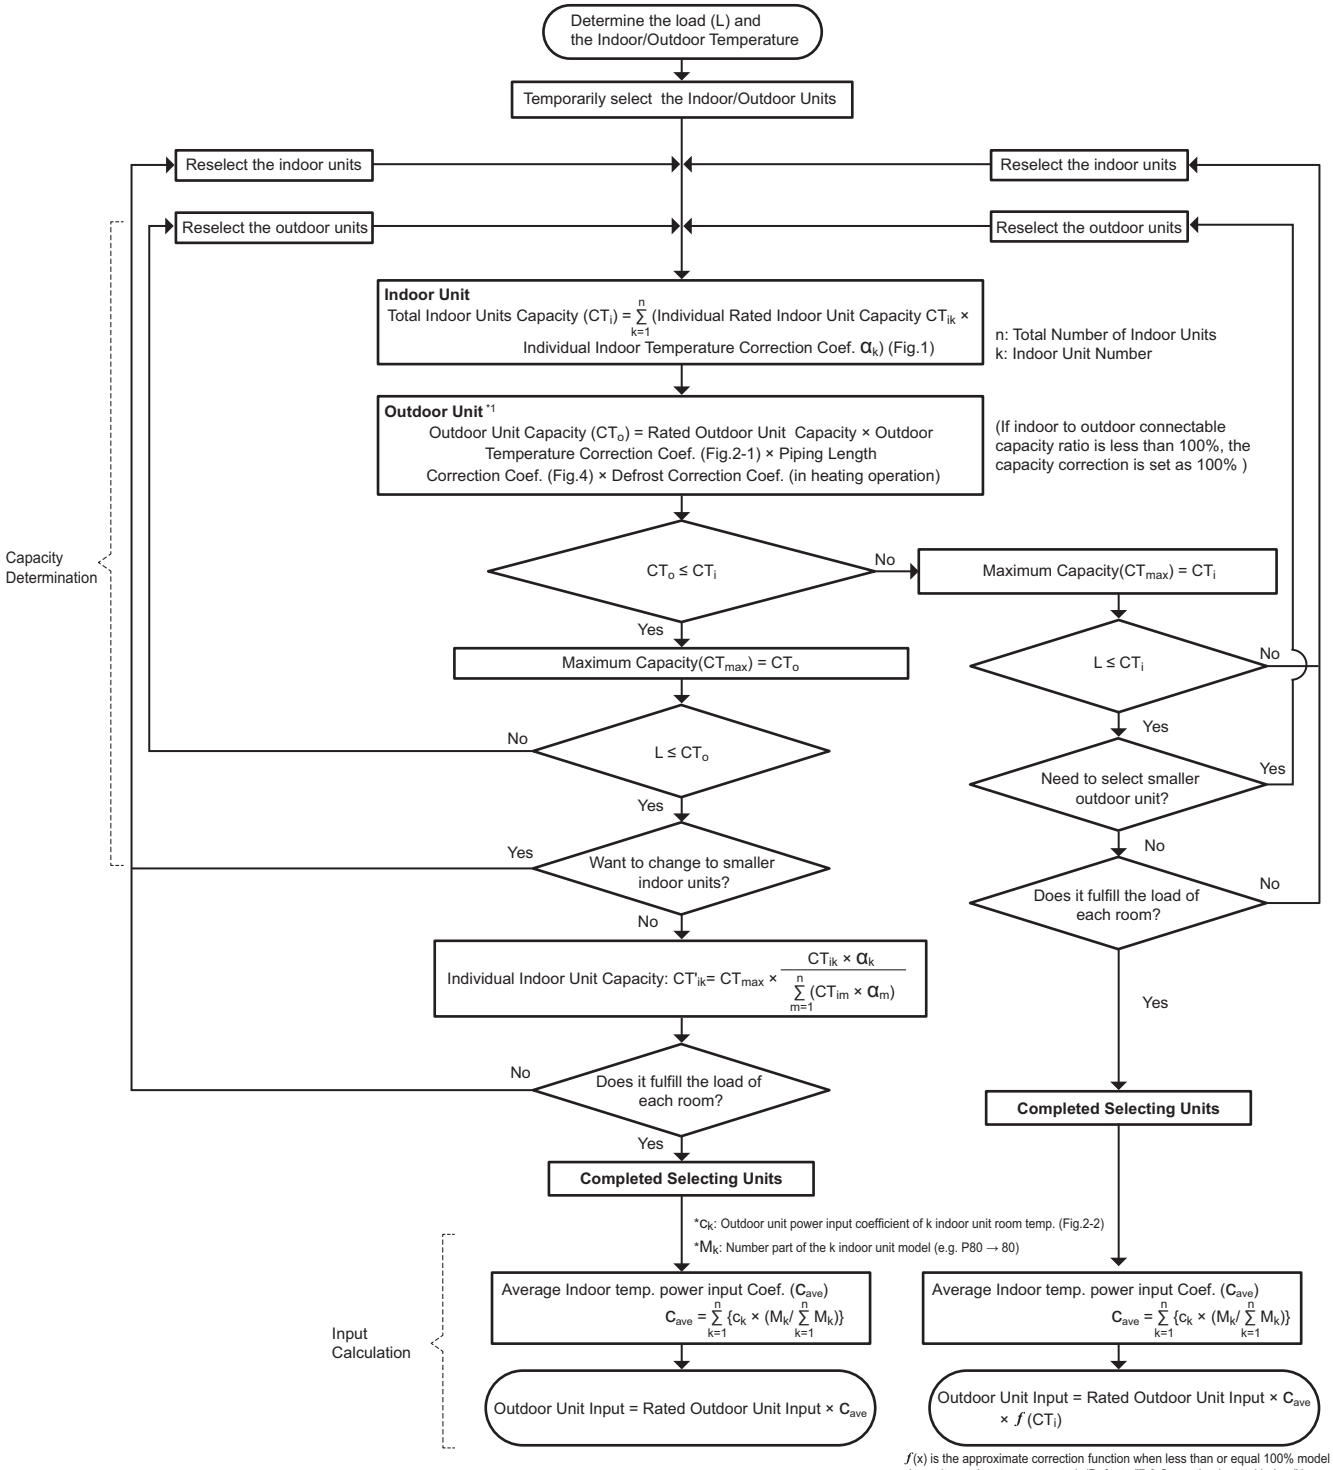

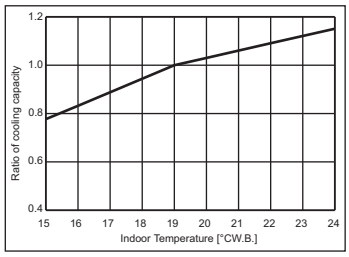

Fig.1 Indoor unit temperature correction *2

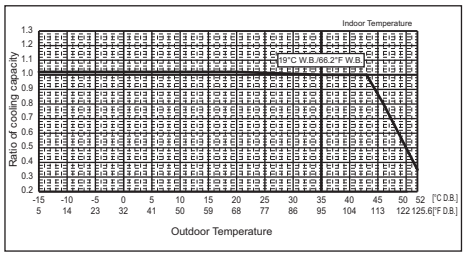

Fig.2-1 Outdoor unit temperature correction (capacity) *3

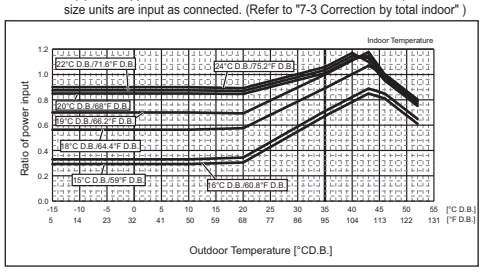

Fig.2-2 Outdoor unit temperature correction (power input) *3

*1 When the indoor unit sizes from P100 to P140 or total capacity indoor units from P81 to P140 are connected to only 1 port on the BC controller in the R2 system, the cooling capacity of the indoor unit should be multiplied by a correction factor of 0.97.
*2 This figure shows the characteristic of PUMY-SP112/125/140VKM(-BS) and PUMY-SP112/125/140YKM(-BS).
*3 This figure shows the characteristic of PUMY-SP112/125VKM(-BS) and PUMY-SP112/125YKM(-BS).

How to determine the capacity when greater than 100% indoor model size units are connected in total:

The purpose of this flow chart is to select the indoor and outdoor units. For other purposes, this flow chart is intended only for reference.

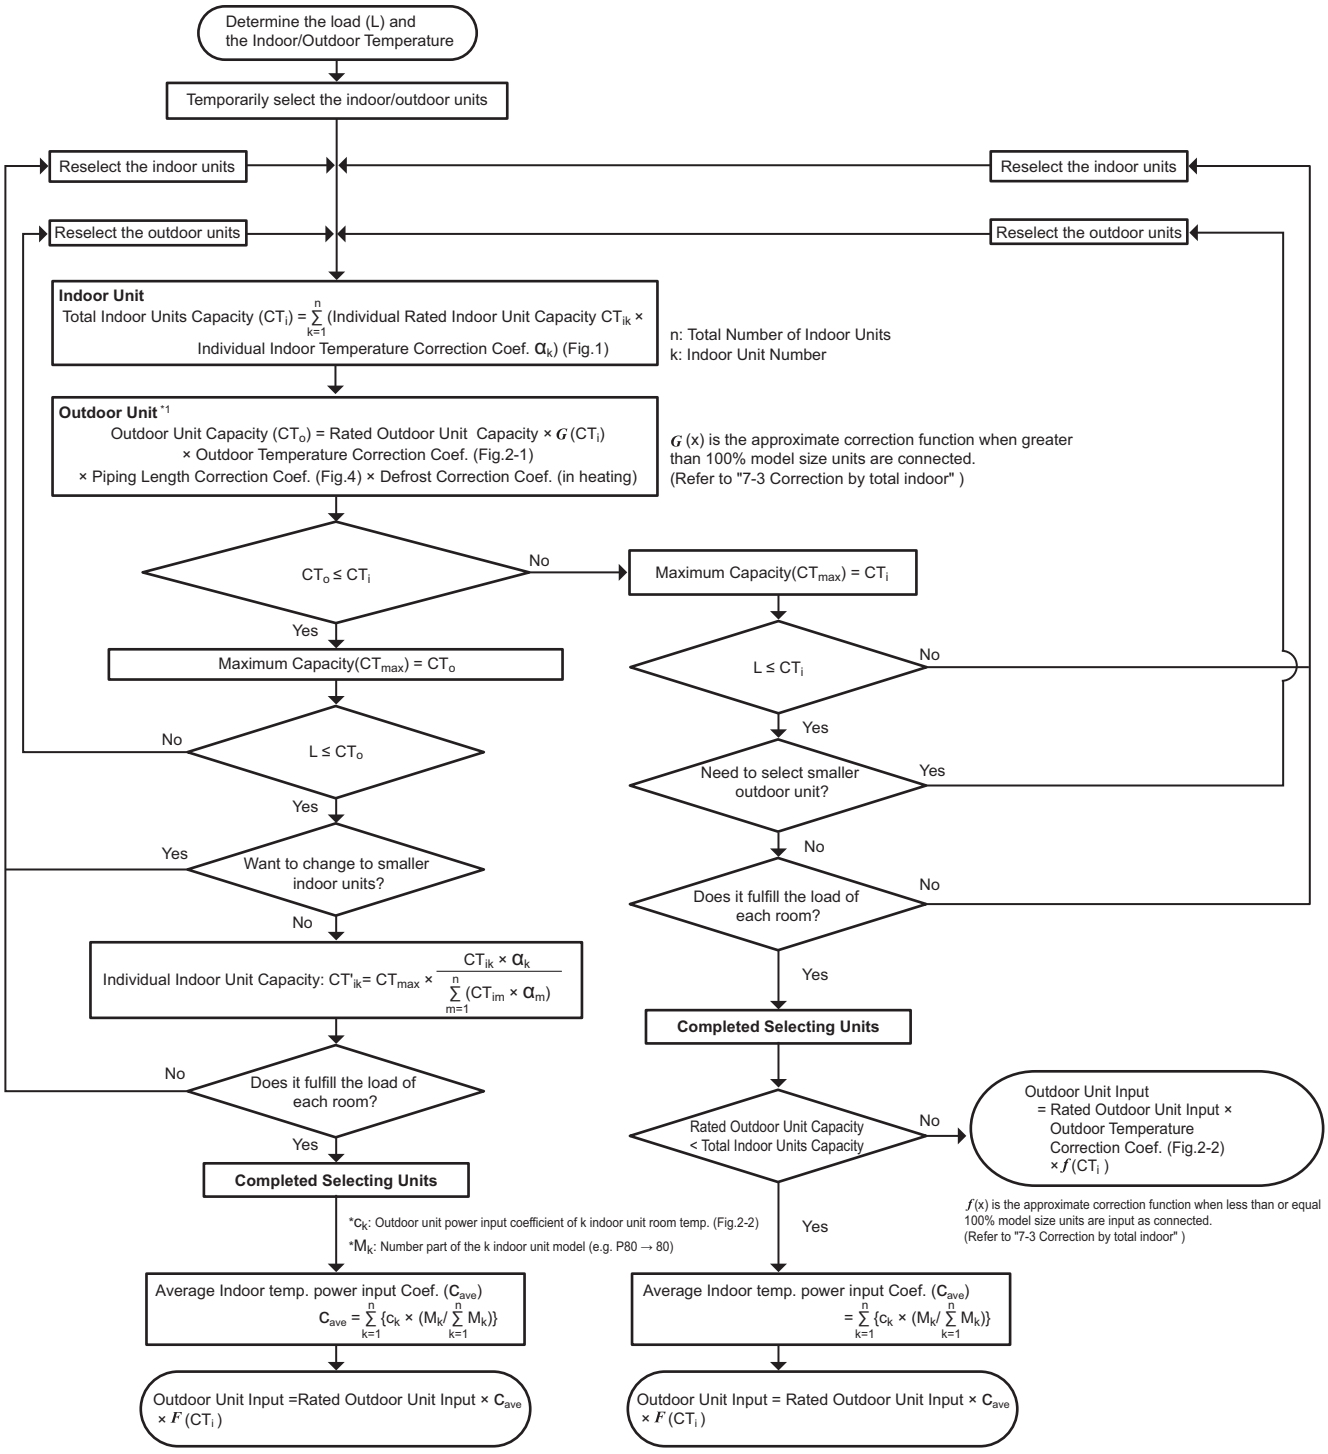

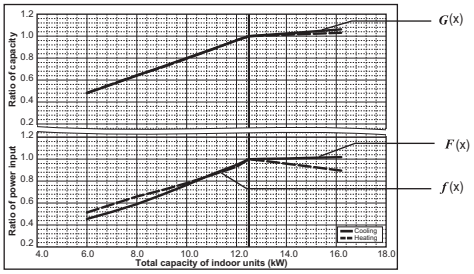

Fig.3 Correction by total indoor *2

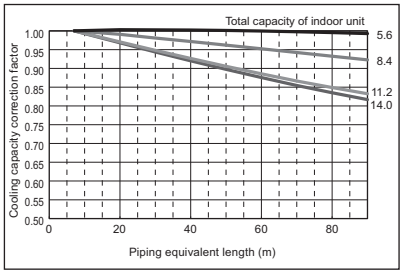

Fig.4 Correction of refrigerant piping length *2

*1 When the indoor unit sizes from P100 to P140 or total capacity indoor units from P81 to P140 are connected to only 1 port on the BC controller in the R2 system, the cooling capacity of the indoor unit should be multiplied by a correction factor of 0.97.
*2 This figure shows the characteristic of PUMY-SP112VKM(-BS) and PUMY-SP112YKM(-BS).

<Cooling>

Design Condition	
Outdoor Design Dry Bulb Temperature	**44.7ºC**
Total Cooling Load	**8.5 kW**
Room1	
Indoor Design Dry Bulb Temperature	**27ºC**
Indoor Design Wet Bulb Temperature	**20ºC**
Cooling Load	**4.0 kW**
Room2	
Indoor Design Dry Bulb Temperature	**32ºC**
Indoor Design Wet Bulb Temperature	**22ºC**
Cooling Load	**4.5 kW**
<Other>	
Indoor/Outdoor Equivalent Piping Length	**60 m**

1. Cooling Calculation

(1) Temporary Selection of Indoor Units

Room1

PEFY-P40 **4.5 kW (Rated)**

Room2

PEFY-P50 **5.6 kW (Rated)**

(2) Total Indoor Units Capacity

P40 + P50 = P90

(3) Selection of Outdoor Unit

The SP112 outdoor unit is selected as total indoor units capacity is P90

PUMY-SP112 **12.5 kW**

(4) Total Indoor Units Capacity Correction Calculation

Room1

Indoor Design Wet Bulb Temperature Correction (20ºC) 1.03 (Refer to Figure 1)

Room2

Indoor Design Wet Bulb Temperature Correction (22ºC) 1.09 (Refer to Figure 1)

Total Indoor Units Capacity (CT_i)

CT_i = Σ (Indoor Unit Rating × Indoor Design Temperature Correction)

= 4.5 × 1.03 + 5.6 × 1.09

= 10.7 kW

(5) Outdoor Unit Correction Calculation

Outdoor Design Dry Bulb Temperature Correction (44.7ºC) 0.88 (Refer to Figure 2)

Piping Length Correction (60 m) 0.94 (Refer to Figure 3)

Total Outdoor Unit Capacity (CT_o)

CT_o = Outdoor Rating × Outdoor Design Temperature Correction × Piping Length Correction

= 12.5 × 0.88 × 0.94

= 10.3 kW

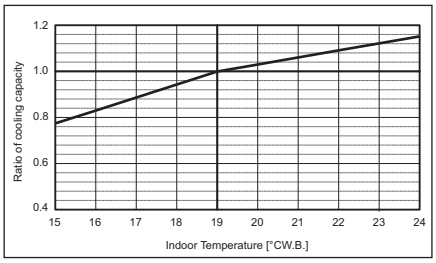

Figure 1 **Indoor unit temperature correction**
To be used to correct indoor unit only

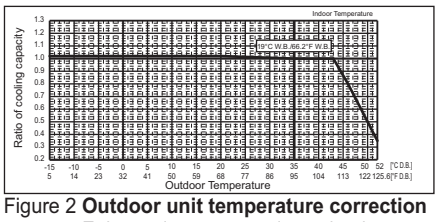

Figure 2 **Outdoor unit temperature correction**
To be used to correct outdoor unit only

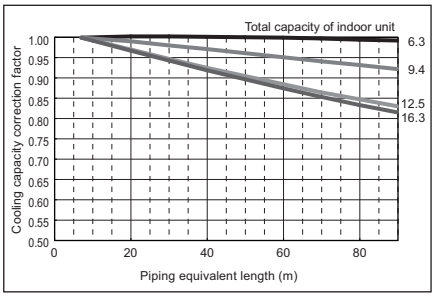

Figure 3 **Correction of refrigerant piping length**

(6) Determination of Maximum System Capacity

Comparison of Capacity between Total Indoor Units Capacity (CT_i) and Total Outdoor Unit Capacity (CT_o)

CT_i = 10.7 > CT_o = 10.3, thus, select CT_o.

CT_{max} = CT_o = 10.3 kW

(7) Comparison with Essential Load

Against the essential load 8.5 kW, the maximum system capacity is 10.3 kW: Proper outdoor units have been selected.

(8) Calculation of Maximum Indoor Unit Capacity of Each Room

CT_{max} = CT_o, thus, calculate by the calculation below

Room1

Maximum Capacity × Room1 Capacity after the Temperature Correction/(Room1,2 Total Capacity after the Temperature Correction

= 10.3 × (4.5 × 1.03)/(4.5 × 1.03 + 5.6 × 0.94)

= 4.4 kW **OK: fulfills the load 4.0 kW**

Room2

Maximum Capacity × Room2 Capacity after the Temperature Correction/(Room1,2 Total Capacity after the Temperature Correction)

= 10.3 × (5.6 × 0.94)/(4.5 × 1.03 + 5.6 × 0.94)

= 5.9 kW **OK: fulfills the load 4.5 kW**

Note: If CT_{max} = CT_i, please refer to the <Heating> section to calculate the Maximum Indoor Unit Capacity of Each Room.

Go on to the heating trial calculation since the selected units fulfill the cooling loads of Room 1, 2.

<Heating>

Design Condition	
Outdoor Design Wet Bulb Temperature	**2ºC**
Total Heating Load	**10.3 kW**
Room1	
Indoor Design Dry Bulb Temperature	**21ºC**
Heating Load	**4.8 kW**
Room2	
Indoor Design Dry Bulb Temperature	**23ºC**
Heating Load	**5.5 kW**
<Other>	
Indoor/Outdoor Equivalent Piping Length	**90 m**

2. Heating Calculation

(1) Temporary Selection of Indoor Units

Room1

PEFY-P40 **5.0 kW (Rated)**

Room2

PEFY-P50 **6.3 kW (Rated)**

(2) Total Indoor Units Capacity

P40 + P50 = P90

(3) Selection of Outdoor Unit

The P112 outdoor unit is selected as total indoor units capacity is P90

PUMY-SP112 **14.0 kW**

(4) Total Indoor Units Capacity Correction Calculation

Room1

Indoor Design Dry Bulb Temperature Correction (21ºC) 0.96 (Refer to Figure 4)

Room2

Indoor Design Dry Bulb Temperature Correction (23ºC) 0.88 (Refer to Figure 4)

Total Indoor Units Capacity (CT_i)

CT_i = Σ (Indoor Unit Rating × Indoor Design Temperature Correction)

= 5.0 × 0.96 + 6.3 × 0.88

= 10.3 kW

(5) Outdoor Unit Correction Calculation

Outdoor Design Wet Bulb Temperature Correction (2ºC) 1.0 (Refer to Figure 5)

Piping Length Correction (90 m) 0.95 (Refer to Figure 6)

Defrost Correction 0.89 (Refer to Table 1)

Total Outdoor Unit Capacity (CT_o)

CT_o = Outdoor Unit Rating × Outdoor Design Temperature Correction × Piping Length Correction × Defrost Correction

= 14.0 × 1.0 × 0.95 × 0.89

= 11.8 kW

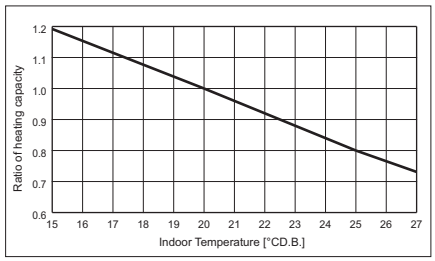

Figure 4 **Indoor unit temperature correction**
To be used to correct indoor unit only

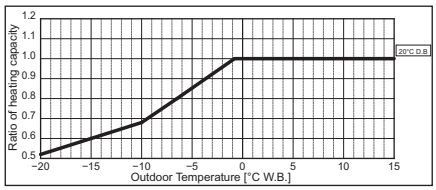

Figure 5 **Outdoor unit temperature correction**
To be used to correct outdoor unit only

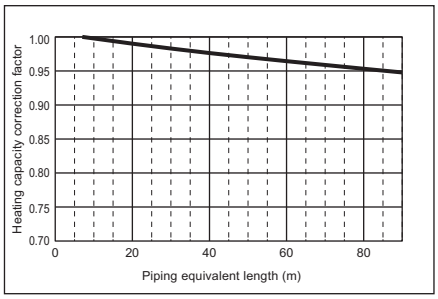

Figure 6 **Correction of refrigerant piping length**

(6) Determination of Maximum System Capacity

Comparison of Capacity between Total Indoor Units Capacity (CT_i) and Total Outdoor Unit Capacity (CT_o)

CT_i = 10.3 < CT_o = 11.8, thus, select CT_i.

CT_{max} = CT_i = 10.3 kW

(7) Comparison with Essential Load

Against the essential load 10.3 kW, the maximum system capacity is 10.3 kW: Proper indoor units have been selected.

(8) Calculation of Maximum Indoor Unit Capacity of Each Room

CT_{max} = CT_i, thus, calculate by the calculation below

Room1

Indoor Unit Rating × Indoor Design Temperature Correction

= 5.0 × 0.96

= 4.8 kW **OK: fulfills the load 4.8 kW**

Room2

Indoor Unit Rating × Indoor Design Temperature Correction

= 6.3× 0.88

= 5.5 kW **OK: fulfills the load 5.5 kW**

Table 1 Table of correction factor at frost and defrost

Outdoor inlet air temp. °C	6	4	2	0	−2	−4	−6	−8	−10	−15	−20
PUMY-SP112,125,140VKM	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95
PUMY-SP112,125,140YKM	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95

Note: If CT_{max} = CT_o, please refer to the <Cooling> section to calculate the Maximum Indoor Unit Capacity of Each Room.
Completed selecting units since the selected units fulfill the heating loads of Room 1, 2.

3. Power input of outdoor unit

<Cooling>

(1) Rated power input of outdoor unit **3.10 kW**

(2) Calculation of the average indoor temperature power input coefficient

Coefficient of the outdoor unit for indoor unit 1 (Outdoor temp. 44.7 °CD.B., Indoor temp. 20 °CW.B.)
1.15

Coefficient of the outdoor unit for indoor unit 2 (Outdoor temp. 44.7 °CD.B., Indoor temp. 22 °CW.B.)
1.13

Average indoor temp. power input coefficient (C_{ave}) = $\sum_{k=1}^{n}\{c_k \times (M_k / \sum_{k=1}^{n} M_k)\}$

n: Total number of the indoor units
k: Number of the indoor unit
c_k: Outdoor unit power input coefficient of k indoor unit room temp.
M_k: Number part of the k indoor unit model (e.g. P80 → 80)

= 1.15 × 40/(40 + 50) + 1.13 × 50/(40 + 50)
= 1.14

(3) No need to consider Coefficient of the partial load f (CT_i) **-**

(4) Outdoor power input (PI_o)

Maximum System Capacity (CT_{max}) = Total Outdoor unit Capacity (CT_o), so use the following formula
PI_o = Outdoor unit Cooling Rated Power Input × C_{ave}
=3.10 × 1.14
= 3.53 kW

<Heating>

(1) Rated power input of outdoor unit **3.17 kW**

(2) Calculation of the average indoor temperature power input coefficient

Coefficient of the outdoor unit for indoor unit 1 (Outdoor temp. 2 °CW.B., Indoor temp. 21 °CD.B.)
1.12

Coefficient of the outdoor unit for indoor unit 2 (Outdoor temp. 2 °CW.B., Indoor temp. 22 °CD.B.)
1.0

Average indoor temp. power input coefficient (C_{ave}) = $\sum_{k=1}^{n} \{c_k \times (M_k / \sum_{k=1}^{n} M_k)\}$

n: Total number of the indoor units
k: Number of the indoor unit
c_k: Outdoor unit power input coefficient of k indoor unit room temp.
M_k: Number part of the k indoor unit model (e.g. P80 → 80)

= 1.12 × 40/(40 + 50) + 1.0 × 50/(40 + 50)
= 1.05

(3) Coefficient of the partial load $f(CT_i)$ **0.89**

(4) Outdoor power input (PI_o)

Maximum System Capacity (CT_{max}) = Total Indoor unit Capacity (CT_i), so use the following formula
PI_o = Outdoor unit Heating Rated Power Input × C_{ave} × $f(CT_i)$
= 3.17 × 1.05 × 0.89
= 2.96 kW

7-2. Correction by temperature

CITY MULTI could have varied capacity at different designing temperature. Using the nominal cooling/heating capacity value and the ratio below, the capacity can be observed at various temperature.

<Cooling>

PUMY-		SP112VKM	SP125VKM
Nominal Cooling Capacity	kW	12.5	14.0
	BTU/h	42,650	47,768
Input	kW	3.10	3.84

PUMY-		SP112YKM	SP125YKM
Nominal Cooling Capacity	kW	12.5	14.0
	BTU/h	42,650	47,768
Input	kW	3.10	3.84

Indoor unit temperature correction

To be used to correct indoor unit capacity only

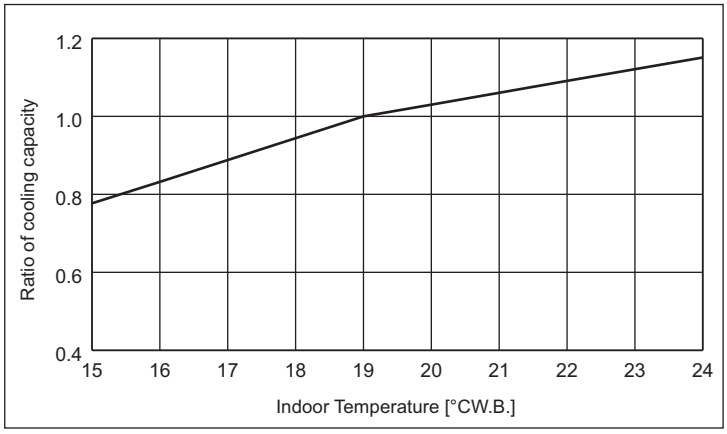

Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.
Outdoor unit power input is affected by the indoor and outdoor temperatures. Please consult the sales office for details.

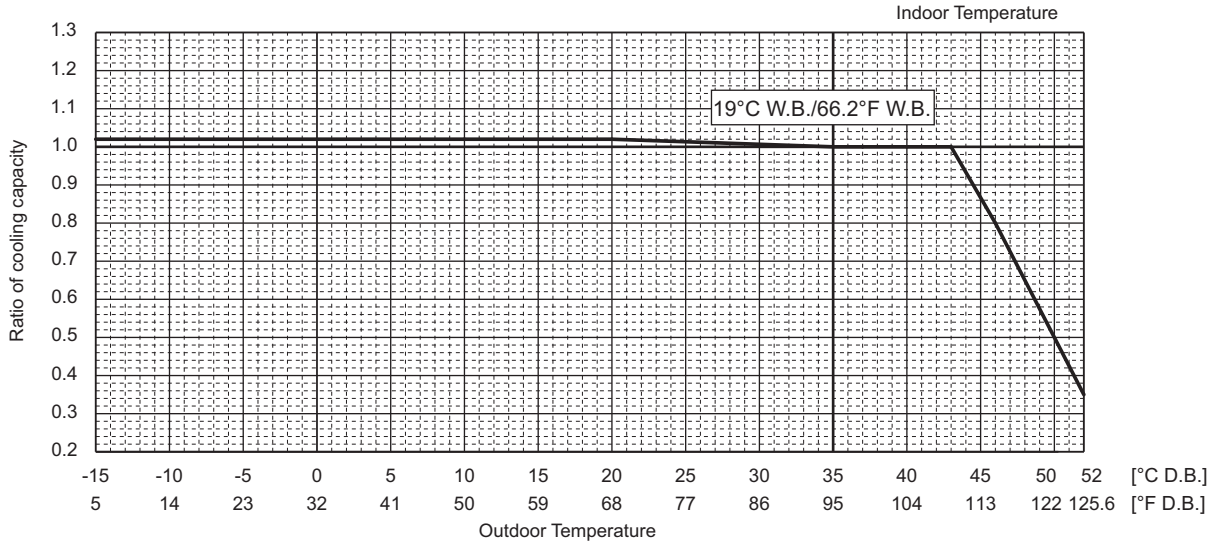

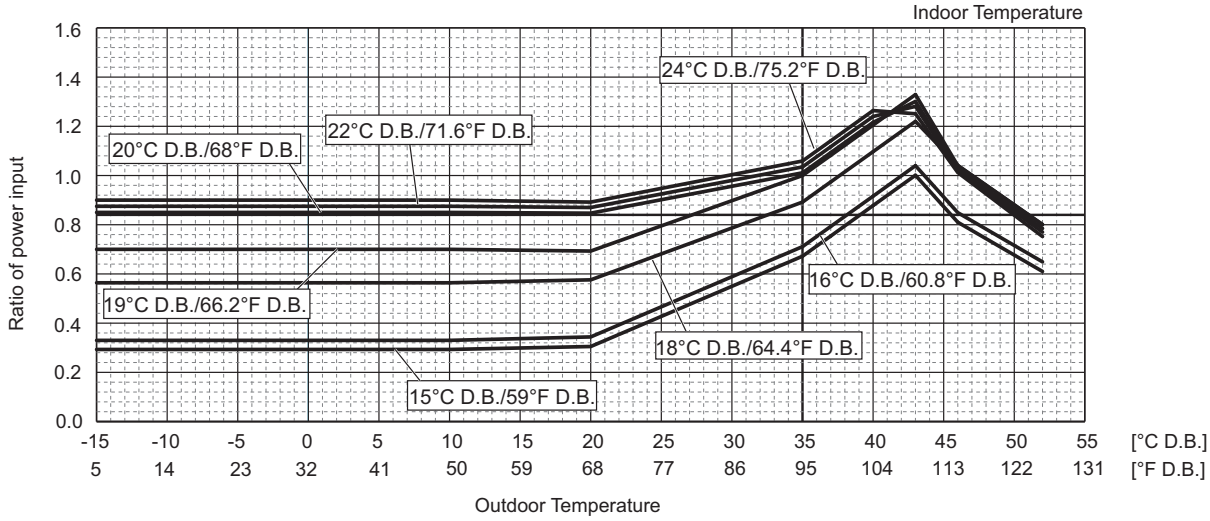

<Heating>

PUMY-		SP112VKM	SP125VKM
Nominal Heating Capacity	kW	14.0	16.0
	BTU/h	47,768	54,592
Input	kW	3.17	3.90

PUMY-		SP112YKM	SP125YKM
Nominal Heating Capacity	kW	14.0	16.0
	BTU/h	47,768	54,592
Input	kW	3.17	3.90

Indoor unit temperature correction

To be used to correct indoor unit capacity only

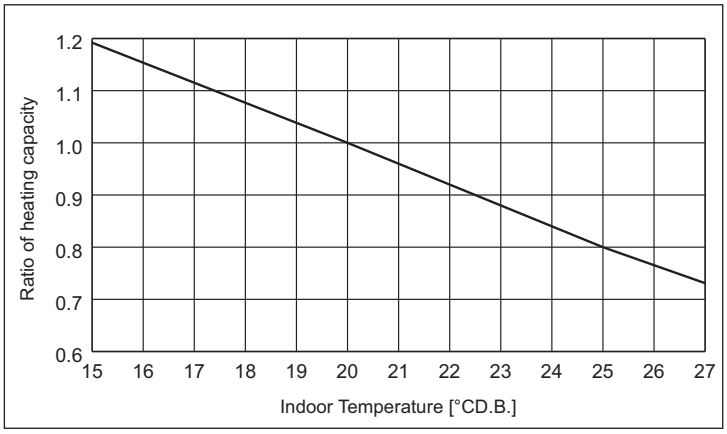

Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.
Outdoor unit power input is affected by the indoor and outdoor temperatures. Please consult the sales office for details.

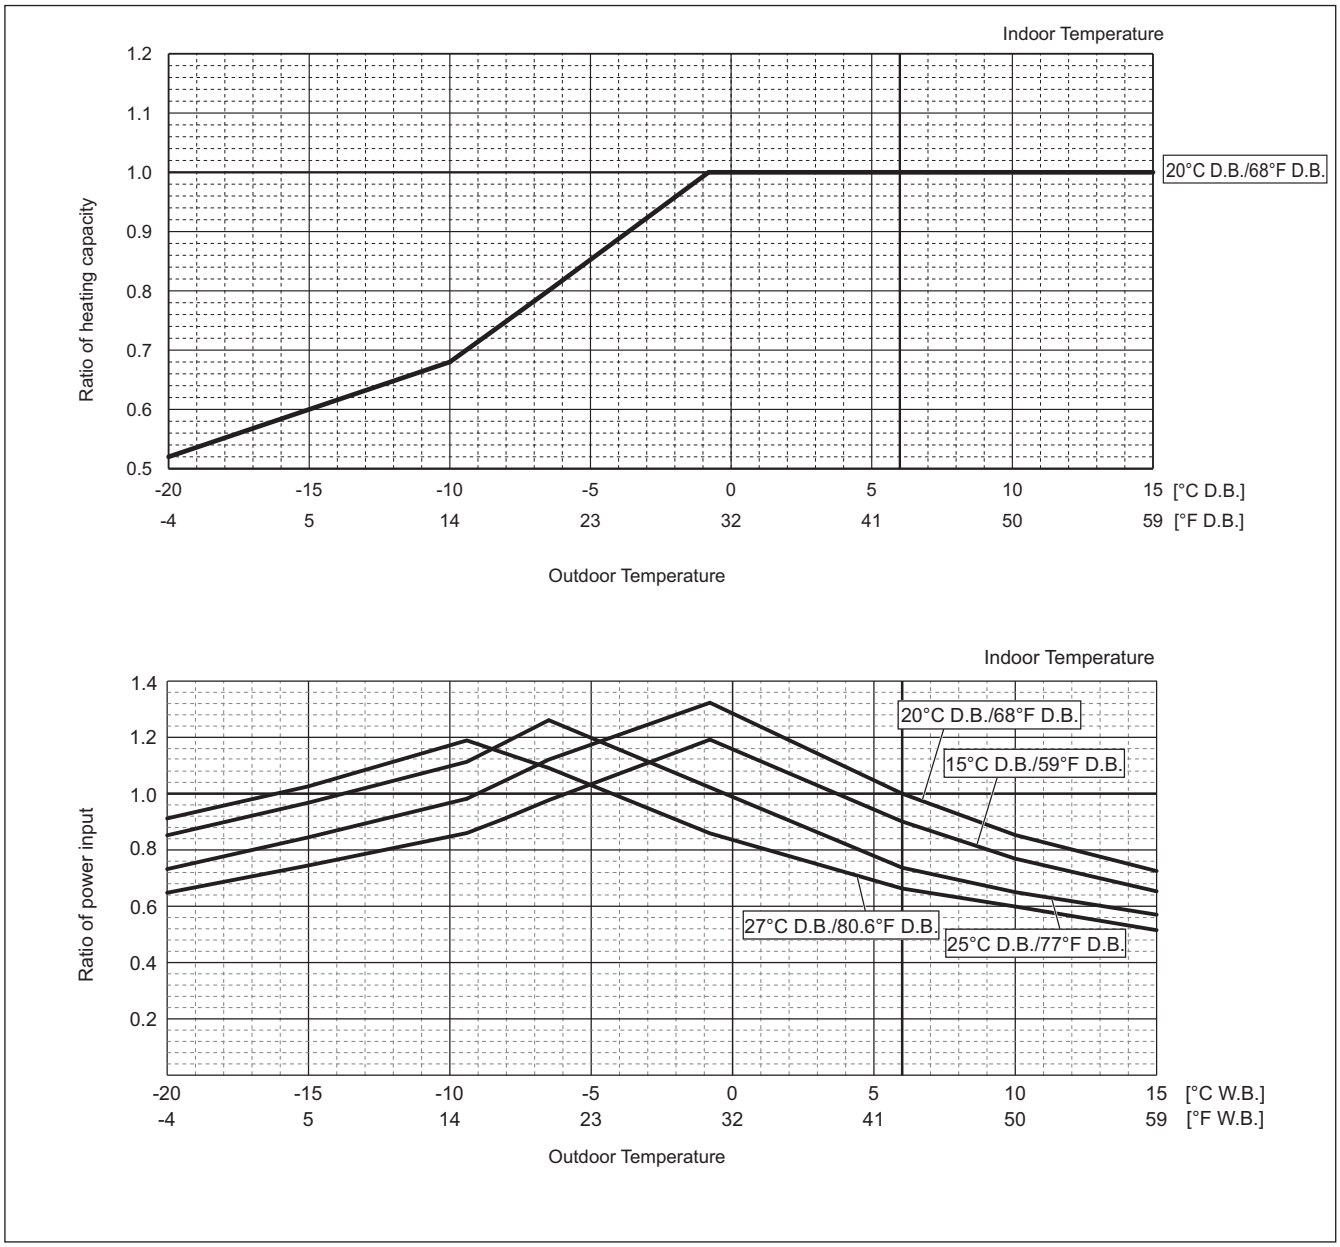

<Cooling>

PUMY-		SP140VKM
Nominal Cooling Capacity	kW	15.5
	BTU/h	52,886
Input	kW	4.70

PUMY-		SP140YKM
Nominal Cooling Capacity	kW	15.5
	BTU/h	52,886
Input	kW	4.70

Indoor unit temperature correction

To be used to correct indoor unit capacity only

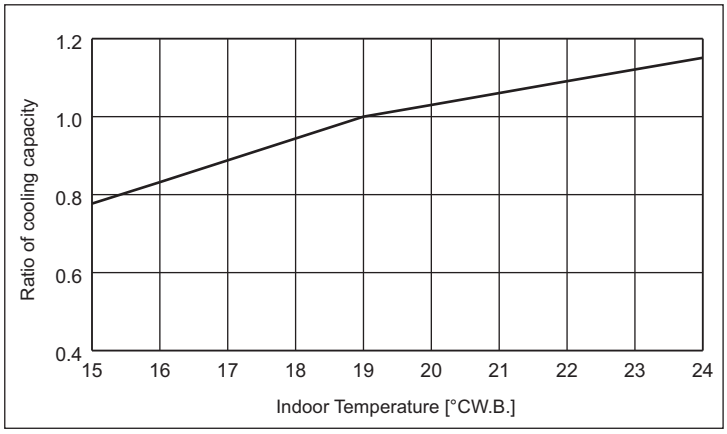

Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.
Outdoor unit power input is affected by the indoor and outdoor temperatures. Please consult the sales office for details.

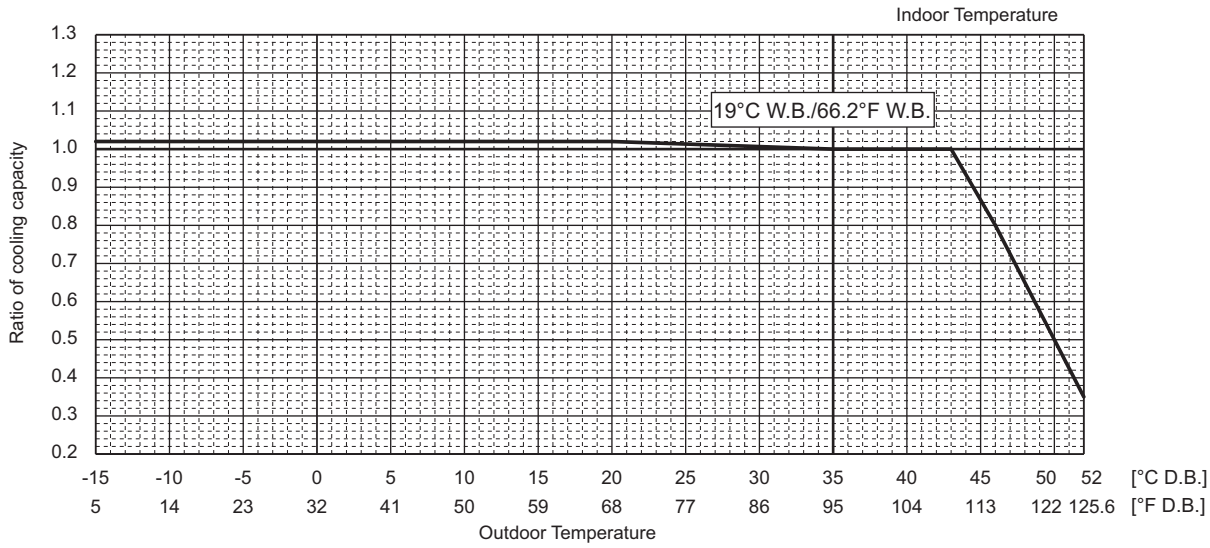

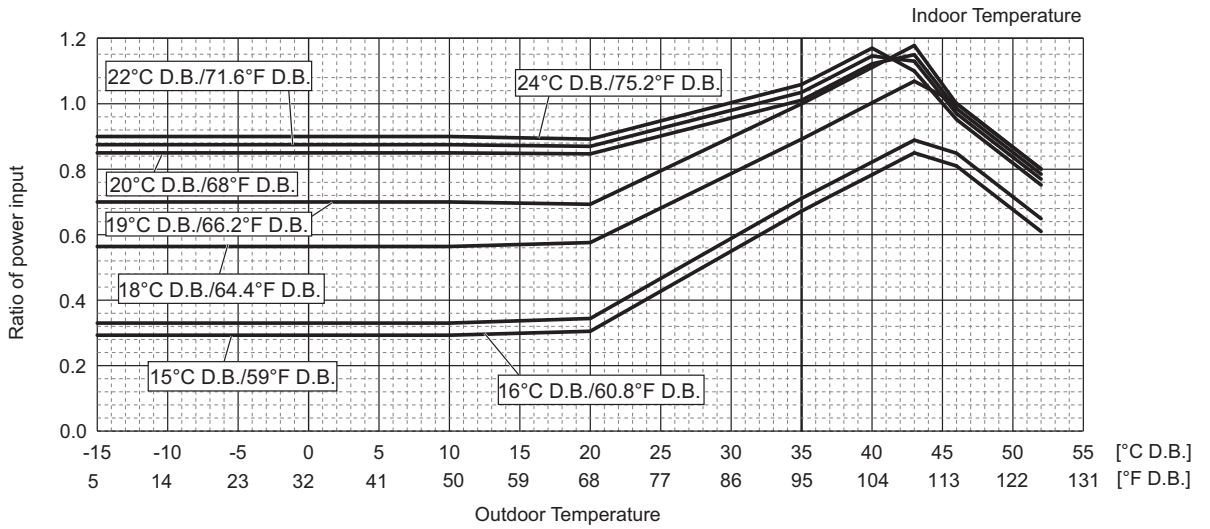

<Heating>

PUMY-		SP140VKM
Nominal Heating Capacity	kW	16.5
	BTU/h	56,298
Input	kW	4.02

PUMY-		SP140YKM
Nominal Heating Capacity	kW	16.5
	BTU/h	56,298
Input	kW	4.02

Indoor unit temperature correction

To be used to correct indoor unit capacity only

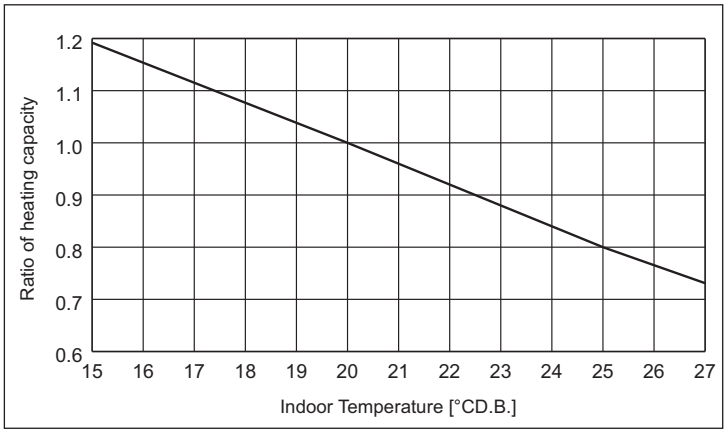

Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.
Outdoor unit power input is affected by the indoor and outdoor temperatures. Please consult the sales office for details.

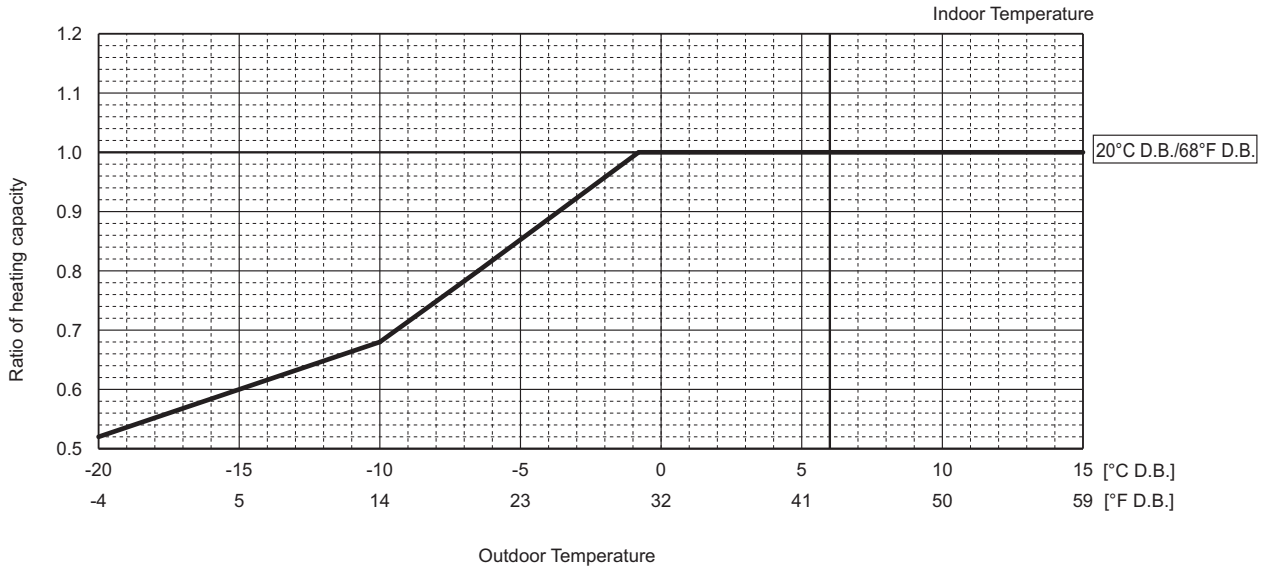

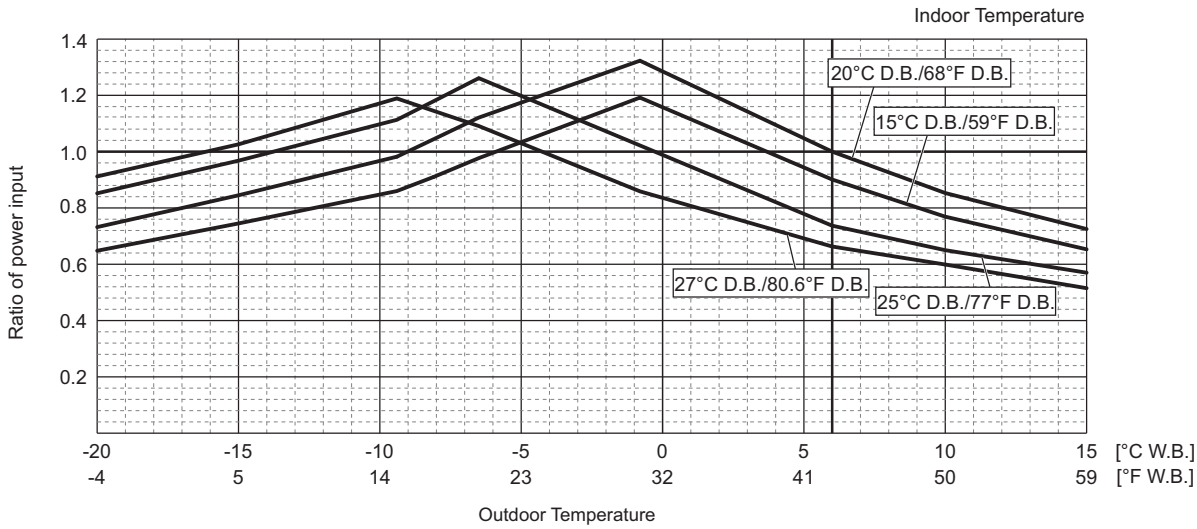

<Cooling>

PUMY-		P112VKM4	P125VKM4	P140VKM4
Nominal Cooling Capacity	kW	12.5	14.0	15.5
	BTU/h	42,650	47,768	52,886
Input	kW	2.79	3.46	4.52

PUMY-		P112YKM(E)4	P125YKM(E)4	P140YKM(E)4
Nominal Cooling Capacity	kW	12.5	14.0	15.5
	BTU/h	42,650	47,768	52,886
Input	kW	2.79	3.46	4.52

Indoor unit temperature correction

To be used to correct indoor unit capacity only

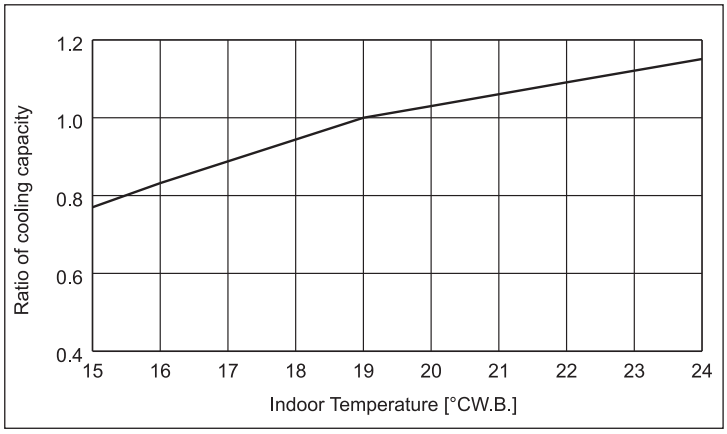

Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.
Outdoor unit power input is affected by the indoor and outdoor temperatures. Please consult the sales office for details.

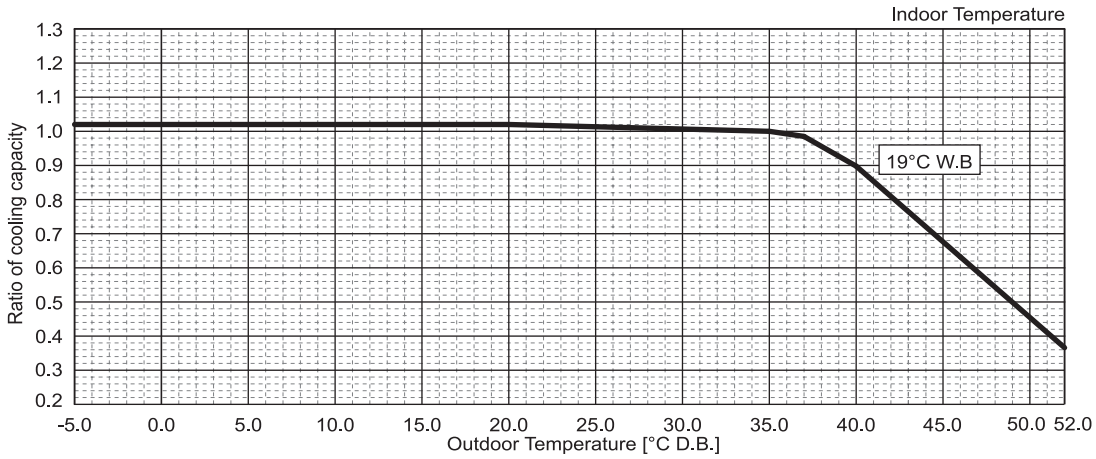

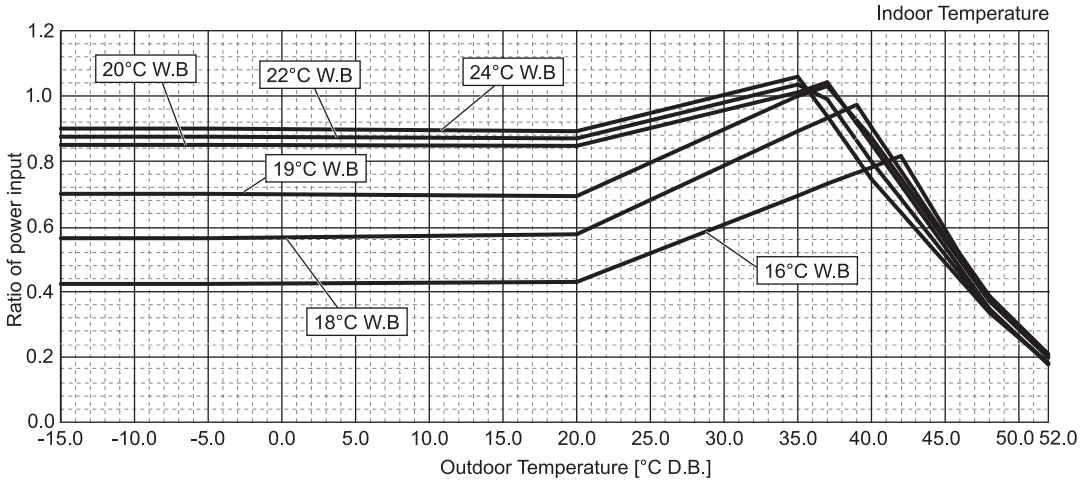

<Heating>

PUMY-		P112VKM4	P125VKM4	P140VKM4
Nominal Heating Capacity	kW	14.0	16.0	18.0
	BTU/h	47,768	54,592	61,416
Input	kW	3.04	3.74	4.47

PUMY-		P112YKM(E)4	P125YKM(E)4	P140YKM(E)4
Nominal Heating Capacity	kW	14.0	16.0	18.0
	BTU/h	47,768	54,592	61,416
Input	kW	3.04	3.74	4.47

Indoor unit temperature correction

To be used to correct indoor unit capacity only

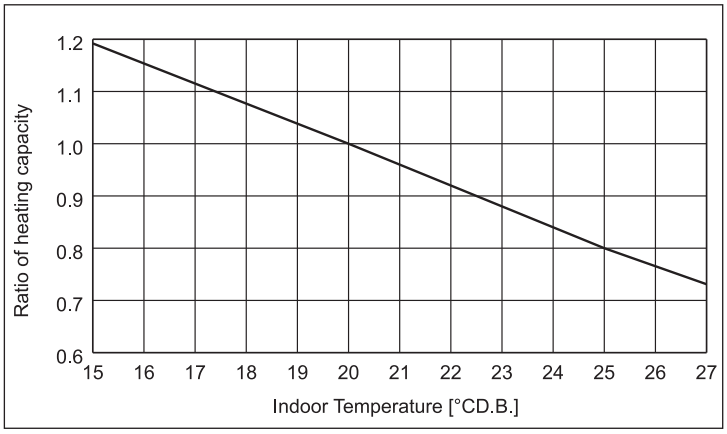

Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.
Outdoor unit power input is affected by the indoor and outdoor temperatures. Please consult the sales office for details.

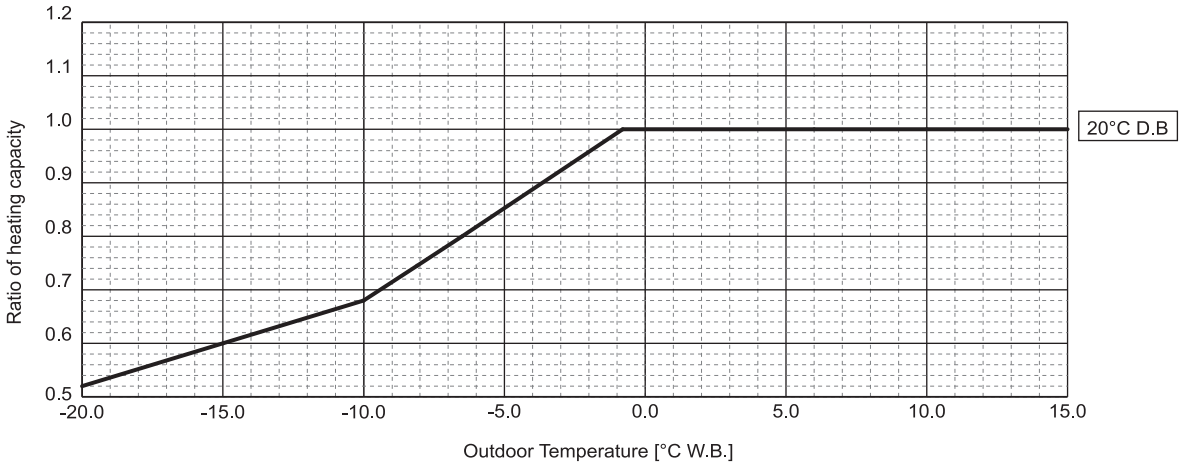

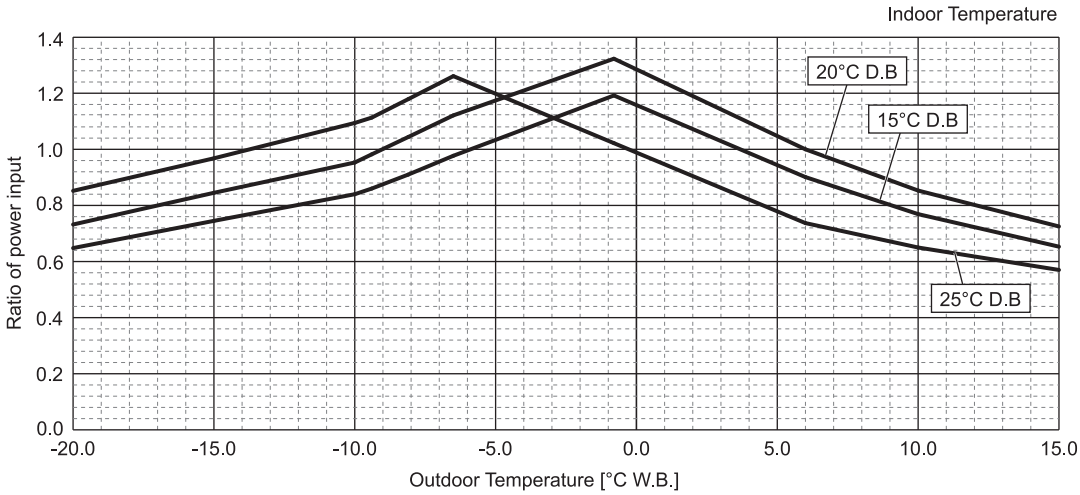

<Cooling>

PUMY-		P200YKM2
Nominal Cooling Capacity	kW	22.4
	BTU/h	76,400
Input	kW	6.05

Indoor unit temperature correction

To be used to correct indoor unit capacity only

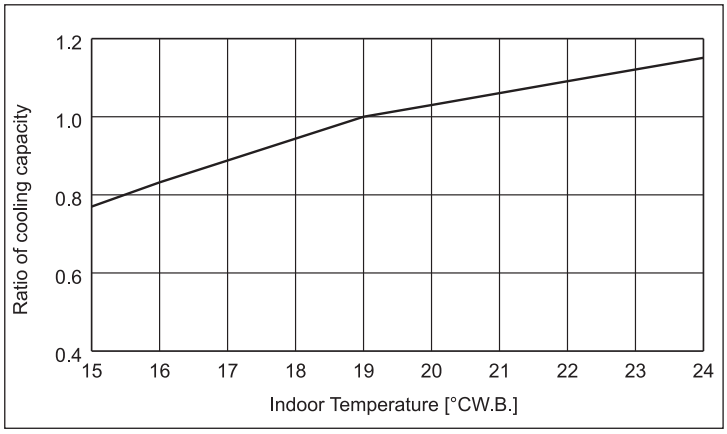

Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.
Outdoor unit power input is affected by the indoor and outdoor temperatures. Please consult the sales office for details.

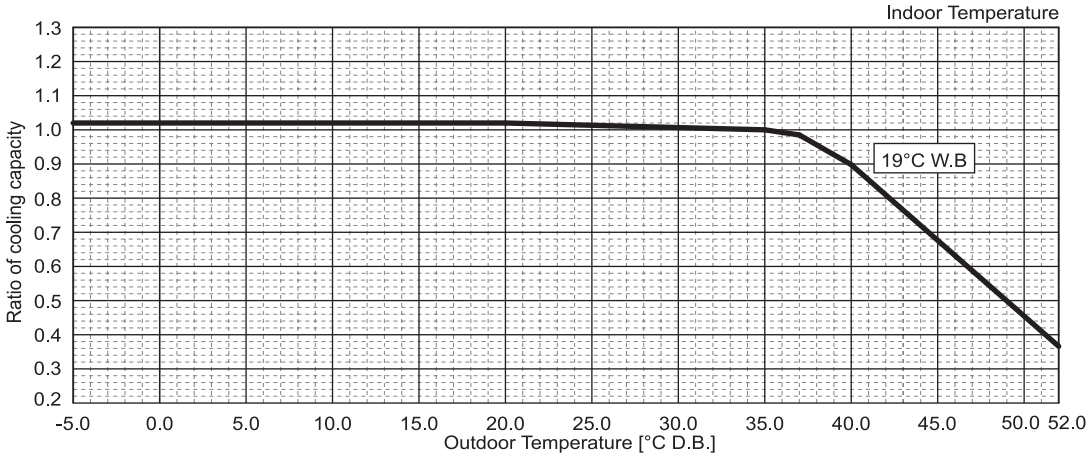

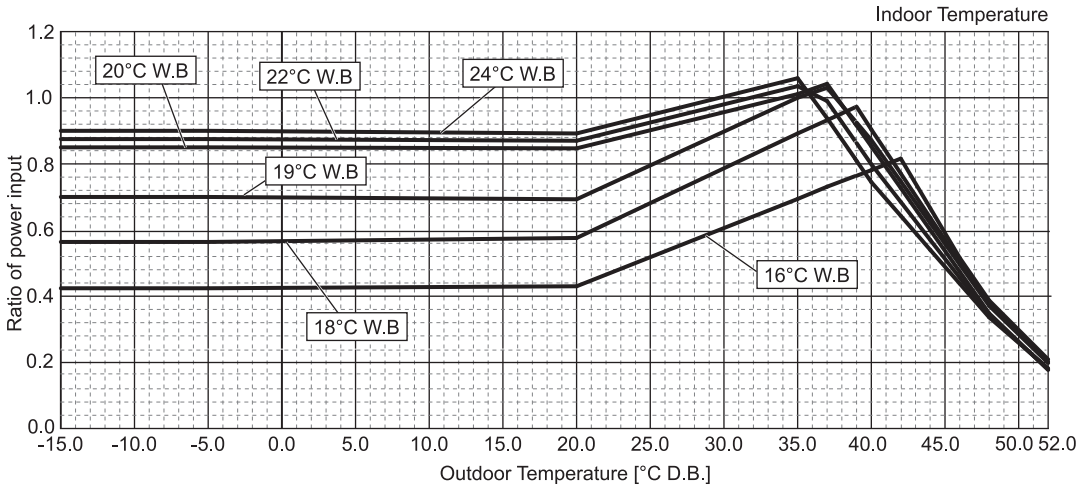

<Heating>

PUMY-		P200YKM2
Nominal Heating Capacity	kW	25.0
	BTU/h	85,300
Input	kW	5.84

Indoor unit temperature correction

To be used to correct indoor unit capacity only

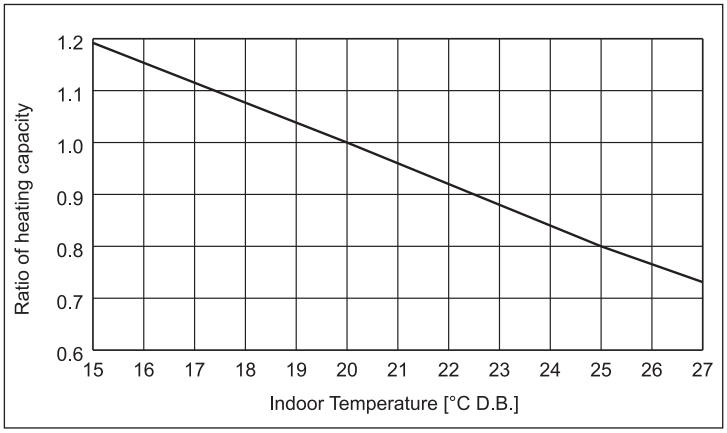

Outdoor unit temperature correction

To be used to correct outdoor unit only

Outdoor unit capacity is NOT affected by the indoor temperature.
Outdoor unit power input is affected by the indoor and outdoor temperatures. Please consult the sales office for details.

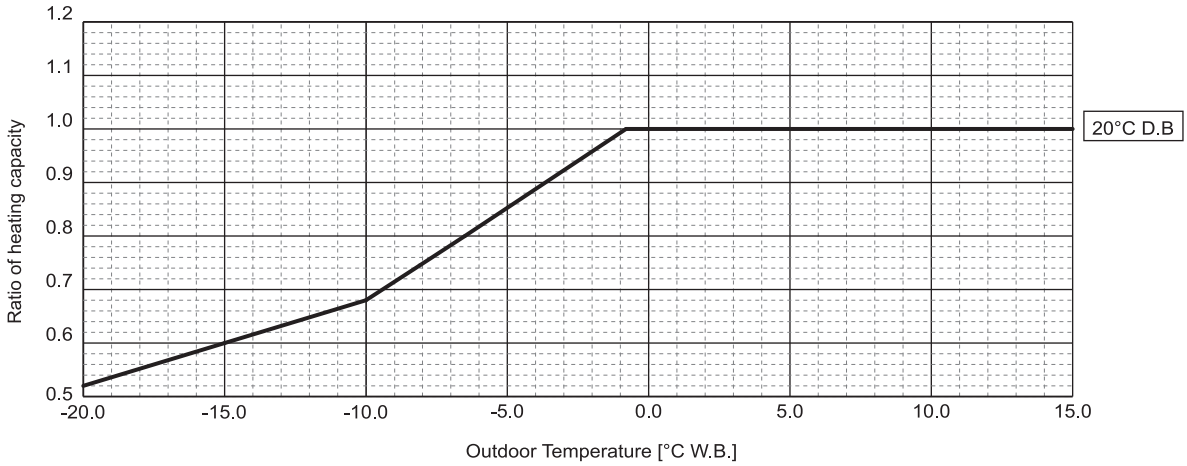

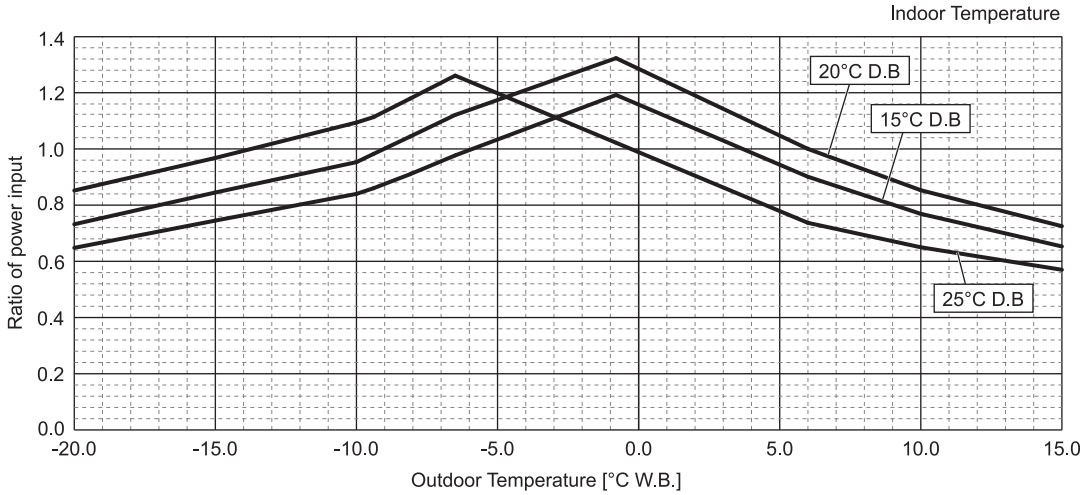

7-3. Correction by total indoor

CITY MULTI system has different capacities and inputs when many combinations of indoor units with different total capacities are connected. Using following tables, the maximum capacity can be found to ensure the system is installed with enough capacity for a particular application.

PUMY-SP112VKM/YKM		
Nominal Cooling Capacity	kW	12.5
	BTU/h	42,650
Input	kW	3.10

PUMY-SP112VKM/YKM		
Nominal Heating Capacity	kW	14.0
	BTU/h	47,768
Input	kW	3.17

PUMY-SP112VKM/YKM

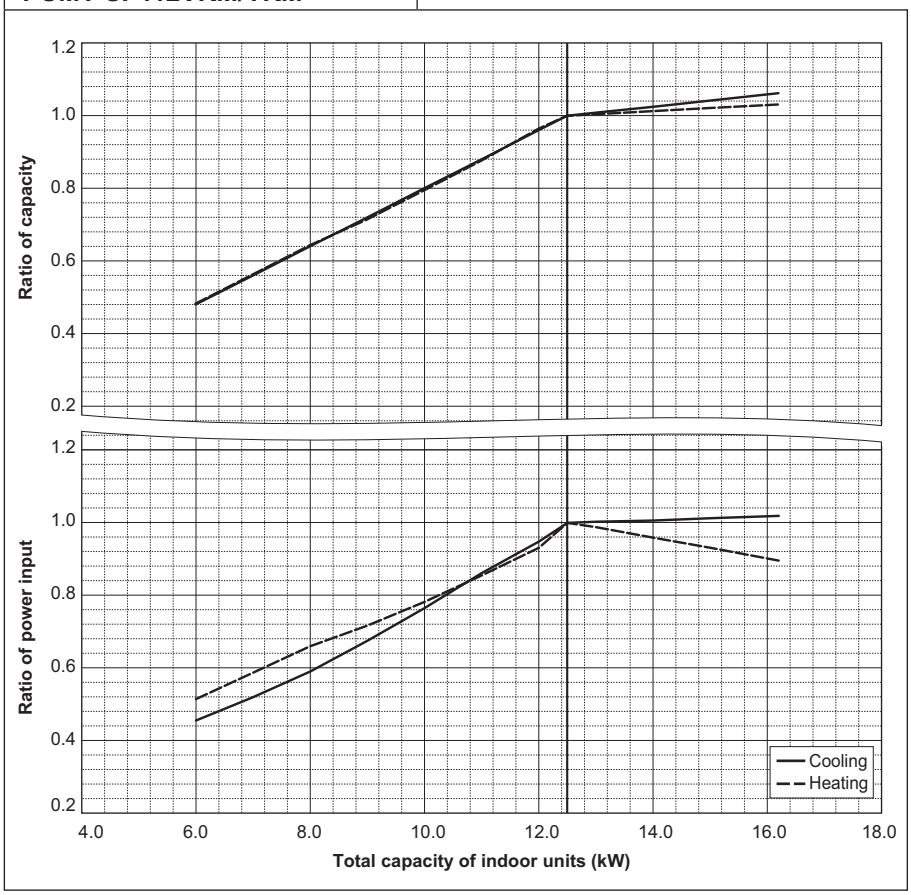

PUMY-SP125VKM/YKM		
Nominal Cooling Capacity	kW	14.0
	BTU/h	47,768
Input	kW	3.84

PUMY-SP125VKM/YKM		
Nominal Heating Capacity	kW	16.0
	BTU/h	54,592
Input	kW	3.90

PUMY-SP125VKM/YKM

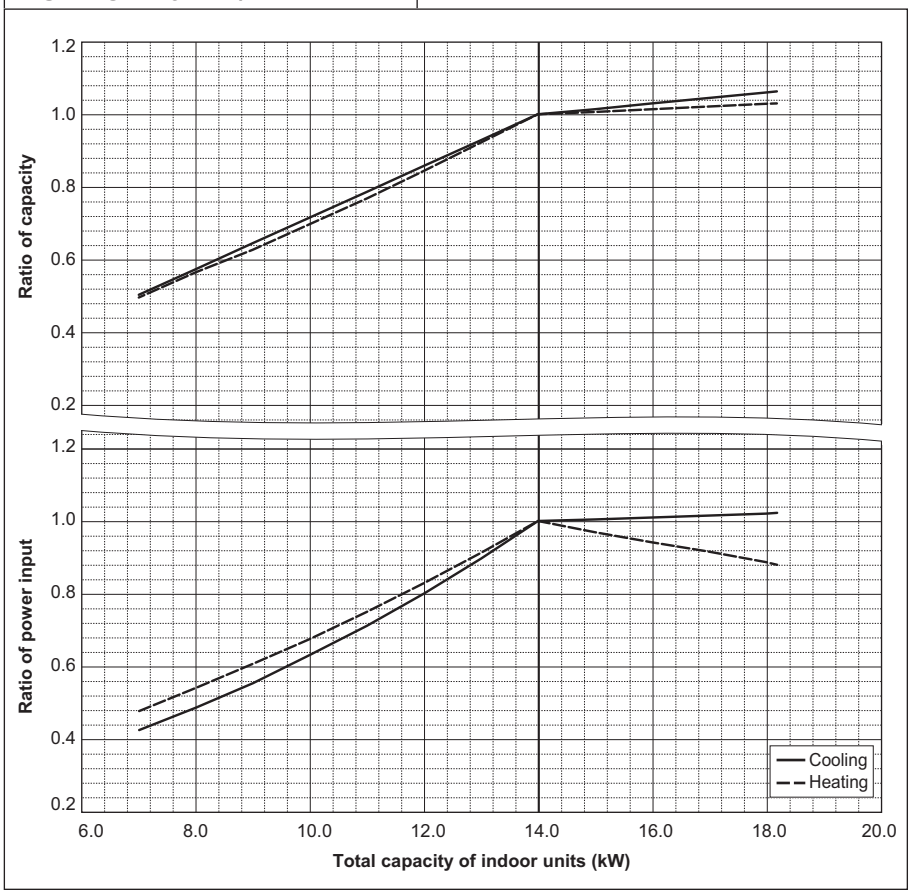

PUMY-SP140VKM/YKM		
Nominal Cooling Capacity	kW	15.5
	BTU/h	52,886
Input	kW	4.70

PUMY-SP140VKM/YKM		
Nominal Heating Capacity	kW	16.5
	BTU/h	56,298
Input	kW	4.02

PUMY-SP140VKM/YKM

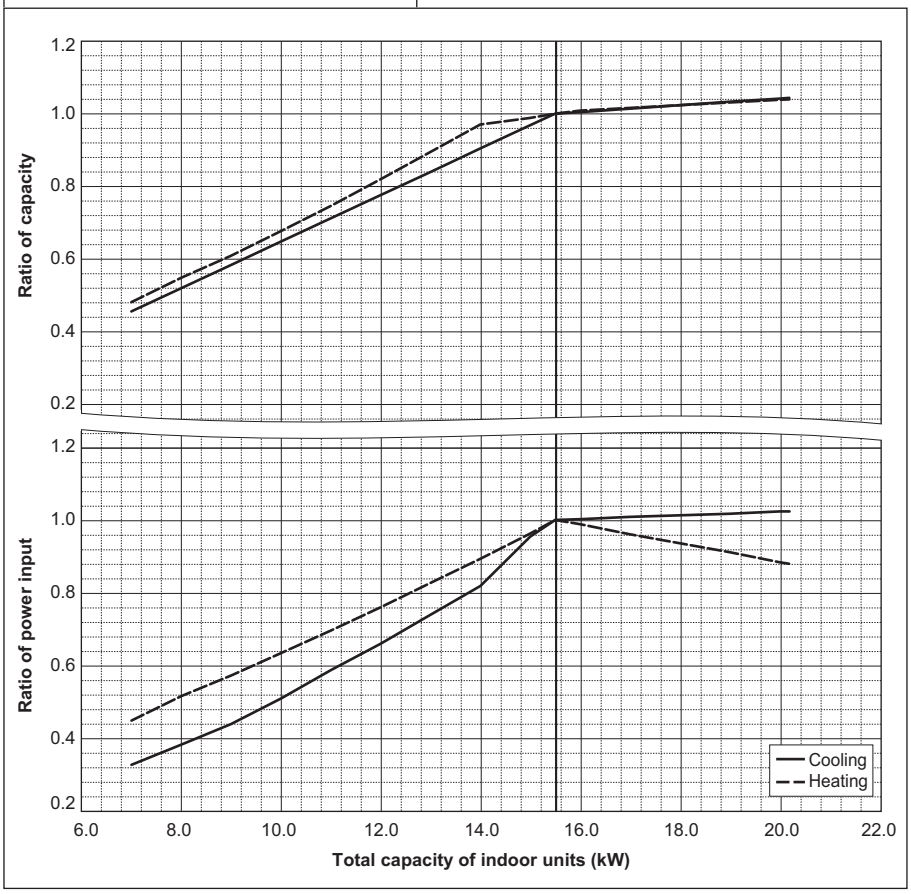

PUMY-P112VKM4/YKM(E)4		
Nominal Cooling Capacity	kW	12.5
	BTU/h	42,650
Input	kW	2.79

PUMY-P112VKM4/YKM(E)4		
Nominal Heating Capacity	kW	14.0
	BTU/h	47,768
Input	kW	3.04

PUMY-P112VKM4/YKM(E)4

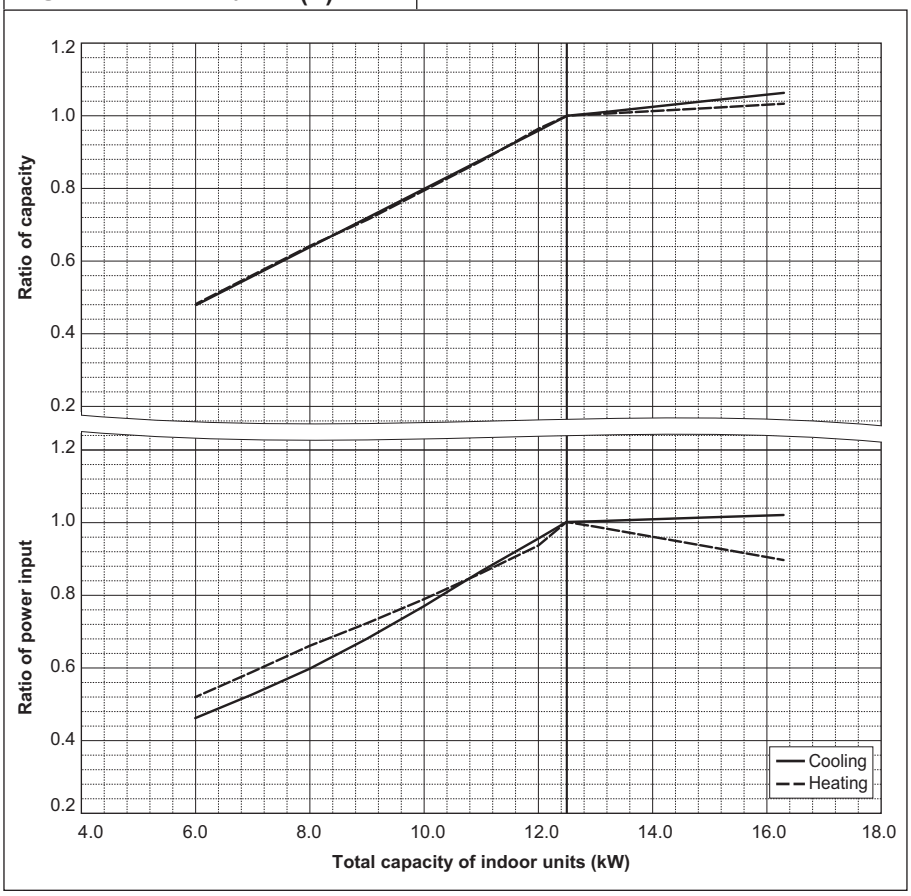

PUMY-P125VKM4/YKM(E)4		
Nominal Cooling Capacity	kW	14.0
	BTU/h	47,768
Input	kW	3.46

PUMY-P125VKM4/YKM(E)4		
Nominal Heating Capacity	kW	16.0
	BTU/h	54,592
Input	kW	3.74

PUMY-P125VKM4/YKM(E)4

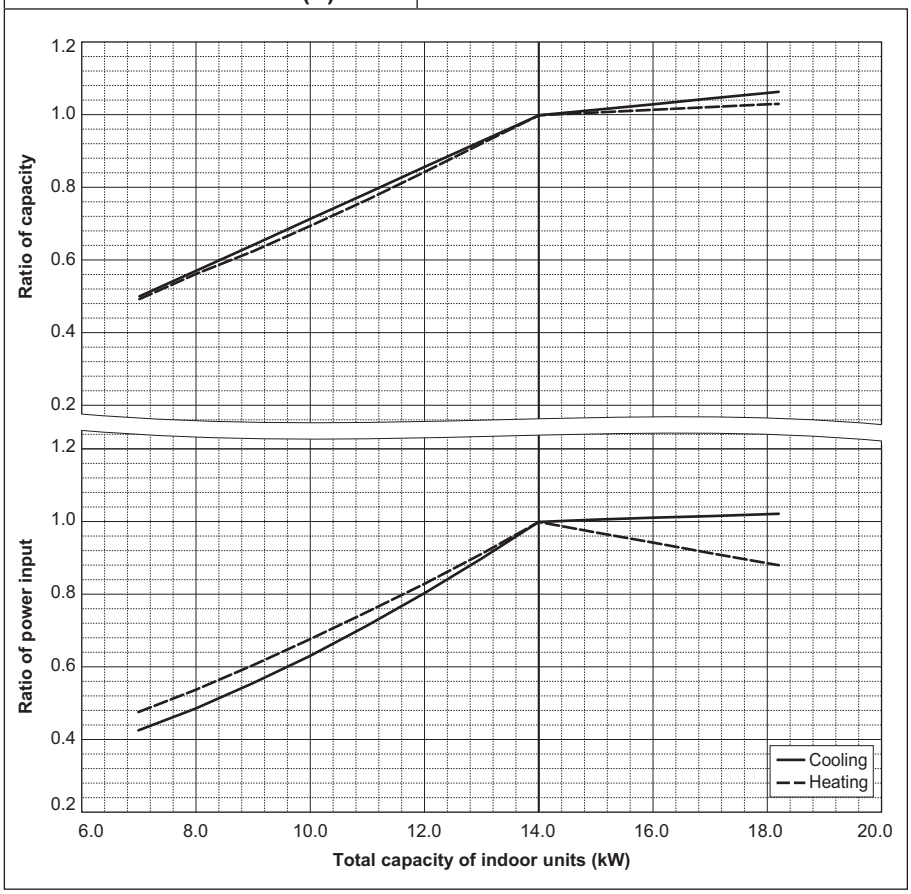

PUMY-P140VKM4/YKM(E)4		
Nominal Cooling Capacity	kW	15.5
	BTU/h	52,886
Input	kW	4.52

PUMY-P140VKM4/YKM(E)4		
Nominal Heating Capacity	kW	18.0
	BTU/h	61,416
Input	kW	4.47

PUMY-P140VKM4/YKM(E)4

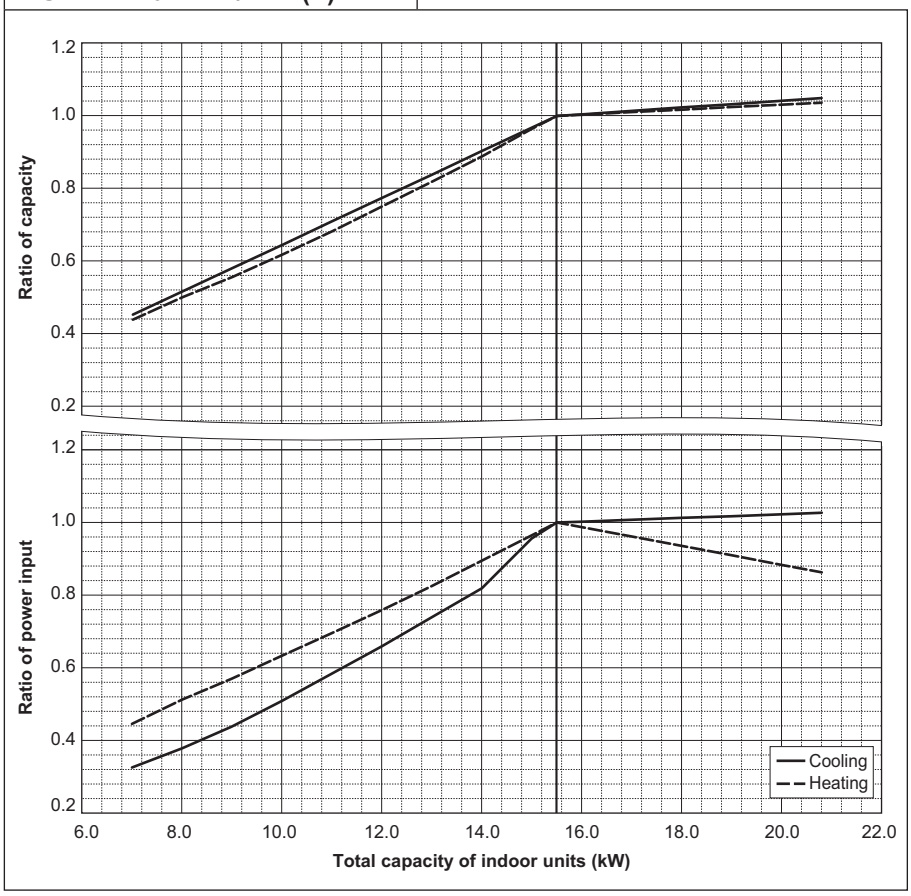

PUMY-P200YKM2		
Nominal Cooling Capacity	kW	22.4
	BTU/h	76,400
Input	kW	6.05

PUMY-P200YKM2		
Nominal Heating Capacity	kW	25.0
	BTU/h	85,300
Input	kW	5.84

PUMY-P200YKM2

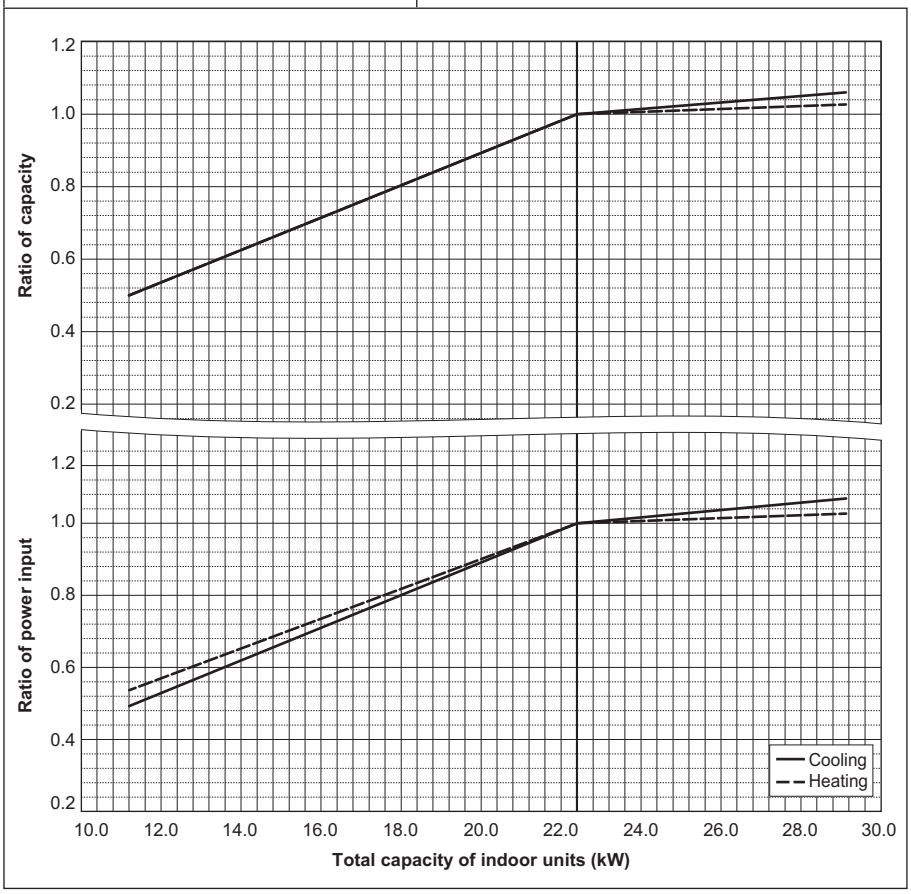

7-4. Correction by refrigerant piping length

CITY MULTI systems can have extended piping lengths if certain limitations are followed, but cooling/heating capacity could be reduced. Using following correction factor by equivalent piping length shown at 7-4-1 and 7-4-2, capacity can be found.
7-4-3 shows how to obtain the equivalent piping length.

7-4-1. Cooling capacity correction

PUMY-SP112VKM, YKM

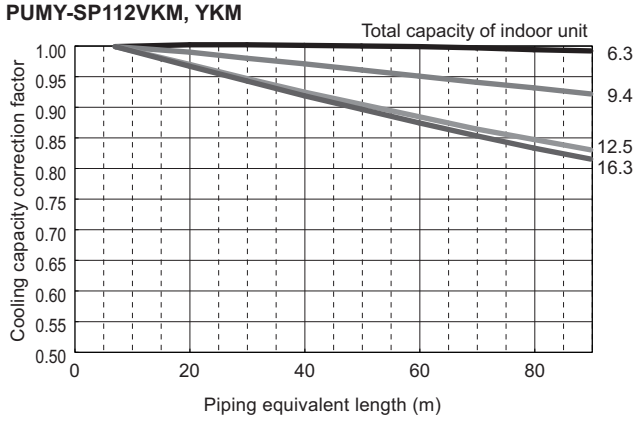

PUMY-SP140VKM, YKM

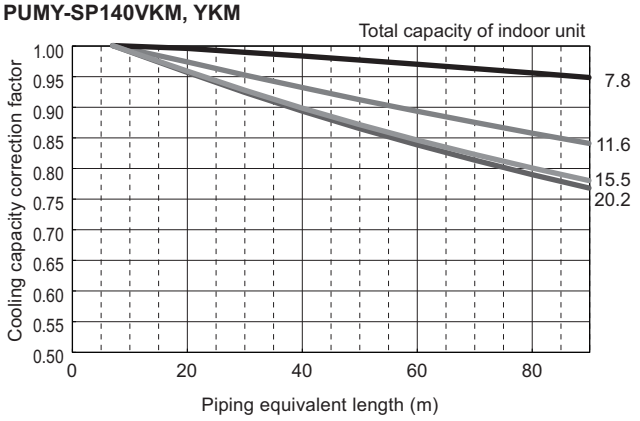

PUMY-SP125VKM, YKM

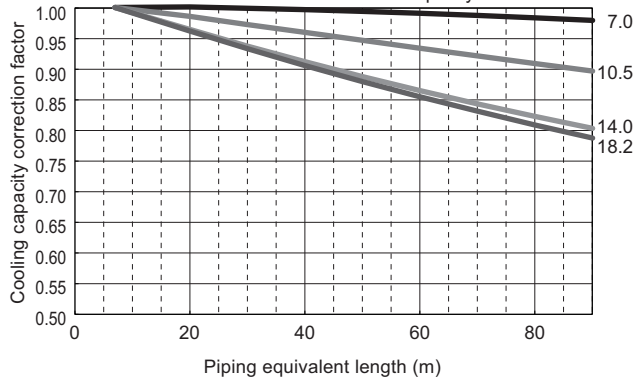

PUMY-P112VKM4, YKM(E)4

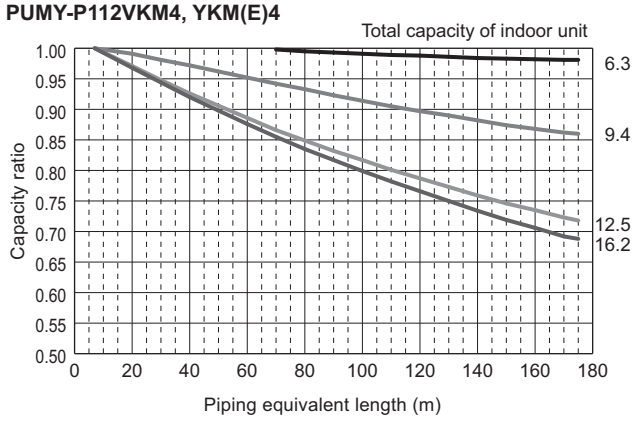

PUMY-P140VKM4, YKM(E)4

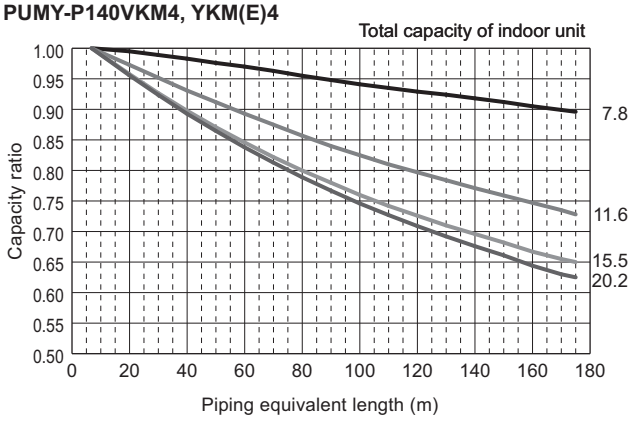

PUMY-P125VKM4, YKM(E)4

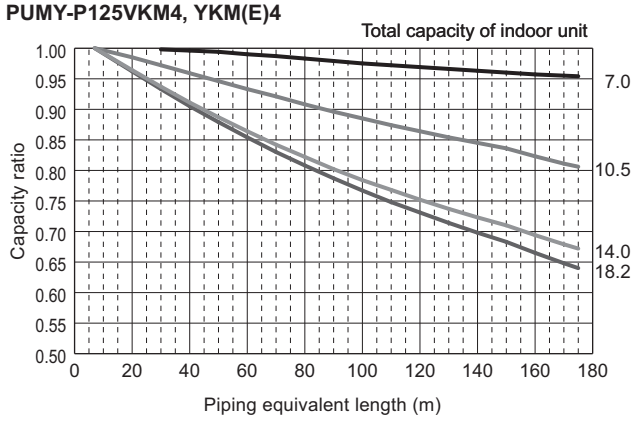

PUMY-P200YKM2

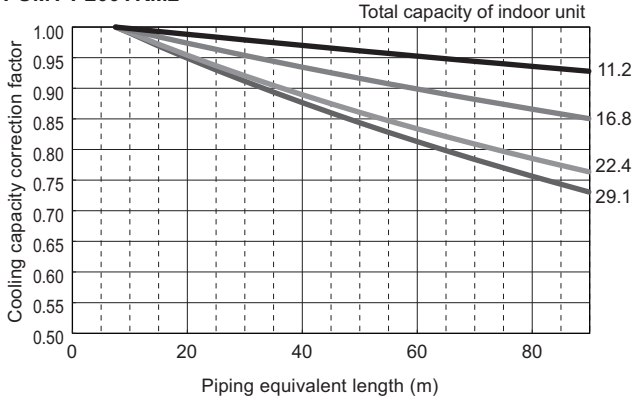

7-4-2. Heating capacity correction

PUMY-SP112, 125, 140VKM, YKM

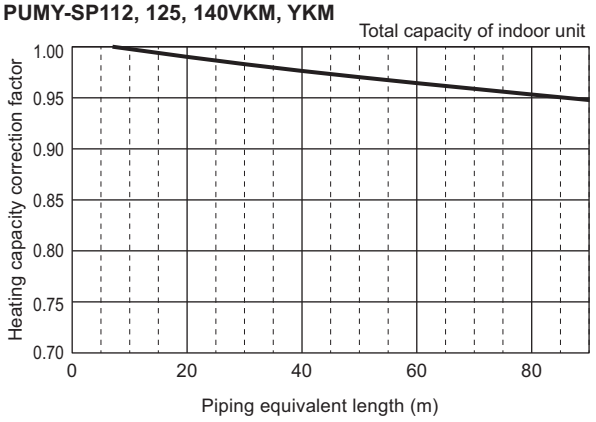

PUMY-P112, 125, 140VKM4, YKM(E)4

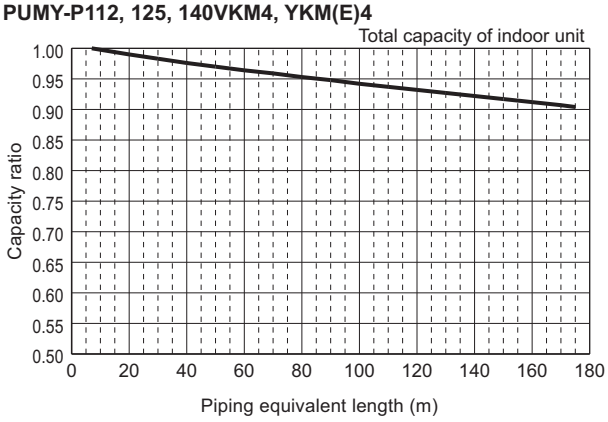

PUMY-P200YKM2

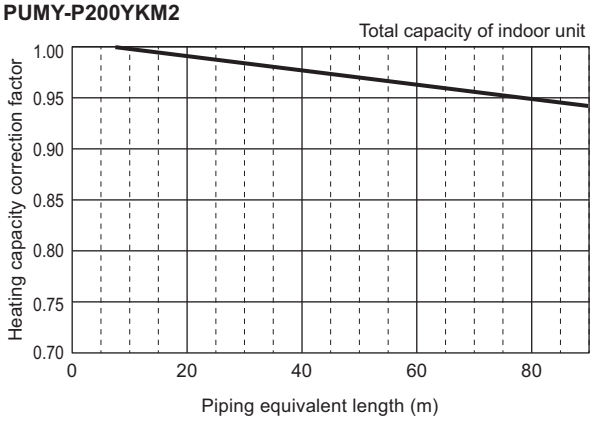

7-4-3. How to obtain the equivalent piping length

Equivalent length = (Actual piping length to the farthest indoor unit) + (0.30 x number of bends on the piping) m

7-5. Correction at frost and defrost

Due to frost at the outdoor heat exchanger and the automatical defrosting operation, the heating capacity of the outdoor unit should be considered by multiplying the correction factor which shown in the table below.

Table of correction factor at frosting and defrosting

Outdoor inlet air temp. °CWB	6	4	2	0	-2	-4	-6	-8	-10	-15	-20
Outdoor inlet air temp. °FWB	43	39	36	32	28	25	21	18	14	-5	-4
PUMY-SP112,125,140VKM,YKM	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95
PUMY-P112,125,140VKM4	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95
PUMY-P112,125,140YKM(E)4	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95
PUMY-P200YKM2	1.0	0.98	0.89	0.88	0.89	0.90	0.95	0.95	0.95	0.95	0.95

8-1. JOINT

CITY MULTI units can be easily connected by using Joint sets and Header sets provided by Mitsubishi Electric. One kind of Joint sets are available for use. Refer to section "Piping Design" or the Installation Manual that comes with the Joint set for how to install the Joint set.

CMY-Y62-G-E

mm

1. Specification

Items		Details
Main	Number of ports	2 ports
	Number of branch joints	One for each liquid and gas pipe
	Pipe material	Phosphorus deoxidized copper C1220T-OL (JIS H3300)
Accessory	Insulation material	Foamed polyethylene (one for each liquid and gas pipe)
	Reducer	10 reducers of 7 types (Refer to the external drawing for details.)

2. External drawing

For liquid pipe:

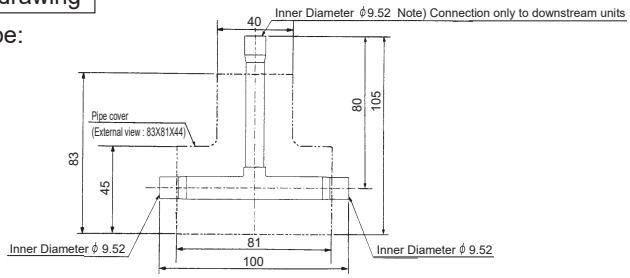

Reducer (Accessory):



A (Inner Diameter)	B (Outer Diameter)	Number of reducers
ϕ 12.7	ϕ 9.52	2
ϕ 19.05	ϕ 15.88	1
ϕ 22.22	ϕ 19.05	1

For gas pipe:

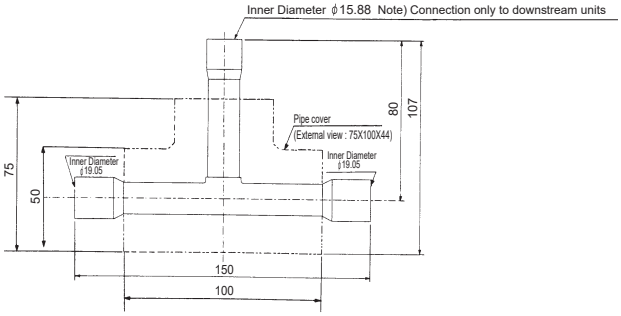

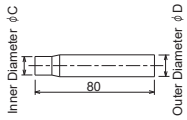

C (Inner Diameter)	D (Outer Diameter)	Number of reducers
ϕ 6.35	ϕ 9.52	2
ϕ 12.7	ϕ 15.88	1
ϕ 12.7	ϕ 19.05	1
ϕ 15.88	ϕ 19.05	2

8-2. HEADER

CITY MULTI units can be easily connected by using Joint sets and Header sets provided by Mitsubishi Electric. Two kinds of Header sets are available for use. Refer to section "Piping Design" or the Installation Manual that comes with the Header set for how to install the Header set.

CMY-Y64-G-E

mm

1. Specification

Items		Details
Main	Number of ports	3 ~ 4 ports
	Number of branch joints	One for each liquid and gas pipe
	Pipe material	Phosphorus deoxidized copper C1220T-OL (JIS H3300)
Accessory	Insulation material	Foamed polyethylene
	Reducer	7 reducers of 5 types
	Cap	2 caps of 2 different types for each liquid and gas pipe 4 caps in total

2. External drawing

For liquid pipe:

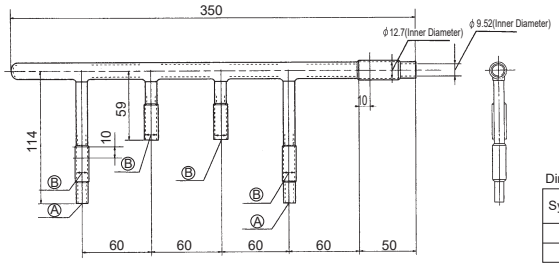

Dimension table

Symbol	Inner Diameter (mm)
Ⓐ	ϕ 6.35
Ⓑ	ϕ 9.52

Reducer (Accessory):



A (Inner Diameter)	B (Outer Diameter)	Number of reducers
ϕ 19.05	ϕ 15.88	1
ϕ 15.88	ϕ 12.7	2
ϕ 9.52	ϕ 6.35	2

For gas pipe:

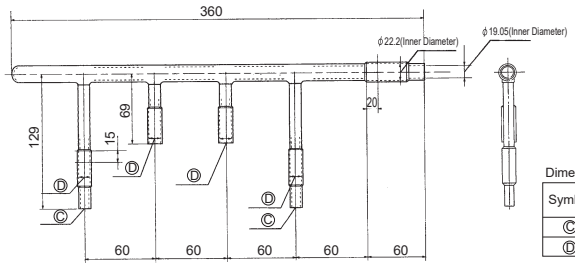

Dimension table

Symbol	Inner Diameter (mm)
Ⓒ	ϕ 12.7
Ⓓ	ϕ 15.88



C (Inner Diameter)	D (Outer Diameter)	Number of reducers
ϕ 15.88	ϕ 19.05	1
ϕ 9.52	ϕ 12.7	1

CMY-Y68-G-E

mm

1. Specification

Items		Details
Main	Number of ports	5 ~ 8 ports
	Number of branch joints	One for each liquid and gas pipe
	Pipe material	Phosphorus deoxidized copper C1220T-OL (JIS H3300)
Accessory	Insulation material	Foamed polyethylene
	Reducer	3 reducers of 3 types
	Cap	3 caps for each liquid and gas pipe 6 in total

2. External drawing

For liquid pipe:

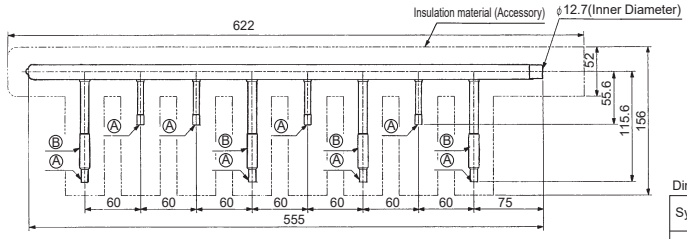

Dimension table

Symbol	Inner Diameter (mm)
Ⓐ	ϕ 6.35
Ⓑ	ϕ 9.52

Reducer (Accessory):



A (Inner Diameter)	B (Outer Diameter)	Number of reducers
ϕ 19.05	ϕ 15.88	1
ϕ 12.7	ϕ 9.52	1

For gas pipe:

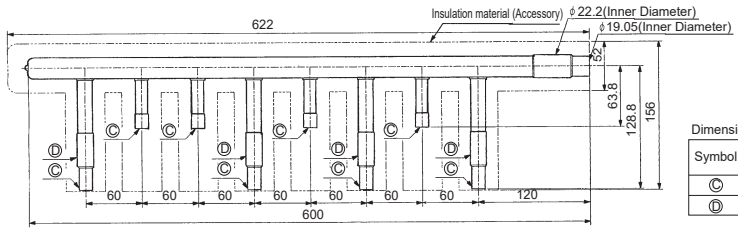

Dimension table

Symbol	Inner Diameter (mm)
Ⓒ	ϕ 12.7
Ⓓ	ϕ 15.88



C (Inner Diameter)	D (Outer Diameter)	Number of reducers
ϕ 15.88	ϕ 19.05	1

8-3. BRANCH BOX

PUMY-SP112/125/140V(Y)KM, PUMY-P112/125/140V(Y)KM(E)4, and PUMY-P200YKM2 units can be easily connected to M/S/P-Series indoor units by using Branch box provided by Mitsubishi Electric. Refer to section "Piping Design" or the Installation Manual that comes with the Branch box for how to install the Branch box.

(1) PAC-MK31/51BC PAC-MK31/51BCB

These can connect to PUMY-SP112/125/140V(Y)KM, PUMY-P112/125/140V(Y)KM(E)4 and PUMY-P200YKM2.

PAC-MK31BC

mm

1. Specification

Model Name				PAC-MK31BC
Connectable number of indoor units				Maximum 3
Power supply (from outdoor unit)				Single phase, 220/230/240V, 50Hz, Single phase, 220V, 60Hz
Input			kW	0.003
Running current			A	0.05 (Max. 6)
External finish				Galvanized sheets
Dimensions	Width		mm	450
	Depth		mm	280
	Height		mm	170
Weight			kg	6.7
Piping connection (Flare)	Branch (indoor side)*	Liquid	mm	ø6.35 × 3 {A,B,C}
		Gas	mm	ø9.52 × 3 {A,B,C}
	Main (outdoor side)	Liquid	mm	ø9.52
		Gas	mm	ø15.88

2. External drawing

SUSPENSION BOLT : W3/8(M10)

REFRIGERANT PIPE FLARED CONNECTION

	A	B	C			TO OUTDOOR UNIT
LIQUID PIPE	1/4F	1/4F	1/4F			3/8F
GAS PIPE	3/8F	3/8F	3/8F			5/8F

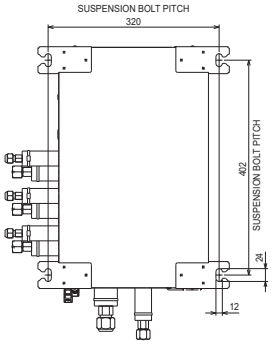

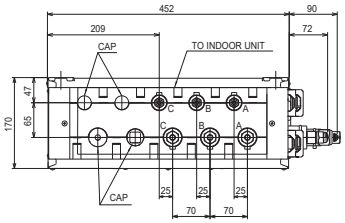

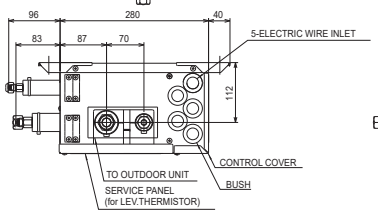

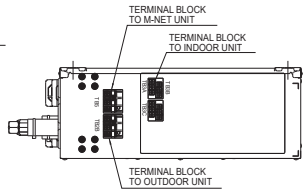

PAC-MK51BC

mm

1. Specification

Model Name				PAC-MK51BC
Connectable number of indoor units				Maximum 5
Power supply (from outdoor unit)				Single phase, 220/230/240V, 50Hz, Single phase, 220V, 60Hz
Input			kW	0.003
Running current			A	0.05 (Max. 6)
External finish				Galvanized sheets
Dimensions	Width		mm	450
	Depth		mm	280
	Height		mm	170
Weight			kg	7.4
Piping connection (Flare)	Branch (indoor side)*	Liquid	mm	ø6.35 × 5 {A,B,C,D,E}
		Gas	mm	ø9.52 × 4 {A,B,C,D}, ø12.7 × 1 {E}
	Main (outdoor side)	Liquid	mm	ø9.52
		Gas	mm	ø15.88

2. External drawing

SUSPENSION BOLT : W3/8(M10)

REFRIGERANT PIPE FLARED CONNECTION

	A	B	C	D	E	TO OUTDOOR UNIT
LIQUID PIPE	1/4F	1/4F	1/4F	1/4F	1/4F	3/8F
GAS PIPE	3/8F	3/8F	3/8F	3/8F	1/2F	5/8F

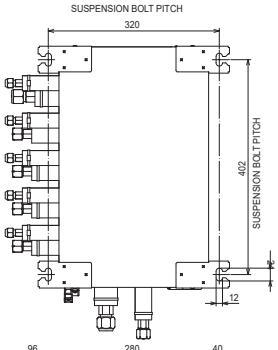

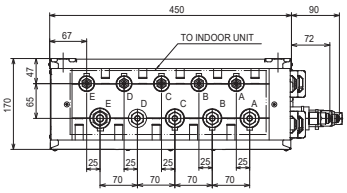

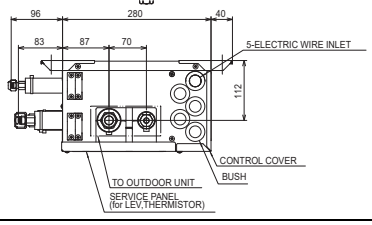

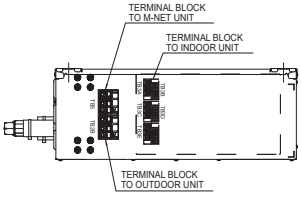

PAC-MK31BCB

mm

1. Specification

Model Name				PAC-MK31BCB
Connectable number of indoor units				Maximum 3
Power supply (from outdoor unit)				Single phase, 220/230/240V, 50Hz, Single phase, 220V, 60Hz
Input			kW	0.003
Running current			A	0.05 (Max. 6)
External finish				Galvanized sheets
Dimensions	Width		mm	450
	Depth		mm	280
	Height		mm	170
Weight			kg	6.5
Piping connection (Flare)	Branch (indoor side)*	Liquid	mm	ø6.35 × 3 {A,B,C}
		Gas	mm	ø9.52 × 3 {A,B,C}
	Main (outdoor side)	Liquid	mm	ø9.52
		Gas	mm	ø15.88

2. External drawing

SUSPENSION BOLT : W3/8(M10)

REFRIGERANT PIPE BRAZED CONNECTION

	A	B	C			TO OUTDOOR UNIT
LIQUID PIPE	ø 6.35	ø 6.35	ø 6.35			ø 9.52
GAS PIPE	ø 9.52	ø 9.52	ø 9.52			ø 15.88

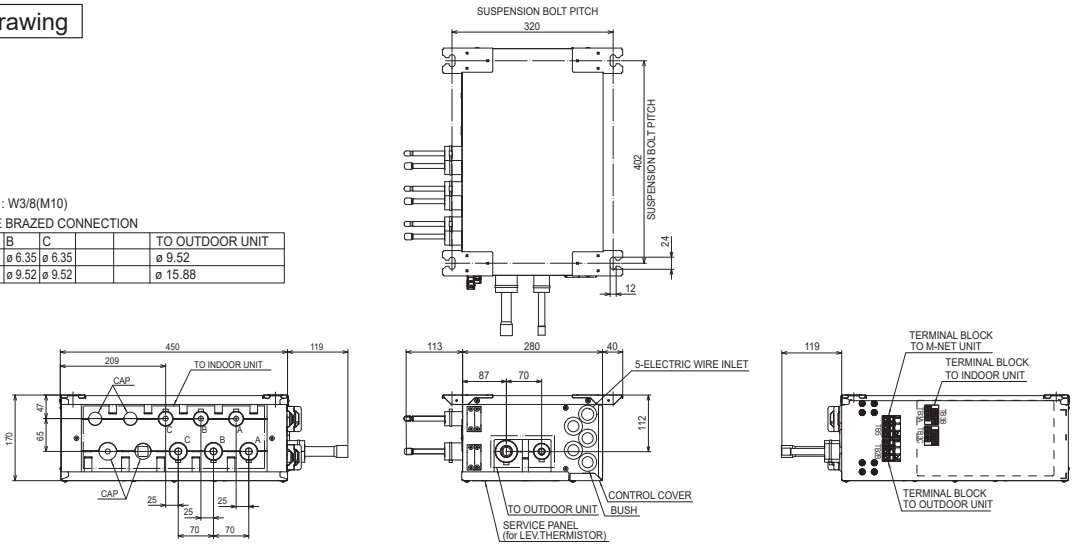

PAC-MK51BCB

mm

1. Specification

Model Name				PAC-MK51BCB
Connectable number of indoor units				Maximum 5
Power supply (from outdoor unit)				Single phase, 220/230/240V, 50Hz, Single phase, 220V, 60Hz
Input			kW	0.003
Running current			A	0.05 (Max. 6)
External finish				Galvanized sheets
Dimensions	Width		mm	450
	Depth		mm	280
	Height		mm	170
Weight			kg	7.0
Piping connection (Flare)	Branch (indoor side)*	Liquid	mm	ø6.35 × 5 {A,B,C,D,E}
		Gas	mm	ø9.52 × 4 {A,B,C,D}, ø12.7 × 1 {E}
	Main (outdoor side)	Liquid	mm	ø9.52
		Gas	mm	ø15.88

2. External drawing

SUSPENSION BOLT : W3/8(M10)

REFRIGERANT PIPE BRAZED CONNECTION

	A	B	C	D	E	TO OUTDOOR UNIT
LIQUID PIPE	ø 6.35	ø 6.35	ø 6.35	ø 6.35	ø 6.35	ø 9.52
GAS PIPE	ø 9.52	ø 9.52	ø 9.52	ø 9.52	ø 12.7	ø 15.88

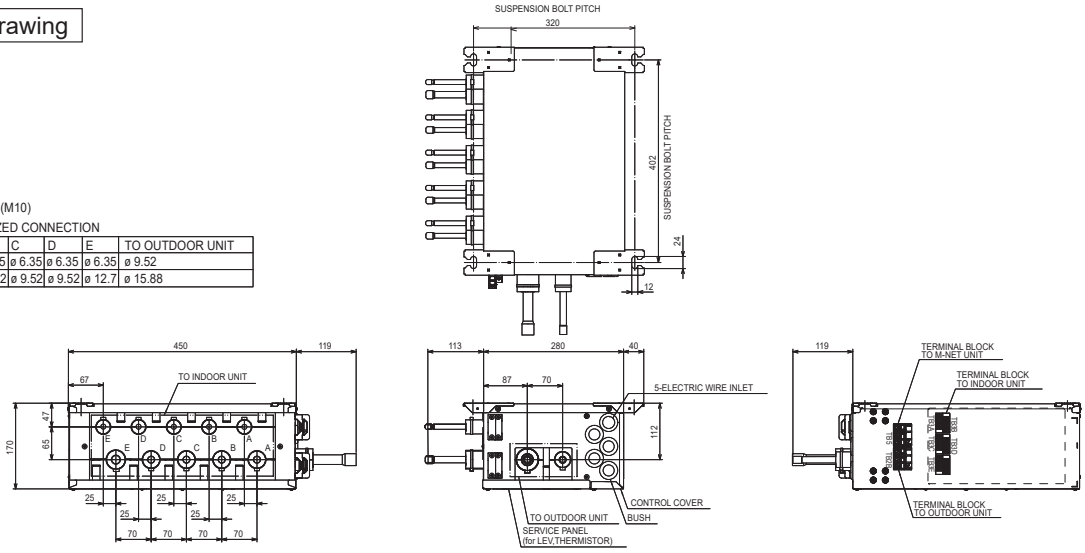

(2) PAC-MK33/53BC PAC-MK33/53BCB

PAC-MK33BC

mm

1. Specification

Model Name				**PAC-MK33BC**
Connectable number of indoor units				Maximum 3
Power supply (from outdoor unit)				Single phase, 220/230/240V, 50Hz, Single phase, 220V, 60Hz
Input			kW	0.003
Running current			A	0.05 (Max. 6)
External finish				Galvanized sheets
Dimensions	Width		mm	450
	Depth		mm	280
	Height		mm	170
Weight			kg	6.7
Piping connection (Flare)	Branch (indoor side)	Liquid	mm	ø6.35 × 3 {A,B,C}
		Gas	mm	ø9.52 × 3 {A,B,C}
	Main (outdoor side)	Liquid	mm	ø9.52
		Gas	mm	ø15.88

2. External drawing

SUSPENSION BOLT : W3/8(M10)

REFRIGERANT PIPE BRAZED CONNECTION

	A	B	C			TO OUTDOOR UNIT
LIQUID PIPE	φ6.35	φ6.35	φ6.35			φ9.52
GAS PIPE	φ9.52	φ9.52	φ9.52			φ15.88

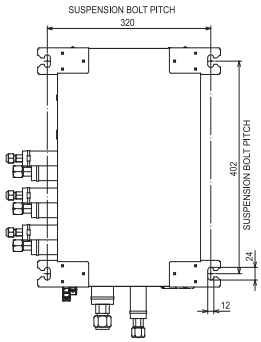

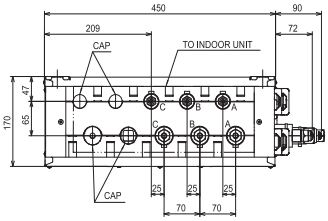

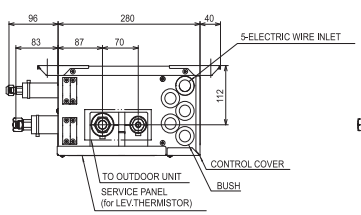

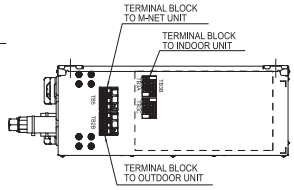

PAC-MK53BC

mm

1. Specification

Model Name				**PAC-MK53BC**
Connectable number of indoor units				Maximum 5
Power supply (from outdoor unit)				Single phase, 220/230/240V, 50Hz, Single phase, 220V, 60Hz
Input			kW	0.003
Running current			A	0.05 (Max. 6)
External finish				Galvanized sheets
Dimensions	Width		mm	450
	Depth		mm	280
	Height		mm	170
Weight			kg	7.4
Piping connection (Flare)	Branch (indoor side)*	Liquid	mm	ø6.35 × 5 {A,B,C}
		Gas	mm	ø9.52 × 4 {A,B,C,D}, ø12.7 × 1 {E}
	Main (outdoor side)	Liquid	mm	ø9.52
		Gas	mm	ø15.88

2. External drawing

SUSPENSION BOLT : W3/8(M10)

REFRIGERANT PIPE BRAZED CONNECTION

	A	B	C	D	E	TO OUTDOOR UNIT
LIQUID PIPE	φ6.35	φ6.35	φ6.35	φ6.35	φ6.35	φ9.52
GAS PIPE	φ9.52	φ9.52	φ9.52	φ9.52	φ12.7	φ15.88

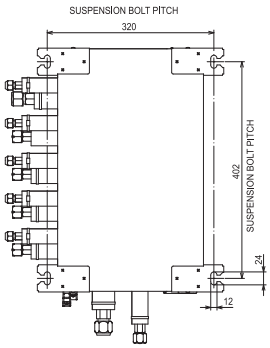

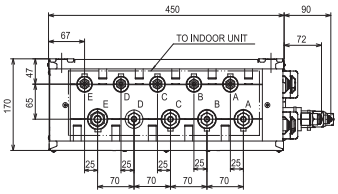

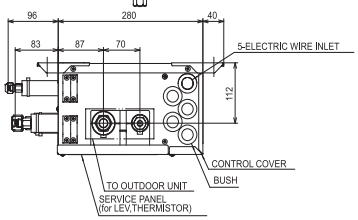

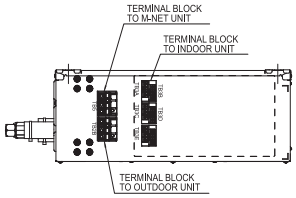

PAC-MK33BCB

mm

1. Specification

Model Name				PAC-MK33BCB
Connectable number of indoor units				Maximum 3
Power supply (from outdoor unit)				Single phase, 220/230/240V, 50Hz, Single phase, 220V, 60Hz
Input			kW	0.003
Running current			A	0.05 (Max. 6)
External finish				Galvanized sheets
Dimensions	Width		mm	450
	Depth		mm	280
	Height		mm	170
Weight			kg	6.5
Piping connection (Flare)	Branch (indoor side)*	Liquid	mm	ø6.35 × 3 {A,B,C}
		Gas	mm	ø9.52 × 3 {A,B,C}
	Main (outdoor side)	Liquid	mm	ø9.52
		Gas	mm	ø15.88

2. External drawing

SUSPENSION BOLT : W3/8(M10)

REFRIGERANT PIPE BRAZED CONNECTION

	A	B	C			TO OUTDOOR UNIT
LIQUID PIPE	ϕ6.35	ϕ6.35	ϕ6.35			ϕ9.52
GAS PIPE	ϕ9.52	ϕ9.52	ϕ9.52			ϕ15.88

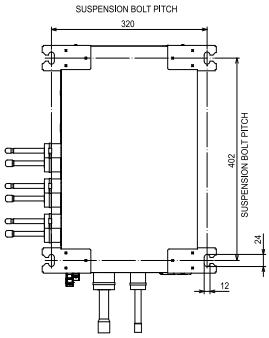

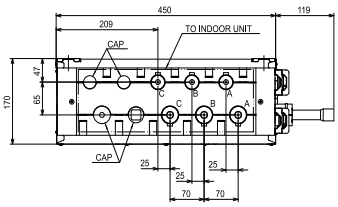

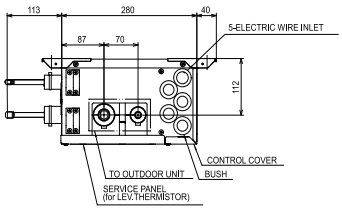

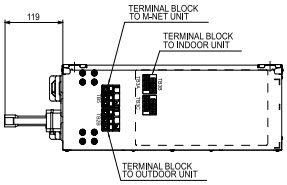

PAC-MK53BCB

mm

1. Specification

Model Name				PAC-MK53BCB
Connectable number of indoor units				Maximum 5
Power supply (from outdoor unit)				Single phase, 220/230/240V, 50Hz, Single phase, 220V, 60Hz
Input			kW	0.003
Running current			A	0.05 (Max. 6)
External finish				Galvanized sheets
Dimensions	Width		mm	450
	Depth		mm	280
	Height		mm	170
Weight			kg	7.0
Piping connection (Flare)	Branch (indoor side)*	Liquid	mm	ø6.35 × 5 {A,B,C}
		Gas	mm	ø9.52 × 4 {A,B,C,D}, ø12.7 × 1 {E}
	Main (outdoor side)	Liquid	mm	ø9.52
		Gas	mm	ø15.88

2. External drawing

SUSPENSION BOLT : W3/8(M10)

REFRIGERANT PIPE BRAZED CONNECTION

	A	B	C	D	E	TO OUTDOOR UNIT
LIQUID PIPE	ϕ6.35	ϕ6.35	ϕ6.35	ϕ6.35	ϕ6.35	ϕ9.52
GAS PIPE	ϕ9.52	ϕ9.52	ϕ9.52	ϕ9.52	ϕ12.7	ϕ15.88

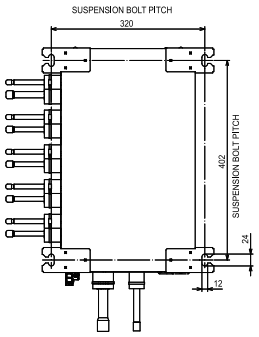

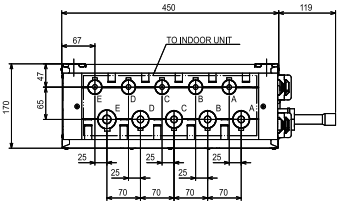

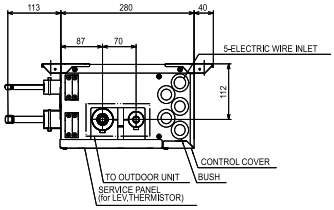

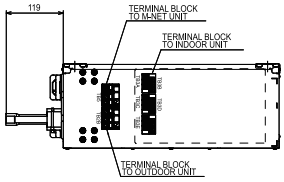

9-1. General cautions

① Follow ordinance of your governmental organization for technical standard related to electrical equipment, wiring regulations, and guidance of each electric power company.
② Wiring for control (hereinafter referred to as transmission cable) shall be (50mm[1-5/8in.] or more) apart from power source wiring so that it is not influenced by electric noise from power source wiring. (Do not insert transmission cable and power source wire in the same conduit.)
③ Be sure to provide designated grounding work to outdoor unit.
④ Give some allowance to wiring for electrical part box of indoor and outdoor units, because the box is sometimes removed at the time of service work.
⑤ Never connect 380~415V(220~240V) power source to terminal block of transmission cable. If connected,electrical parts will be damaged.
⑥ Use 2-core shield cable for transmission cable. If transmission cables of different systems are wired with the same multiple-core cable, the resultant poor transmitting and receiving will cause erroneous operations.
⑦ When extending the transmission line, make sure to extend the shield cable as well.

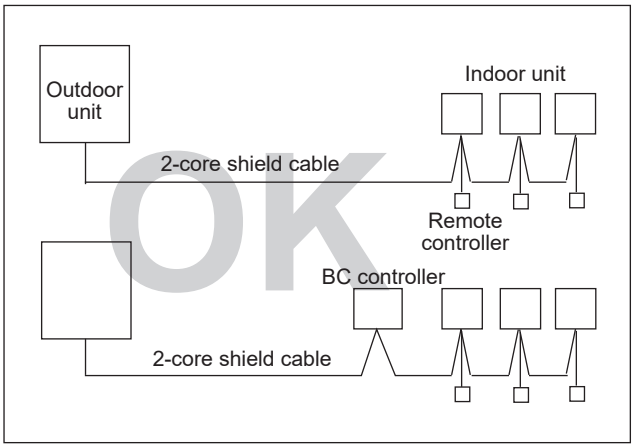

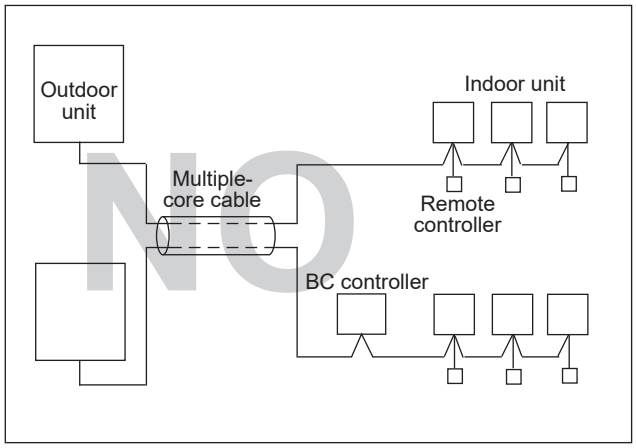

9-2. Power supply for Outdoor unit

9-2-1. Electrical characteristics of Outdoor unit at cooling mode

Symbols: MCA (Max Circuit Amps =1.25 × Temperature correction × RLA)
RLA (Rated Load Amps), SC (Starting Current)

PUMY-SP-VKM	Units			Power supply	Compressor		FAN	RLA (A)
	Hz	Volts	Voltage range	MCA (A)	Output (kW)	SC (A)	Output (kW)	
PUMY-SP112VKM	50	220 230 240	Max.: 264V Min.: 198V	30.5	3.1	14	0.20 × 1	14.38/13.75/13.18
PUMY-SP125VKM				30.5	3.5	14	0.20 × 1	17.81/17.04/16.33
PUMY-SP140VKM				30.5	3.7	14	0.20 × 1	21.80/20.85/19.98

PUMY-SP-VKM	Units			Power supply	Compressor		FAN	RLA (A)
	Hz	Volts	Voltage range	MCA (A)	Output (kW)	SC (A)	Output (kW)	
PUMY-SP112VKM	60	220	Max.: 242V Min.: 198V	30.5	3.1	14	0.20 × 1	14.38
PUMY-SP125VKM				30.5	3.5	14	0.20 × 1	17.81
PUMY-SP140VKM				30.5	3.7	14	0.20 × 1	21.80

PUMY-SP-YKM	Units			Power supply	Compressor		FAN	RLA (A)
	Hz	Volts	Voltage range	MCA (A)	Output (kW)	SC (A)	Output (kW)	
PUMY-SP112YKM	50	380 400 415	Max.: 456V Min.: 342V	13.0	3.1	7	0.20 × 1	4.96/4.71/4.54
PUMY-SP125YKM				13.0	3.5	7	0.20 × 1	6.14/5.83/5.62
PUMY-SP140YKM				13.0	3.7	7	0.20 × 1	7.52/7.14/6.88

PUMY-SP-YKM	Units			Power supply	Compressor		FAN	RLA (A)
	Hz	Volts	Voltage range	MCA (A)	Output (kW)	SC (A)	Output (kW)	
PUMY-SP112YKM	60	380	Max.: 418V Min.: 342V	13.0	3.1	7	0.20 × 1	4.96
PUMY-SP125YKM				13.0	3.5	7	0.20 × 1	6.14
PUMY-SP140YKM				13.0	3.7	7	0.20 × 1	7.52

PUMY-P-VKM	Units			Power supply	Compressor		FAN	RLA (A)
	Hz	Volts	Voltage Range	MCA (A)	Output (kW)	SC (A)	Output (kW)	
PUMY-P112VKM4	50	220 230 240	Max.: 264V Min.: 198V	29.5	2.9	14	0.074+0.074	12.87/12.32/11.80
PUMY-P125VKM4				29.5	3.5	14	0.074+0.074	15.97/15.27/14.64
PUMY-P140VKM4				29.5	3.9	14	0.074+0.074	20.86/19.95/19.12

PUMY-P-VKM	Units			Power supply	Compressor		FAN	RLA (A)
	Hz	Volts	Voltage Range	MCA (A)	Output (kW)	SC (A)	Output (kW)	
PUMY-P112VKM4	60	220 230	Max.: 253V Min.: 198V	29.5	2.9	14	0.074+0.074	12.87/12.32
PUMY-P125VKM4				29.5	3.5	14	0.074+0.074	15.97/15.27
PUMY-P140VKM4				29.5	3.9	14	0.074+0.074	20.86/19.95

PUMY-P-YKM	Units			Power supply	Compressor		FAN	RLA (A)
	Hz	Volts	Voltage Range	MCA (A)	Output (kW)	SC (A)	Output (kW)	
PUMY-P112YKM4	50	380 400 415	Max.: 456V Min.: 342V	13.0	2.9	7	0.074+0.074	4.99/4.74/4.57
PUMY-P125YKM4				13.0	3.5	7	0.074+0.074	5.84/5.55/5.35
PUMY-P140YKM4				13.0	3.9	7	0.074+0.074	7.23/6.87/6.62
PUMY-P200YKM2				19.0	5.3	7	0.20+0.20	9.88/9.39/9/05

PUMY-P-YKM	Units			Power supply	Compressor		FAN	RLA (A)
	Hz	Volts	Voltage Range	MCA (A)	Output (kW)	SC (A)	Output (kW)	
PUMY-P112YKM4	60	380	Max.: 418V Min.: 342V	13.0	2.9	7	0.074+0.074	4.99
PUMY-P125YKM4				13.0	3.5	7	0.074+0.074	5.84
PUMY-P140YKM4				13.0	3.9	7	0.074+0.074	7.23

PUMY-P-YKME	Units			Power supply	Compressor		FAN	RLA (A)
	Hz	Volts	Voltage Range	MCA (A)	Output (kW)	SC (A)	Output (kW)	
PUMY-P112YKME4	50	380 400 415	Max.: 456V Min.: 342V	13.0	2.9	7	0.074+0.074	4.99/4.74/4.57
PUMY-P125YKME4				13.0	3.5	7	0.074+0.074	5.84/5.55/5.35
PUMY-P140YKME4				13.0	3.9	7	0.074+0.074	7.23/6.87/6.62

9-3. Power cable specifications

Thickness of wire for main power supply, capacities of the switch and system impedance

■ PUMY-SP-VKM / PUMY-SP-YKM

<Outdoor unit> <When power is supplied to outdoor unit and branch box separately>

	Model	Minimum wire thickness (mm^2)			Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A) (Non-fuse breaker)	Max. Permissive System Impedance
		Main cable	Branch	Ground		Capacity	Fuse		
Outdoor unit	PUMY-SP112VKM	6.0	-	6.0	32A 30mA 0.1sec. or less	32	32	32	-
	PUMY-SP125VKM	6.0	-	6.0	32A 30mA 0.1sec. or less	32	32	32	-
	PUMY-SP140VKM	6.0	-	6.0	32A 30mA 0.1sec. or less	32	32	32	-
	PUMY-SP112YKM	1.5	-	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-SP125YKM	1.5	-	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-SP140YKM	1.5	-	1.5	16A 30mA 0.1sec. or less	16	16	16	-

<Outdoor unit> <When power is supplied to branch box from the outdoor unit>

	Model	Minimum wire thickness (mm^2)			Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A) (Non-fuse breaker)	Max. Permissive System Impedance
		Main cable	Branch	Ground		Capacity	Fuse		
Outdoor unit	PUMY-SP112VKM	6.0	-	6.0	32A 30mA 0.1sec. or less	40	40	40	-
	PUMY-SP125VKM	6.0	-	6.0	32A 30mA 0.1sec. or less	40	40	40	-
	PUMY-SP140VKM	6.0	-	6.0	32A 30mA 0.1sec. or less	40	40	40	-
	PUMY-SP112YKM	2.5	-	2.5	16A 30mA 0.1sec. or less	25	25	25	-
	PUMY-SP125YKM	2.5	-	2.5	16A 30mA 0.1sec. or less	25	25	25	-
	PUMY-SP140YKM	2.5	-	2.5	16A 30mA 0.1sec. or less	25	25	25	-

<Indoor units> <When power is supplied to indoor unit and outdoor unit separately>

	Model	Minimum wire thickness (mm^2)			Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A) (Non-fuse breaker)	Max. Permissive System Impedance
		Main cable	Branch	Ground		Capacity	Fuse		
Total operating current of the indoor unit	F0 = 16A or less *2	1.5	1.5	1.5	20A current sensitivity *3	16	16	40	-
	F0 = 25A or less *2	2.5	2.5	2.5	30A current sensitivity *3	25	25	40	-
	F0 = 32A or less *2	4.0	4.0	4.0	40A current sensitivity *3	32	32	40	-

*1 The Ground-fault interrupter should support Inverter circuit.
The Ground-fault interrupter should combine using of local switch or wiring breaker.

*2 Please take the larger of F1 or F2 as the value for F0.
F1 = Total operating maximum current of the indoor units × 1.2
F2 = {V1 × (Quantity of Type1)/C} + {V1 × (Quantity of Type2)/C} + {V1 × (Quantity of Type3)/C} + · · · · · + {V1 × (Quantity of Type15)/C}

Connect to Branch box (PAC-MK·BC)

Indoor unit		V1	V2
Type1	PEAD-RP·JAQ(L).UK, PEAD-M·JA(L)	26.9	2.4
Type2	SEZ-KD·VA, SEZ-M·DA, PCA-RP·KAQ, PCA-M·KA,SLZ-KF·VA, PLA-RP·EA(.UK)	19.8	
Type3	SLZ-M·FA	17.1	
Type4	MLZ-KA·VA, MLZ-KP·VF	9.9	
Type5	MSZ-LN·VG, MSZ-AP·VF, MSZ-AP·VG, MFZ-KJ·VE	7.4	
Type6	MSZ-FH·VE, MSZ-GF·VE, MSZ-SF·VE, MSZ-EF·VE, MSZ-SF·VA, MSZ-GE·VA	6.8	
Type7	Branch box (PAC-MK·BC(B))	5.1	3.0

Connect to Connection kit (PAC-LV11M)

Indoor unit		V1	V2
Type8	MSZ-LN·VG, MSZ-AP·VF, MSZ-AP·VG	7.4	2.4
Type9	MSZ-SF·VA, MSZ-SF·VE, MSZ-EF·VE, MSZ-FH·VE, MSZ-GE·VA	6.8	
Type10	Connection kit (PAC-LV11M)	3.5	

Indoor unit		V1	V2
Type11	PEFY-P·VMA(L)-E, PEFY-P·VMA3-E	38.0	1.6
Type12	PMFY-P·VBM-E, PLFY-P·VBM-E, PLFY-P·VEM-E, PLFY-EP·VEM-E, PLFY-P·VFM-E, PEFY-P·VMS1(L)-E, PCFY-P·VKM-E, PKFY-P·VHM-E, PKFY-P·VKM-E, PFFY-P·VKM-E, PFFY-P·VLRMM-E	19.8	2.4
Type13	PLFY-P·VCM-E	9.9	
Type14	PKFY-P·VBM-E	3.5	
Type15	PLFY-P·VLMD-E, PEFY-P·VMH-E, PEFY-P·VMR-E-L/R, PEFY-P·VMH-E-F, PFFY-P·VLEM-E, PFFY-P·VLRM-E, GUF*4-RD(H)4	0	0

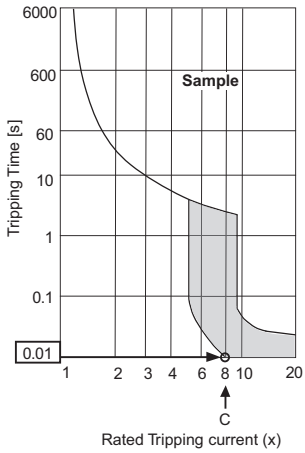

C: Multiple of tripping current at tripping time 0.01s
Please pick up "C" from the tripping characteristic of the breaker.

<Example of "F2" calculation>
Condition PLFY-VBM × 4 + PEFY-VMA × 1, C = 8 (refer to right sample chart)
F2 = 19.8 × 4/8 + 38 × 1/8
= 14.65
→16 A breaker (Tripping current = 8 × 16 A at 0.01s)

*3 Current sensitivity is calculated using the following formula.
G1 = (V2 × Quantity of Type1) + (V2 × Quantity of Type2) + (V2 × Quantity of Type3) + (V2 × Quantity of Type4) + · · · · · + (V2 × Quantity of Type15) + (V3 × Wire length [km])

G1	Current sensitivity
30 or less	30 mA 0.1sec or less
100 or less	100 mA 0.1sec or less

Wire thickness	V3
1.5 mm^2	48
2.5 mm^2	56
4.0 mm^2	66

1. Use dedicated power supplies for the outdoor unit and indoor unit.
2. Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
3. The wire size is the minimum value for metal conduit wiring. If the voltage drops, use a wire that is one rank thicker in diameter. Make sure the power-supply voltage does not drop more than 10%. Make sure that the voltage imbalance between the phases is 2% or less.
4. Specific wiring requirements should adhere to the wiring regulations of the region.
5. Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
6. A switch with at least 3 mm contact separation in each pole shall be provided by the Air Conditioner installer.

⚠WARNING

- Be sure to use specified wires for connections and ensure no external force is imparted to terminal connections. If connections are not fixed firmly, heating or fire may result.
- Be sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.

⚠CAUTION

- The breakers for current leakage should support Inverter circuit. (e.g. Mitsubishi Electric's NV-S-Series or equivalent). If no earth leakage breaker is installed, it may cause an electric shock.
- Breakers for current leakage should combine using of switch.
- Do not use anything other than a breaker with the correct capacity. Using a breaker of too large capacity may cause malfunction or fire.
- If a large electric current flows due to malfunction or faulty wiring, earth-leakage breakers on the unit side and on the upstream side of the power supply system may both operate. Depending on the importance of the system, separate the power supply system or take protective coordination of breakers.

Note

- This device is intended for the connection to a power supply system with a maximum permissible system impedance shown in the above table at the interface point (power service box) of the user's supply.
- The user must ensure that this device is connected only to a power supply system which fulfils the requirement above.
  If necessary, the user can ask the public power supply company for the system impedance at the interface point.

Thickness of wire for main power supply, capacities of the switch and system impedance

■ PUMY-P-VKM4 / PUMY-P-YKM4 / PUMY-P-YKME4

<Outdoor unit> <When power is supplied to outdoor unit and branch box separately>

	Model	Minimum wire thickness (mm^2)		Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A) (Non-fuse breaker)	Max. Permissive System Impedance
		Main cable	Ground		Capacity	Fuse		
Outdoor unit	PUMY-P112VKM4	6.0	6.0	32A 30mA 0.1sec. or less	32	32	32	-
	PUMY-P125VKM4	6.0	6.0	32A 30mA 0.1sec. or less	32	32	32	-
	PUMY-P140VKM4	6.0	6.0	32A 30mA 0.1sec. or less	32	32	32	-
	PUMY-P112YKM4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-P125YKM4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-P140YKM4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-P112YKME4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-P125YKME4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-
	PUMY-P140YKME4	1.5	1.5	16A 30mA 0.1sec. or less	16	16	16	-

<Outdoor unit> <When power is supplied to branch box from the outdoor unit>

	Model	Minimum wire thickness (mm^2)		Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A) (Non-fuse breaker)	Max. Permissive System Impedance
		Main cable	Ground		Capacity	Fuse		
Outdoor unit	PUMY-P112VKM4	6.0	6.0	40A 30mA 0.1sec. or less	40	40	40	-
	PUMY-P125VKM4	6.0	6.0	40A 30mA 0.1sec. or less	40	40	40	-
	PUMY-P140VKM4	6.0	6.0	40A 30mA 0.1sec. or less	40	40	40	-
	PUMY-P112YKM4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-
	PUMY-P125YKM4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-
	PUMY-P140YKM4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-
	PUMY-P112YKME4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-
	PUMY-P125YKME4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-
	PUMY-P140YKME4	2.5	2.5	32A 30mA 0.1sec. or less	20	20	20	-

<Indoor units> <When power is supplied to indoor unit and outdoor unit separately>

	Model	Minimum wire thickness (mm^2)			Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A) (Non-fuse breaker)	Max. Permissive System Impedance
		Main cable	Branch	Ground		Capacity	Fuse		
Total operating current of the indoor unit	F0 = 16A or less *2	1.5	1.5	1.5	20A current sensitivity *4	16	16	20	-
	F0 = 25A or less *2	2.5	2.5	2.5	30A current sensitivity *4	25	25	30	-
	F0 = 32A or less *2	4.0	4.0	4.0	40A current sensitivity *4	32	32	40	-

*1 The Ground-fault interrupter should support Inverter circuit.
The Ground-fault interrupter should combine using of local switch or wiring breaker.

*2 Please take the larger of F1 or F2 as the value for F0.
F1 = Total operating maximum current of the indoor units × 1.2
F2 = {V1 × (Quantity of Type1)/C} + {V1 × (Quantity of Type2)/C} + {V1 × (Quantity of Type3)/C} + · · · · · + {V1 × (Quantity of Type14)/C}

Connect to Branch box (PAC-MK·BC(B))

Indoor unit		V1	V2
Type1	PEAD-RP·JA(L)Q, PEAD-M·JA(L)	26.9	2.4
Type2	SEZ-KD·VAQ(L), SEZ-M·DA(L), PCA-RP·KAQ, PCA-M·KA, PLA-ZRP·BA, PLA-RP·EA, SLZ-KF·VA2, SLZ-M·FA	19.8	
Type3	MLZ-KA·VA, SLZ-KA·VAQ(L)3	9.9	
Type4	MFZ-KJ·VE2, MSZ-LN·VG, MSZ-AP·VG, MLZ-KP·VF, MSZ-AP·VF	7.4	
Type5	MSZ-FH·VE, MSZ-SF·VE, MSZ-EF·VE, MSZ-SF·VA, MSZ-GF·VE	6.8	
Type6	Branch box (PAC-MK·BC(B))	5.1	3.0
Type7	ecodan C generation		5.0 *3

*3 This value may increase due to a locally connected actuator.

Connect to Connection kit (PAC-LV11M-J)

Indoor unit		V1	V2
Type8	MFZ-KJ·VE2, MSZ-LN·VG, MSZ-AP·VG, MSZ-AP·VF	7.4	2.4
Type9	MSZ-SF·VA, MSZ-SF·VE, MSZ-EF·VE, MSZ-FH·VE	6.8	
Type10	Connection kit (PAC-LV11M-J)	3.5	

Indoor unit		V1	V2
Type11	PEFY-VMA(L)-E, PEFY-VMA3-E	38.0	1.6
Type12	PMFY-VBM-E, PLFY-VEM-E, PLFY-VFM-E1, PEFY-VMS1(L)-E, PCFY-VKM-E, PKFY-VHM-E, PKFY-VKM-E, PFFY-VKM-E2, PFFY-VLRMM-E, PLFY-EP·VEM-E	19.8	2.4
Type13	PKFY·VBM-E	3.5	2.4
Type14	PLFY-VLMD-E, PEFY-VMR-E-L/R, PDFY-VM-E, PEFY-VMH-E, PFFY-VLEM-E, PFFY-VLRM-E, PWFY-VM-E1(2)-AU, PEFY-P·VMH-E-F, GUF-RD(H)4	0.0	0.0

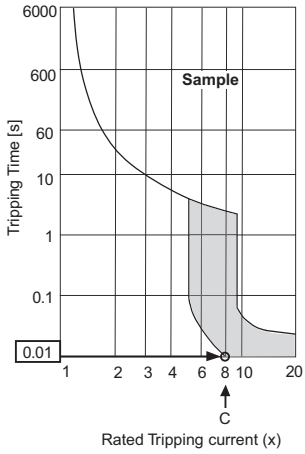

C: Multiple of tripping current at tripping time 0.01s
Please pick up "C" from the tripping characteristic of the breaker.

<Example of "F2" calculation>
Condition PEFY-VMS × 4 + PEFY-VMA × 1, C = 8 (refer to right sample chart)
F2 = 19.8 × 4/8 + 38 × 1/8
= 14.65
→16 A breaker (Tripping current = 8 × 16 A at 0.01s)

*4 Current sensitivity is calculated using the following formula.
G1 = V2 × (Quantity of Type1) + V2 × (Quantity of Type2) +V2 × (Quantity of Type3) + · · · + V2 × (Quantity of Type14) + V3 × (Wire length [km])

G1	Current sensitivity
30 or less	30 mA 0.1sec or less
100 or less	100 mA 0.1sec or less

Wire thickness	V3
1.5 mm^2	48
2.5 mm^2	56
4.0 mm^2	66

1. Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
2. The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker consideration of voltage drops. Make sure the power-supply voltage does not drop more than 10%.
3. Specific wiring requirements should adhere to the wiring regulations of the region.
4. Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
5. Install an earth line longer than power cables.

⚠WARNING

- Be sure to use specified wires for connections and ensure no external force is imparted to terminal connections. If connections are not fixed firmly, heating or fire may result.
- Be sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.

⚠CAUTION

- The breakers for current leakage should support Inverter circuit. (e.g. Mitsubishi Electric's NV-S-Series or equivalent). If no earth leakage breaker is installed, it may cause an electric shock.
- Breakers for current leakage should combine using of switch.
- Do not use anything other than a breaker with the correct capacity. Using a breaker of too large capacity may cause malfunction or fire.
- If a large electric current flows due to malfunction or faulty wiring, earth-leakage breakers on the unit side and on the upstream side of the power supply system may both operate. Depending on the importance of the system, separate the power supply system or take protective coordination of breakers.

Note

- This device is intended for the connection to a power supply system with a maximum permissible system impedance shown in the above table at the interface point (power service box) of the user's supply.
- The user must ensure that this device is connected only to a power supply system which fulfils the requirement above.
  If necessary, the user can ask the public power supply company for the system impedance at the interface point.

Thickness of wire for main power supply, capacities of the switch and system impedance

<Outdoor unit> <When power is supplied to outdoor unit and branch box separately>

	Model	Minimum wire thickness (mm^2)		Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A) (Non-fuse breaker)	Max. Permissive System Impedance
		Main cable	Ground		Capacity	Fuse		
Outdoor unit	PUMY-P200YKM2	2.5	2.5	25A 30mA 0.1sec. or less	25	25	25	-

<Outdoor unit> <When power is supplied to branch box from the outdoor unit>

	Model	Minimum wire thickness (mm^2)		Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A) (Non-fuse breaker)	Max. Permissive System Impedance
		Main cable	Ground		Capacity	Fuse		
Outdoor unit	PUMY-P200YKM2	4.0	4.0	32A 30mA 0.1sec. or less	32	32	32	-

<Indoor units> <When power is supplied to indoor unit and outdoor unit separately>

	Model	Minimum wire thickness (mm^2)			Ground-fault interrupter *1	Local switch (A)		Breaker for wiring (A) (Non-fuse breaker)	Max. Permissive System Impedance
		Main cable	Branch	Ground		Capacity	Fuse		
Total operating current of the indoor unit	F0 = 16A or less *2	1.5	1.5	1.5	20A current sensitivity *3	16	16	20	-
	F0 = 25A or less *2	2.5	2.5	2.5	30A current sensitivity *3	25	25	30	-
	F0 = 32A or less *2	4.0	4.0	4.0	40A current sensitivity *3	32	32	40	-

*1 The Ground-fault interrupter should support Inverter circuit.
The Ground-fault interrupter should combine using of local switch or wiring breaker.

*2 Please take the larger of F1 or F2 as the value for F0.
F1 = Total operating maximum current of the indoor units × 1.2
F2 = {V1 × (Quantity of Type1)/C} + {V1 × (Quantity of Type2)/C} + {V1 × (Quantity of Type3)/C} + · · · · · + {V1 × (Quantity of Type14)/C}

Connect to Branch box (PAC-MK·BC)

Indoor unit		V1	V2
Type1	SEZ-KD·VAQ(L), SEZ-M·DA(L), PCA-M·KA, SLZ-KF·VA, SLZ-M·FA, PLA-RP·EA	19.8	2.4
Type2	PEAD-M·JA(L)	26.9	
Type3	MLZ-KA·VA	9.9	
Type4	MSZ-FH·VE, MSZ-GF·VE, MSZ-SF·VE, MSZ-EF·VE, MSZ-SF·VA	6.8	
Type5	MFZ-KJ·VE2, MSZ-LN·VG, MSZ-AP·VG, MLZ-KP·VF, MSZ-AP·VF	7.4	
Type6	Branch box (PAC-MK·BC)	5.1	3.0

Connect to Connection kit (PAC-LV11M)

Indoor unit		V1	V2
Type7	MSZ-EF·VE, MSZ-SF·VA, MSZ-SF·VE, MSZ-FH·VE	6.8	2.4
Type8	MFZ-KJ·VE2, MSZ-LN·VG, MSZ-AP·VG, MSZ-AP·VF	7.4	
Type9	Connection kit (PAC-LV11M)	3.5	

Indoor unit		V1	V2
Type10	PMFY-P·VBM-E, PLFY-P·VBM-E, PEFY-P·VMS1-E, PCFY-P·VKM-E, PKFY-P·VHM-E, PKFY-P·VKM-E, PLFY-P·VEM-E, PLFY-EP·VEM-E, PLFY-P·VFM-E, PFFY-VKM-E2, PFFY-VLRMM-E	19.8	2.4
Type11	PKFY-P·VBM-E	3.5	
Type12	PEFY-P·VMA(L)-E, PEFY-P·VMA3-E	38.0	1.6
Type13	PEFY-P·VMH(S)-E	13.8	4.8
Type14	PLFY-P·VLMD-E, PEFY-P·VMR-E-L/R, PEFY-P·VMH-E-F, PDFY-P·VM-E, PFFY-P·VLEM-E, GUF-·RD(H)4, PEFY-VMH-E, PFFY-VLRM-E	0.0	0.0

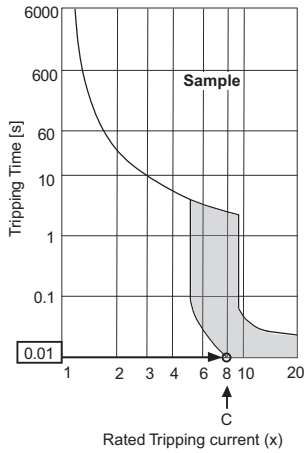

C: Multiple of tripping current at tripping time 0.01s
Please pick up "C" from the tripping characteristic of the breaker.

<Example of "F2" calculation>
*Condition PLFY-P·VBM-E × 4 + PEFY-VMA-E × 1, C = 8 (refer to right sample chart)
F2 = 19.8 × 4/8 + 38 × 1/8
= 14.65
→16 A breaker (Tripping current = 8 × 16 A at 0.01s)

*3 Current sensitivity is calculated using the following formula.
G1 = V2 × (Quantity of Type1) + V2 × (Quantity of Type2) + V2 × (Quantity of Type3) + · · · · · + V2 × (Quantity of Type14) + V3 × (Wire length [km])

G1	Current sensitivity
30 or less	30 mA 0.1sec or less
100 or less	100 mA 0.1sec or less

Wire thickness	V3
1.5 mm^2	48
2.5 mm^2	56
4.0 mm^2	66

1. Bear in mind ambient conditions (ambient temperature, direct sunlight, rain water, etc.) when proceeding with the wiring and connections.
2. The wire size is the minimum value for metal conduit wiring. The power cord size should be 1 rank thicker consideration of voltage drops. Make sure the power-supply voltage does not drop more than 10%.
3. Specific wiring requirements should adhere to the wiring regulations of the region.
4. Power supply cords of parts of appliances for outdoor use shall not be lighter than polychloroprene sheathed flexible cord (design 60245 IEC57). For example, use wiring such as YZW.
5. Install an earth line longer than power cables.

⚠WARNING

- Be sure to use specified wires for connections and ensure no external force is imparted to terminal connections. If connections are not fixed firmly, heating or fire may result.
- Be sure to use the appropriate type of overcurrent protection switch. Note that generated overcurrent may include some amount of direct current.

⚠CAUTION

- The breakers for current leakage should support Inverter circuit. (e.g. Mitsubishi Electric's NV-S-Series or equivalent). If no earth leakage breaker is installed, it may cause an electric shock.
- Breakers for current leakage should combine using of switch.
- Do not use anything other than a breaker with the correct capacity. Using a breaker of too large capacity may cause malfunction or fire.
- If a large electric current flows due to malfunction or faulty wiring, earth-leakage breakers on the unit side and on the upstream side of the power supply system may both operate. Depending on the importance of the system, separate the power supply system or take protective coordination of breakers.

Note

- This device is intended for the connection to a power supply system with a maximum permissible system impedance shown in the above table at the interface point (power service box) of the user's supply.
- The user must ensure that this device is connected only to a power supply system which fulfils the requirement above.
If necessary, the user can ask the public power supply company for the system impedance at the interface point.

9-4. Power supply examples

The local standards and/or regulations is applicable at a higher priority.

9-4-1. PUMY-SP112, 125, 140VKM
PUMY-P112, 125, 140VKM4

Note 1. The transmission cable is non-polarity two wires.
2. Symbol ◎ means a screw terminal.
3. Earth of transmission cable shall be grounded on the earth terminal (⏚) of only variable capacity unit.
And shield of transmission cable between each indoor units shall be connected to shield terminal (S) of each indoor units or connected themselves.
4. Power supply to indoor unit varies on series or models.
5. The number of indoor units which can be connected to a switch is the number applying when the total operating current of the indoor units is less than 16A.

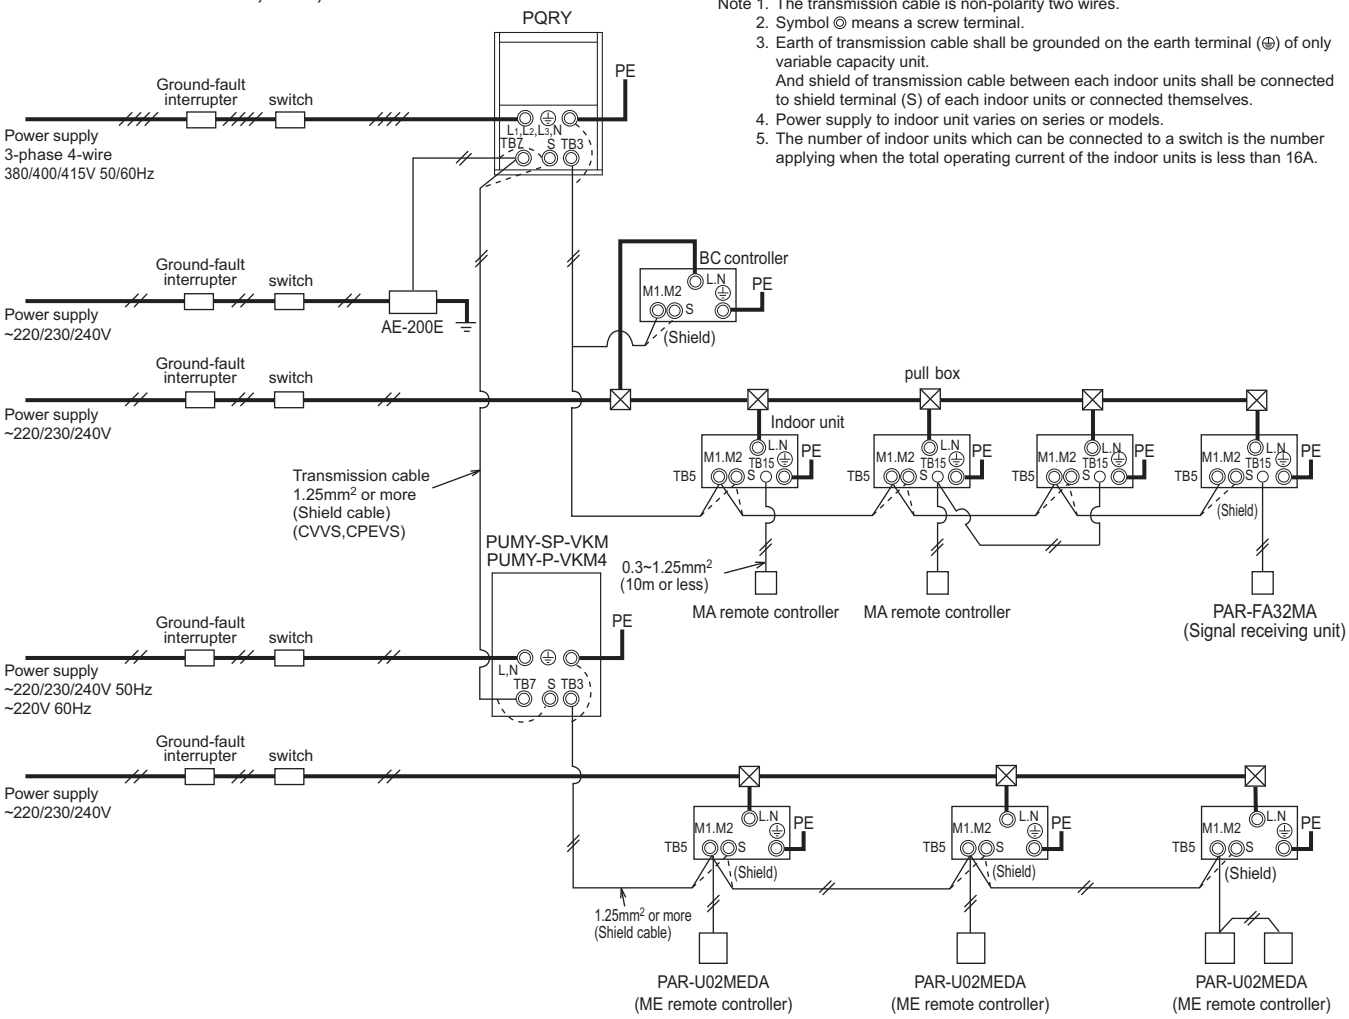

The local standards and/or regulations is applicable at a higher priority.

9-4-2. PUMY-SP112, 125, 140YKM
PUMY-P112, 125, 140YKM(E)4
PUMY-P200YKM2

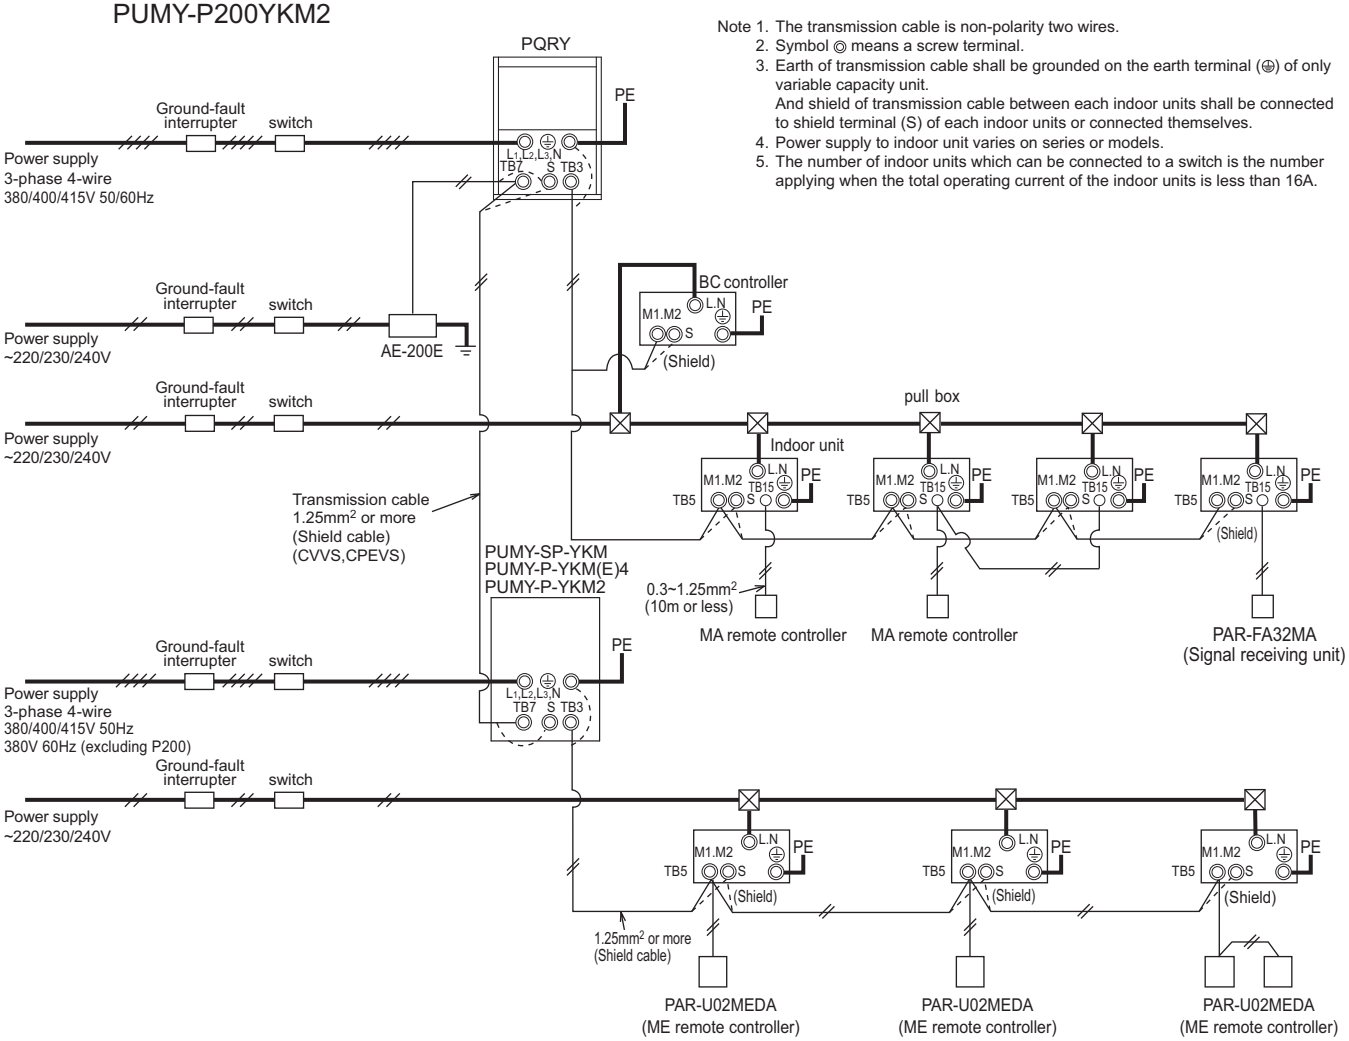

10-1. Transmission cable length limitation

10-1-1. Using MA Remote controller

Long transmission cable causes voltage down, therefore, the length limitation should be obeyed to secure proper transmission.

Max. length via Outdoor (M-NET cable)	L1+L2+L3, L1+L2+L4+L5, L3+L4+L5	<=500m[1640ft]	1.25mm^2 [AWG16] or thicker
Max. length to Outdoor (M-NET cable)	L1, L3, L2+L4, L5	<=200m[656ft]	1.25mm^2 [AWG16] or thicker
Max. length from MA to Indoor for each group	a1+a2, a1+a2+a3+a4	<=200m[656ft]	0.3-1.25mm^2 [AWG22-16]
24VDC to AG-150A	n	<=50m[164ft.]	0.75-2.0 mm^2 [AWG18-14]

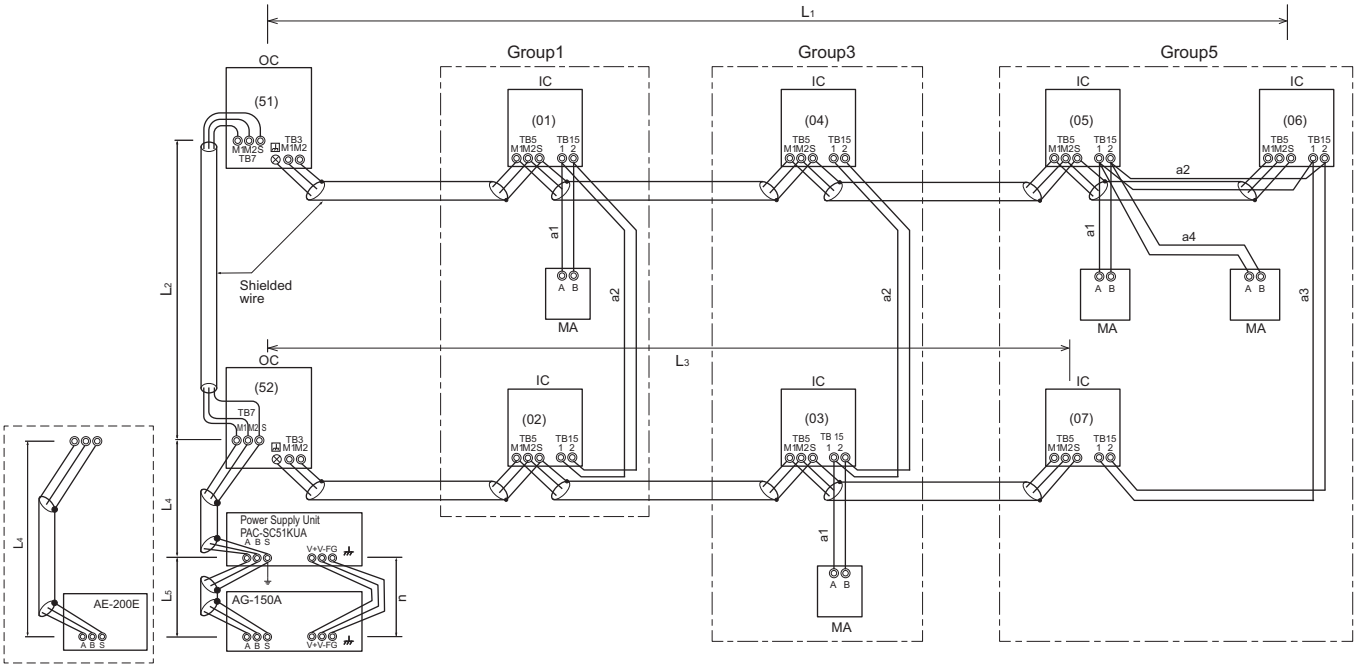

OC: Outdoor unit; IC: Indoor unit; MA: MA remote controller

10-1-2. Using ME Remote controller

Long transmission cable causes voltage down, therefore, the length limitation should be obeyed to secure proper transmission.

Max. length via Outdoor (M-NET cable)	L1+L2+L3+L4, L1+L2+L6+L7,L1+L2+L3+L5, L3+L4+L6+L7, L3+L5+L6+L7, L4+L5	<=500m[1640ft]	1.25mm^2 [AWG16] or thicker
Max. length to Outdoor (M-NET cable)	L1, L3+L4, L2+L6, L7, L3+L5	<=200m[656ft]	1.25mm^2 [AWG16] or thicker
Max. length from ME to Indoor	e1, e2, e3, e4	<=10m[32ft] *1	0.3-1.25mm^2 [AWG22-16] *1
24VDC to AG-150A	n	<=50m[164ft.]	0.75-2.0 mm^2 [AWG18-14]

*1. If the length from ME to Indoor exceed 10m, use 1.25 mm^2[AWG16] shielded cable, but the total length should be counted into Max. length via Outdoor.

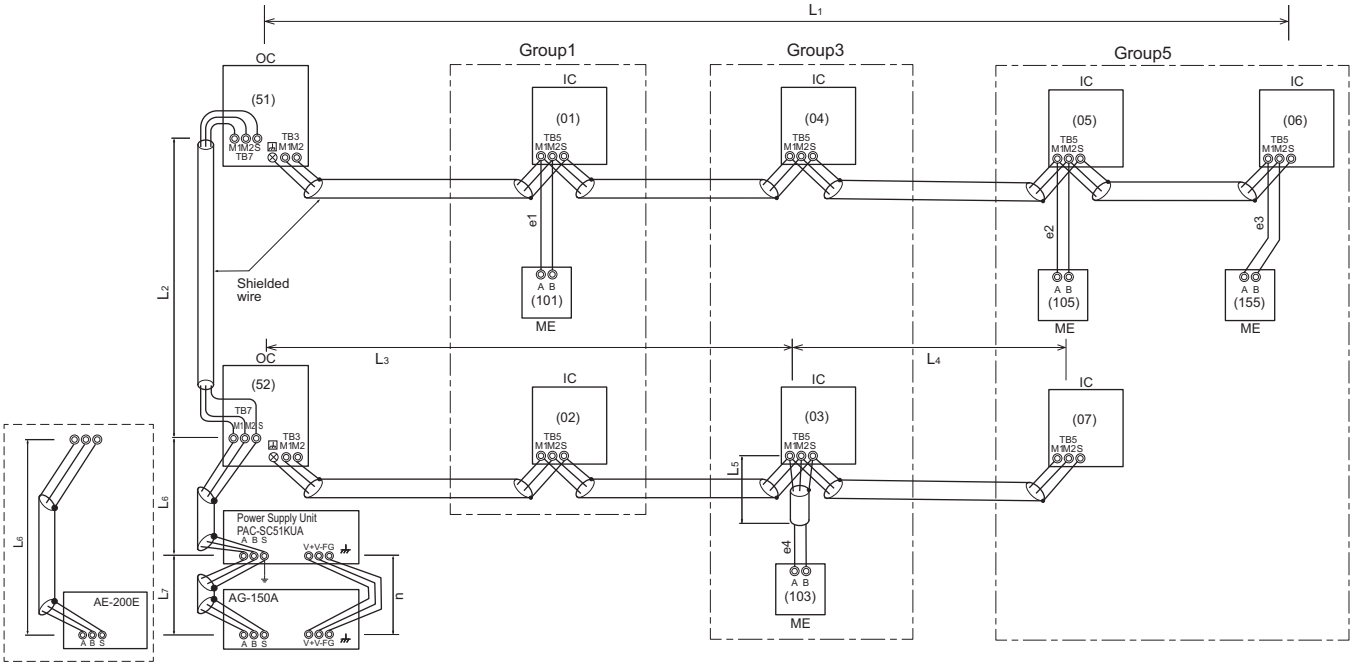

OC: Outdoor unit; IC: Indoor unit; ME: ME remote controller

10-1-3. Using a Branch Box

Long transmission cable causes voltage down, therefore, the length limitation should be obeyed to secure proper transmission.

Max length via outdoor units (M-NET cable):	$L_1 + L_2 + L_3 + L_4 + L_5$	<=500m[1640ft]	1.25mm^2 [AWG16] or thicker
Max transmission cable length (M-NET cable):	$L_1 + L_2$, $L_3 + L_4$, L_5	<=200m[656ft]	1.25mm^2 [AWG16] or thicker

<Example of Transmission Cable Wiring: When Using a Branch Box>

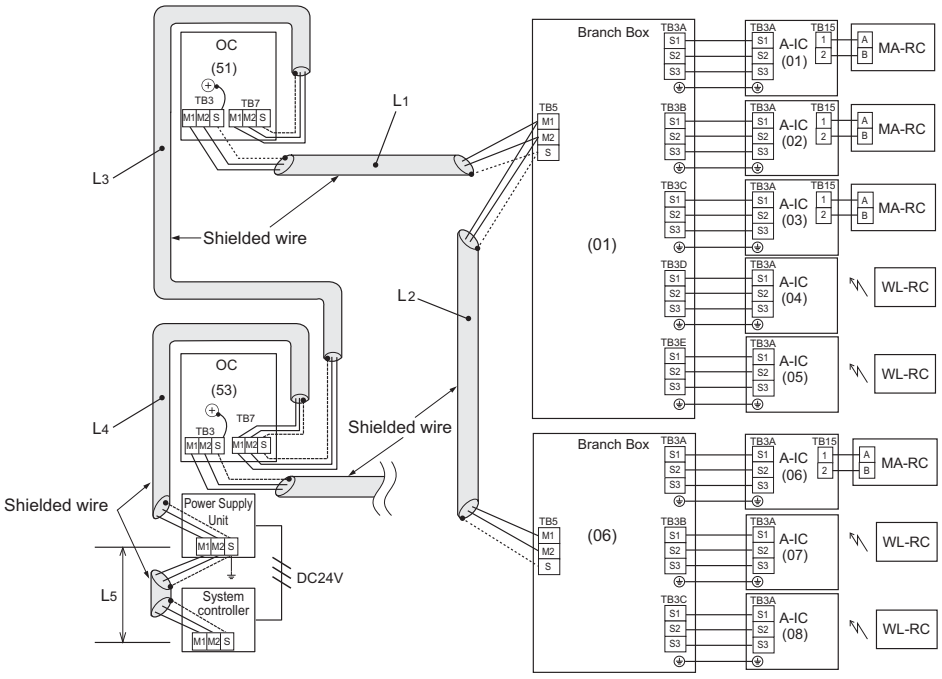

( ) : Address example
A-IC : M/P/S-Series Indoor unit

10-1-4. Mixing system

Long transmission cable causes voltage down, therefore, the length limitation should be obeyed to secure proper transmission.

Max length via outdoor units:	$L_1 + L_2 + L_3 + L_4 + L_5 + L_6 + L_7$	<=500m[1640ft]	1.25mm^2 [AWG16] or thicker
Max transmission cable length:	$L_1 + L_2 + L_3 + L_4$, $L_5 + L_6$, L_7	<=200m[656ft]	1.25mm^2 [AWG16] or thicker

<Example of Transmission Cable Wiring: Mixing system>

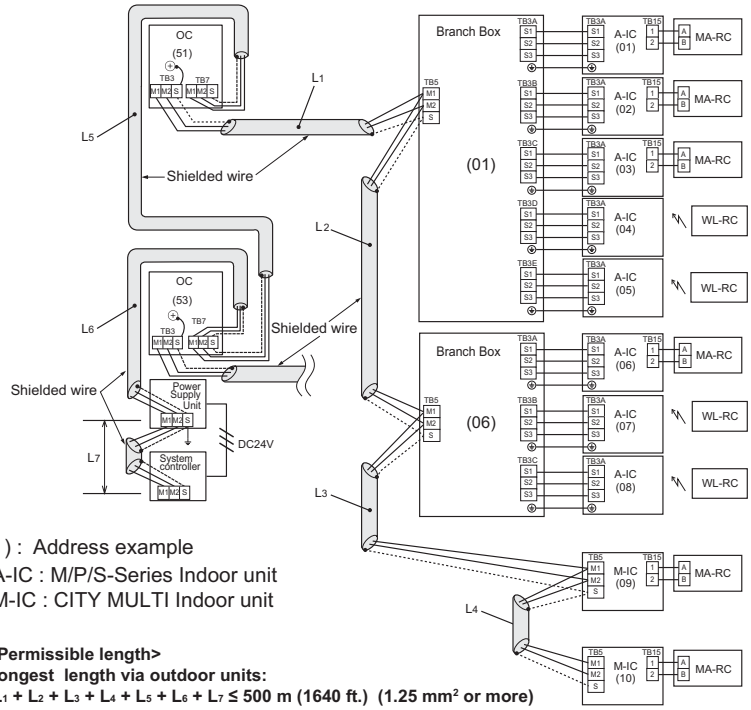

( ) : Address example
A-IC : M/P/S-Series Indoor unit
M-IC : CITY MULTI Indoor unit

<Permissible length>
Longest length via outdoor units:
$L_1 + L_2 + L_3 + L_4 + L_5 + L_6 + L_7 \leq 500$ m (1640 ft.) (1.25 mm^2 or more)
Longest transmission cable length:
$L_1 + L_2 + L_3 + L_4$, $L_5 + L_6$, $L_7 \leq 200$ m (656 ft.) (1.25 mm^2 or more)

10-2. Transmission cable specifications

	Transmission cables (L_i)	M-NET remote controller cables (e_i)	MA Remote controller cables (a_i)
Type of cable	Shielding wire (2-core) CVVS, CPEVS or MVVS	Sheathed 2-core cable (unshielded) CVV	
Cable size	More than 1.25 mm^2 [AWG16]	0.3 ~ 1.25 mm^2 [AWG22~16]	0.3 ~ 1.25 mm^2 [AWG22 ~16]*1
Remarks	Max length: within 200 m	When 10 m [32ft] is exceeded, use cables with the same specification as transmission cables.	Max length: 200 m [656ft]

*1 To wire PAR-CT01MA, PAR-3X MA-Series (X indicates 1, 2…), and Simple MA remote controller, use a wire with a diameter of 0.3 mm^2 [AWG22]

CVVS, MVVS: PVC insulated PVC sheathed shielded control cable
CPEVS: PE insulated PVC sheathed shielded communication cable
CVV: PVC insulated PVC sheathed control cable

10-3. System configuration restrictions

10-3-1. Common restrictions for the CITY MULTI system

For each Outdoor/Heat source unit, the maximum connectable quantity of Indoor unit is specified at its Specifications table.

A) 1 Group of Indoor units can have 1-16 Indoor units;
*OA processing unit GUF-RD(H) is considered as Indoor unit.

B) Maximum 2 remote controllers for 1 group;
*MA/ME remote controllers cannot be present together in 1group.
*When a PAR-CT01MA or PAR-3X MA-Series (X indicates 1, 2…) is connected to a group, no other MA remote controllers can be connected to the same group.

C) 1 Lossnay unit can interlock maximum 16 Indoor units; 1 Indoor unit can interlock only 1 Lossnay unit.

D) Maximum 3 System controllers are connectable when connecting to TB3 of the Outdoor/Heat source unit.

E) A maximum of 6 system controller are connectable to TB3 and TB7 of Outdoor/Heat source unit.

F) 4 System controllers or more are connectable when connecting to TB7 of the Outdoor/Heat source unit, if the transmission power is supplied by the power supply unit PAC-SC51KUA.
*System controller connected as described in D) would have a risk that the failure of connected Outdoor/Heat source unit would stop power supply to the System controller.

10-3-2. Ensuring proper communication power and the number of connected units for M-NET

In order to ensure proper communication among Outdoor/Heat source unit, Indoor unit, Lossnay, OA processing unit GUF-RD(H), and Controllers, the transmission power situation for the M-NET should be observed. In some cases, Transmission booster should be used. Taking the power consumption of Indoor unit as 1, the equivalent power consumption or supply of others are listed at Table 1 and Table 2.

Both the transmission line for centralized controller and indoor-outdoor transmission line must meet the conditions listed below. (Both conditions a) and b) must be met.)

a) [Total equivalent power consumption] ≤ [The equivalent power supply]

b) [Total equivalent number of units (Table 1)] ≤ [40]

Table 1 The equivalent power consumption and the equivalent number of units

Category	Model	The equivalent power consumption	The equivalent number of units
CITY MULTI indoor unit OA unit CITY MULTI connection kit Air handling unit controller	Except for the models indicated by *2 PEFY-AF2500, 3000, 4000, 5000, 6000MH GUF-50, 100 PAC-LV11M-J PAC-AH125, 140, 250, 500M-J	1	1
CITY MULTI indoor unit *2	PDFY-P100VM-E-RE	2	2
BC controller	CMB	2	1
PWFY *1	P100VM-E-BU	6	1
	P200VM-E1-AU P200VM-E2-AU	5	1
	(E)P100VM-E1-AU (E)P100VM-E2-AU P140VM-E1-AU P140VM-E2-AU	1	1
PFAV	P250, 300, 500, 600VM-E(-F)	1	1
	P750, 900VM-E(-F)	2	2
PFV, PEV	P200, 250, 400, 500YM-A	1	1
MA remote controller/Lossnay	PAR-CT01MA PAR-21MA PAR-31MA PAR-32MA PAR-33MA PAC-YT52CRA PAR-FA32MA LGH PZ-60DR-E PZ-61DR-E PZ-43SMF-E	0	0
ME remote controller	PAR-U02MEDA	0.5	1
	PZ-52SF	0.25	1
System controller	AE-200E AE-50E EW-50E LM-AP	0	0
	AG-150A EB-50GU-J PAC-IF01AHC-J	0.5	1
	AT-50B	1.5	5
	PAC-YG60MCA PAC-YG66DCA PAC-YG63MCA	0.25	1
ON/OFF controller	PAC-YT40ANRA	1	1
MN converter	CMS-MNG-E	2	1
Outdoor/Heat source unit	TB7 power consumption	0	0
System control interface	MAC-333IF-E	0	0
A-M converter	PAC-SF83MA-E		

*1 PWFY cannot be connected to PUMY model.

Table 2 The equivalent power supply

Category	Model	The equivalent power supply		
Transmission Booster	PAC-SF46EPA	25 *1		
Power supply unit	PAC-SC51KUA	5		
Expansion controller	PAC-YG50ECA	6		
BM ADAPTER	BAC-HD150	6		
System controller	AE-200E/AE-50E	0.75		
	EW-50E	1.5		
	LM-AP	0		
Outdoor/Heat source unit		TB3 and TB7 total	TB7 only	TB3 only
	Outdoor unit except S-Series and TKA *2	32 *1	6	32 *1-equivalent power supplied to TB7
	S-Series outdoor unit	12 *1	0	12 *1
	TKA outdoor unit	32 *1	- *3	32 *1

*1 When one or more indoor units listed below is connected, subtract 3 from the equivalent power supply.

Table 3

Category	Model
Indoor unit	Sized P200/P250 PEFY-AF4000/5000/6000MH, PFFY-P400/500YM-E, PDFY-P100VM-E-RE
Air handling unit controller	PAC-AH250/500M-J
PFAV	PFAV-P500/600/750/900VM-E(-F)
PFV	PFV-P400/500YM-A
PEV	PEV-P400/500YM-A

*2 If PAC-SC51KUA is used to supply power at TB7 side, no power supply need from Outdoor/Heat source unit at TB7, Connector TB3 itself will therefore have 32.
*3 Do not supply power to TB7 from TKA outdoor units.
Use PAC-SC51KUA or PAC-SF46EPA when connecting an M-NET device to TB7.

With the equivalent power consumption values and the equivalent number of units in Table 1 and Table 2, PAC-SF46EPA can be designed into the air-conditioner system to ensure proper system communication according to (A), (B), (C).

(A) Firstly, count from TB3 at TB3 side the total equivalent number of units of Indoor units, OA processing units, ME remote controller, and System controllers. If the total equivalent number of units reaches 40, a PAC-SF46EPA should be set.
(B) Secondly, count from TB7 side to TB3 side the total transmission power consumption. If the total equivalent power supply reaches 32, a PAC-SF46EPA should be set. Yet, if a PAC-SC51KUA or another controller with a built-in power supply, such as PAC-YG50ECA, is used to supply power at TB7 side, count from TB3 side only.
(C) Thirdly, count from TB7 at TB7 side the total transmission power consumption, If the total equivalent power supply for only TB7 reaches 6, a PAC-SF46EPA should be set. Also, count from TB7 at TB7 side the total equivalent number of units of System controllers, and so on. If the total equivalent number of units reaches 40, a PAC-SF46EPA should be set.

* The equivalent power supply of S-Series outdoor unit is 12.
* When one or more indoor units listed in Table 3 is connected, subtract 3 from the equivalent power supply.

■ System example

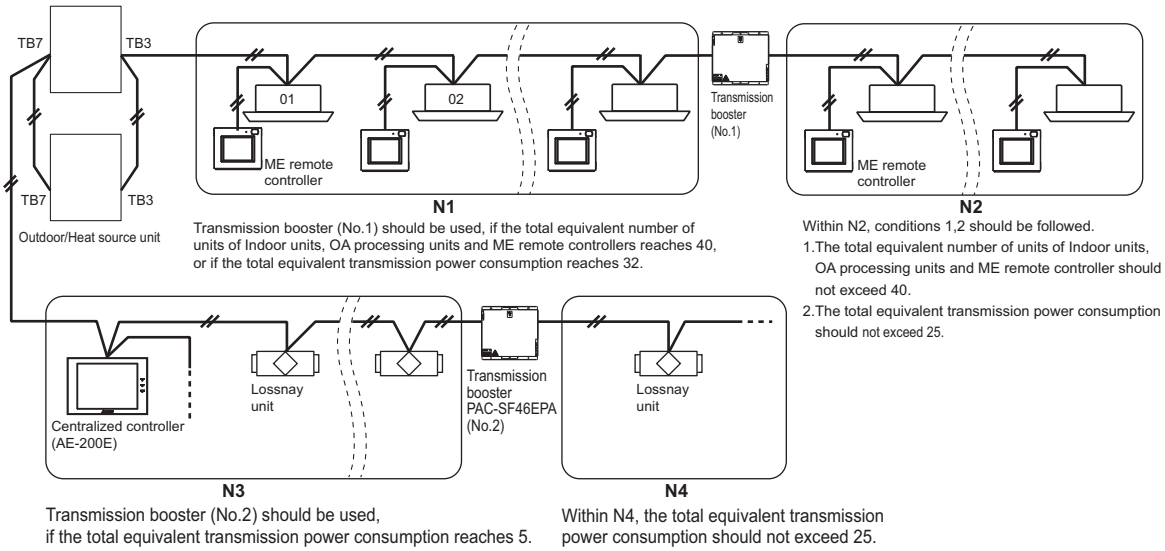

10-3-3. Ensuring proper power supply to System controller

The power to System controller (excluding AE-200E, AE-50E, EW-50E, BAC-HD150, LM-AP) is supplied via M-NET transmission line. M-NET transmission line at TB7 side is called Centralized control transmission line while one at TB3 side is called Indoor-Outdoor/Heat source transmission line. There are 3 ways to supply power to the System controller .

A) Connecting to TB3 of the Outdoor/Heat source unit and receiving power from the Outdoor/Heat source unit.
B) Connecting to TB7 of the Outdoor/Heat source unit and receiving power from the Outdoor/Heat source unit.
(Not applicable to the PUMY model)
C) Connecting to TB7 of the Outdoor/Heat source unit but receiving power from power supply unit PAC-SC51KUA.
* System controllers (AE-200E, AE-50E, EW-50E, BAC-HD150, LM-AP) have a built-in function to supply power to the M-NET transmission lines, so no power needs to be supplied to the M-NET transmission lines from the Outdoor/Heat source units or from PAC-SC51KUA.

10-3-3-A. When connecting to TB3 of the Outdoor/Heat source unit and receiving power from the Outdoor/Heat source unit.

Maximum 3 System controllers can be connected to TB3.
If there is more than 1 Outdoor/Heat source unit, it is necessary to replace power supply switch connector CN41 with CN40 on one Outdoor/Heat source unit.

Fig. 10-3-3-A

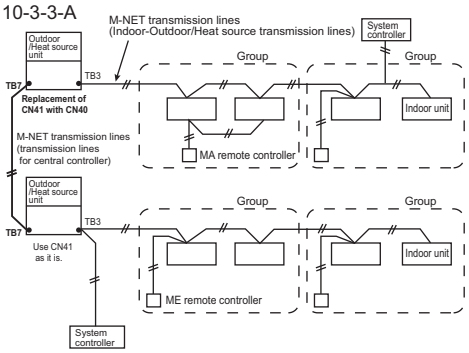

10-3-3-B. When connecting to TB7 of the Outdoor/Heat source unit and receiving power from the Outdoor/Heat source unit. (Not applicable to the PUMY model)

A maximum of 6 system controller are connectable to TB3 and TB7 of Outdoor/Heat source unit. (Not applicable to the PUMY model)
It is necessary to replace power supply switch connector CN41 with CN40 on one Outdoor/Heat source unit.

Fig. 10-3-3-B

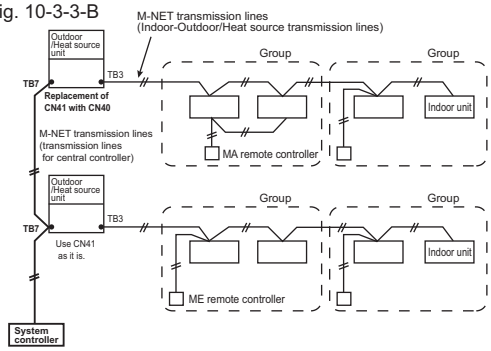

10-3-3-C. When connecting to TB7 of the Outdoor/Heat source unit but receiving power from PAC-SC51KUA.

When using PAC-SC51KUA to supply transmission power, the power supply connector CN41 on the Outdoor/Heat source units should be kept as it is. It is also a factory setting.
1 PAC-SC51KUA supports maximum 1 AG-150A or 1 EB-50GU-J unit due to the limited power 24VDC at its TB3.
However, 1 PAC-SC51KUA supplies transmission power at its TB2 equal to 5 Indoor units, which is referable at Table 2.
If System controller, ON/OFF controller connected to TB7 consume transmission power more than 5 (Indoor units), Transmission booster PAC-SF46EPA is needed. PAC-SF46EPA supplies transmission power equal to 25 Indoor units.

Fig. 10-3-3-C

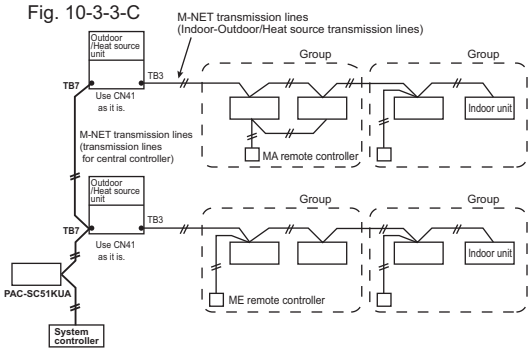

⚠ CAUTION

■How to connect system controllers (AE-200E, AE-50E, EW-50E, BAC-HD150, LM-AP) to a given system
System controllers (AE-200E, AE-50E, EW-50E, BAC-HD150, LM-AP) have a built-in function to supply power to the M-NET transmission lines, so no power needs to be supplied to the M-NET transmission lines from the Outdoor/Heat source units or from PAC-SC51KUA.
Leave the power supply connector on the Outdoor/Heat source unit connected to CN41 as it is.
Refer to 10-3-2 for information about the power-supply capacity of each system controller (EW-50E, BAC-HD150, LM-AP) to the low-level system controllers.

Fig. 10-3-3-D

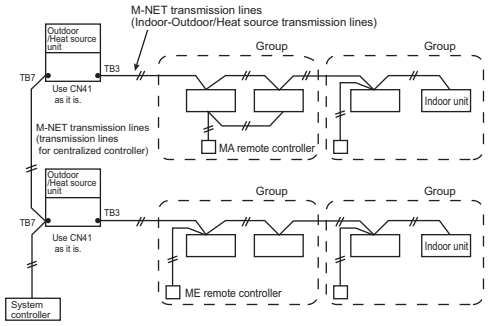

10-3-4. Power supply to LM-AP

1-phase 220-240VAC power supply is needed.
The power supply unit PAC-SC51KUA is not necessary when connecting only the LM-AP. Yet, make sure to change the power supply changeover connector CN41 to CN40 on the LM-AP.

10-3-5. Power supply to expansion controller

1-phase 100-240VAC power supply is needed.
The power supply unit PAC-SC51KUA is not necessary.
The expansion controller supplies power through TB3, which equals 6 indoor units. (refer to Table 2)

10-3-6. Power supply to BM ADAPTER

1-phase 100-240VAC power supply is needed.
The power supply unit PAC-SC51KUA is not necessary when only BM ADAPTER is connected.
Yet, make sure to move the power jumper from CN41 to CN40 on the BM ADAPTER.

10-3-7. Power supply to AE-200E/AE-50E/EW-50E

1-phase 100-240VAC power supply is needed.
The power supply unit PAC-SC51KUA is not necessary when connecting only the AE-200E/AE-50E/EW-50E.

10-4. Address setting

10-4-1. Switch operation

In order to constitute CITY MULTI in a complete system, switch operation for setting the unit address No. and connection No. is required.

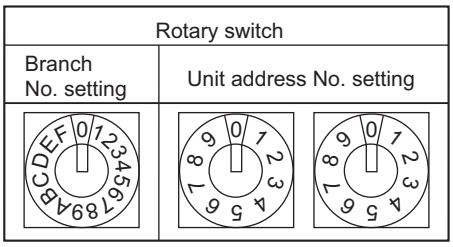

① Address No. of outdoor unit, indoor unit and remote controller.
The address No. is set at the address setting board.
In the case of R2 system, it is necessary to set the same No. at the branch No. switch of indoor unit as that of the BC controller connected. (When connecting two or more branches, use the lowest branch No.)

② Caution for switch operations

- Be sure to shut off power source before switch setting. If operated with power source on, switch can not operate properly.
- No units with identical unit address shall exist in one whole air conditioner system. If set erroneously, the system can not operate.

③ MA remote controller

- When connecting only one remote controller to one group, it is always the main remote controller.
  When connecting two remote controllers to one group, set one remote controller as the main remote controller and the other as the sub remote controller.
- The factory setting is "Main".

PAR-3X MA-Series (X indicates 1, 2…), PAR-CT01MA
The MA remote controller does not have the switches listed above.
Refer to the installation manual for the function setting.

PAC-YT52CRA

Setting the dip switches

There are switches on the back of the top case. Remote controller Main/Sub and other function settings are performed using these switches. Ordinarily, only change the Main/Sub setting of SW1.
(The factory settings are ON for SW1, 2, and 3 and OFF for SW4.)

SW No.	SW contents Main	ON	OFF	Comment
1	Remote controller Main/Sub setting	Main	Sub	Set one of the two remote controllers at one group to "ON".
2	Temperature display units setting	Celsius	Fahrenheit	When the temperature is displayed in [Fahrenheit], set to "OFF".
3	Cooling/heating display in AUTO mode	Yes	No	When you do not want to display "Cooling" and "Heating" in the AUTO mode, set to "OFF".
4	Indoor temperature display	Yes	No	When you want to display the indoor temperature, set to "ON".

10-4-2. Rule of setting address

Unit		Address setting	Example	Note
Indoor unit		01 ~ 50	10 1	Use the most recent address within the same group of indoor units. Make the indoor units address connected to the BC controller (Sub) larger than the indoor units address connected to the BC controller (Main). If applicable, set the sub BC controllers in an PURY/PQRY system in the following order: (1) Indoor unit to be connected to the BC controller (Main) (2) Indoor unit to be connected to the BC controller (No.1 Sub) (3) Indoor unit to be connected to the BC controller (No.2 Sub) Set the address so that (1)<(2)<(3)
Outdoor unit		51 ~ 99, 100	10 1	The smallest address of indoor unit in same refrigerant system + 50 ∗The address automatically becomes "100" if it is set as "01~ 50"
BC controller (Main)		52 ~ 99, 100	10 1	The address of outdoor unit + 1 ∗Please reset another address between 51 and 99 when two addresses overlap. ∗The address automatically becomes "100" if it is set as "01~ 50"
BC controller (Sub)		53 ~ 99, 100	10 1	Lowest address within the indoor units connected to the BC controller (Sub) plus 50.
Local remote controller	ME Remote controller (Main)	101 ~ 150	1 Fixed 10 1	The smallest address of indoor unit in the group + 100 ∗The place of "100" is fixed to "1"
Local remote controller	ME Remote controller (Sub)	151 ~ 199, 200	1 Fixed 10 1	The address of main remote controller + 50 ∗The address automatically becomes "200" if it is set as "00"
System controller	ON/OFF remote controller	201 ~ 250	100 10 1	The smallest group No. to be managed + 200 ∗The smallest group No. to be managed is changeable.
System controller	AE-200E/AE-50E AG-150A EB-50GU-J EW-50E AT-50B	000, 201 ~ 250	0 0 0 100 10 1	∗AT-50B cannot be set to "000".
System controller	PAC-YG50ECA	000, 201 ~ 250	0 0 0 100 10 1	∗Settings are made on the initial screen of AG-150A.
System controller	BAC-HD150	000, 201 ~ 250	0 0 0 100 10 1	∗Settings are made with setting tool of BM ADAPTER.
System controller	LMAP04-E	201 ~ 250	2 Fixed 10 1	
PI, AI, DIDO	PAC-YG60MCA	01 ~ 50	10 1	
PI, AI, DIDO	PAC-YG63MCA	01 ~ 50	10 1	
PI, AI, DIDO	PAC-YG66DCA	01 ~ 50	10 1	
Lossnay, OA processing unit		01 ~ 50	10 1	After setting the addresses of all the indoor units, assign an arbitrary address.
PAC-IF01AHC		201 ~ 250	2 Fixed 10 1	

10-4-3. System example

Factory setting

Original switch setting of the outdoors, indoors, controllers, LM-AP and BM ADAPTER at shipment is as follows.

- Outdoor unit : Address: 00, CN41: ON (Jumper), DipSW2-1: OFF
- Indoor unit : Address: 00
- ME Remote controller : Address: 101
- LM-AP : Address: 247, CN41: ON (Jumper), DipSW1-2: OFF
- BM ADAPTER : Address: 000, CN41: ON (Jumper)
- AE-200E/AE-50E/EW-50E : Address: 000, CN21: ON (Jumper)

10-4-3-1. Basic (No address setting)

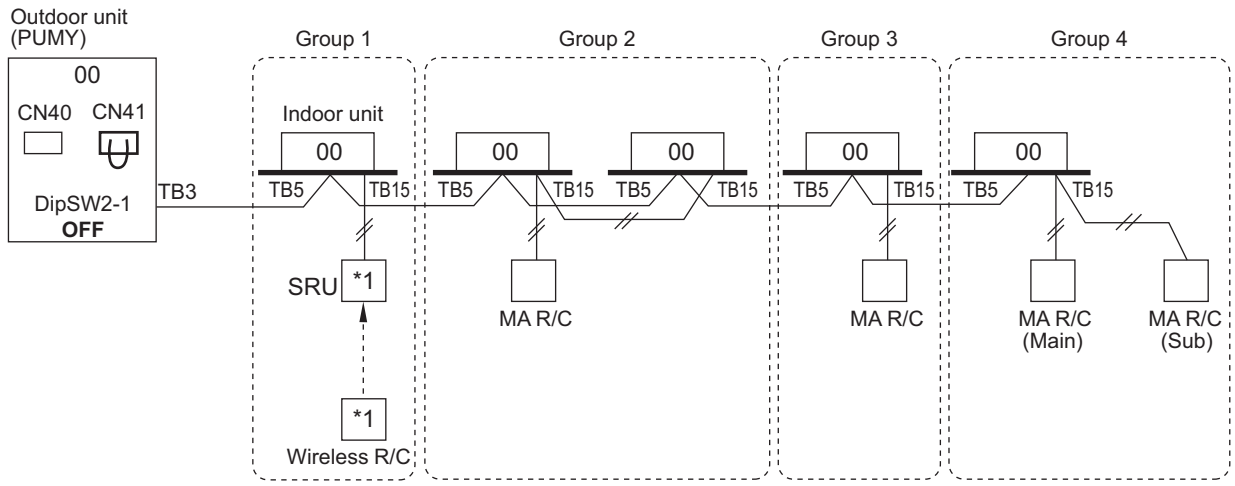

*1 For wireless R/C and Signal receiver unit(SBU), channel 1, 2 and 3 are selectable and should be set same channel.

10-4-3-2. Basic, Sub/main ME remote controller

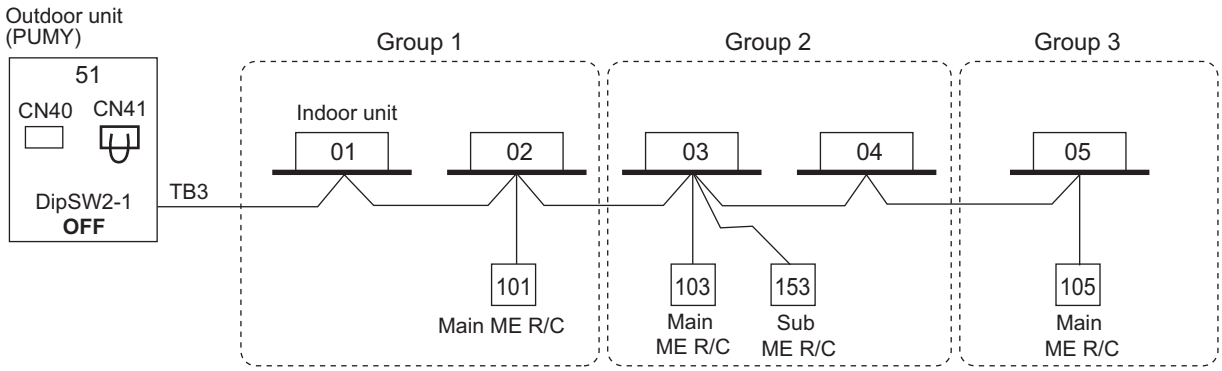

10-4-3-3. Grouping in different refrigerant system

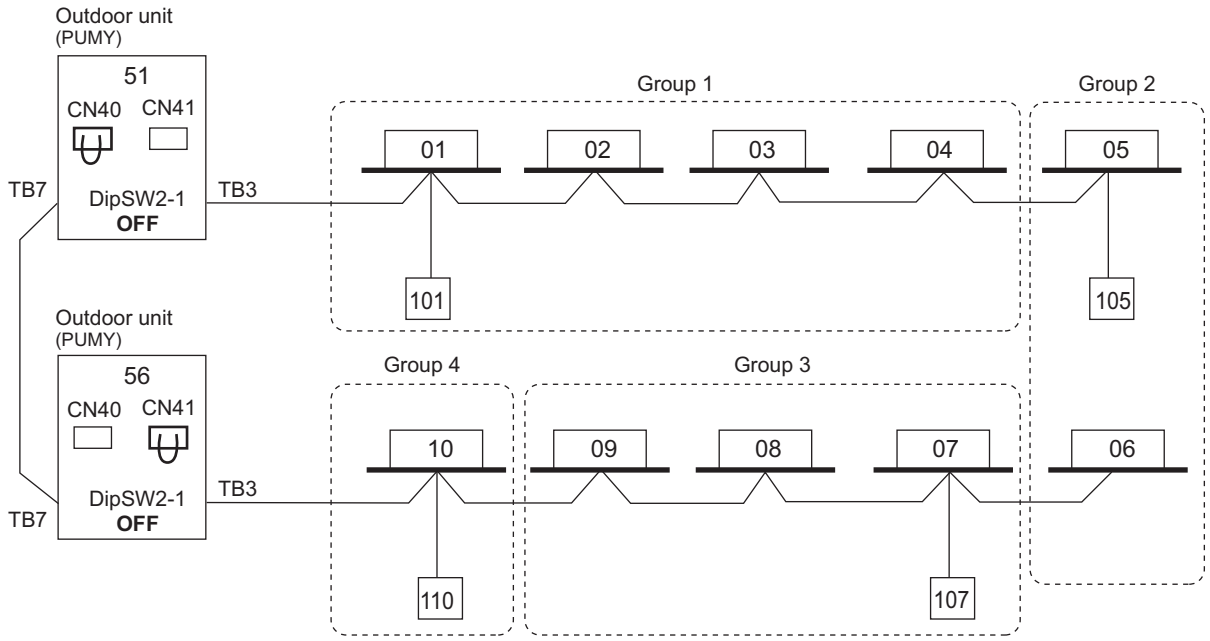

NOTE
- It is necessary to change the connecter to CN40 on the outdoor unit (Heat source unit) control board (only one outdoor unit (Heat source unit)) when the group is set between other refrigerant systems.
- It is necessary to set on the remote controller by manual when group sets on the different refrigerant system. Please refer to remote controller installation manual.

10-4-3-4. 2 Outdoor unit, AG-150A, AE-200E, MA

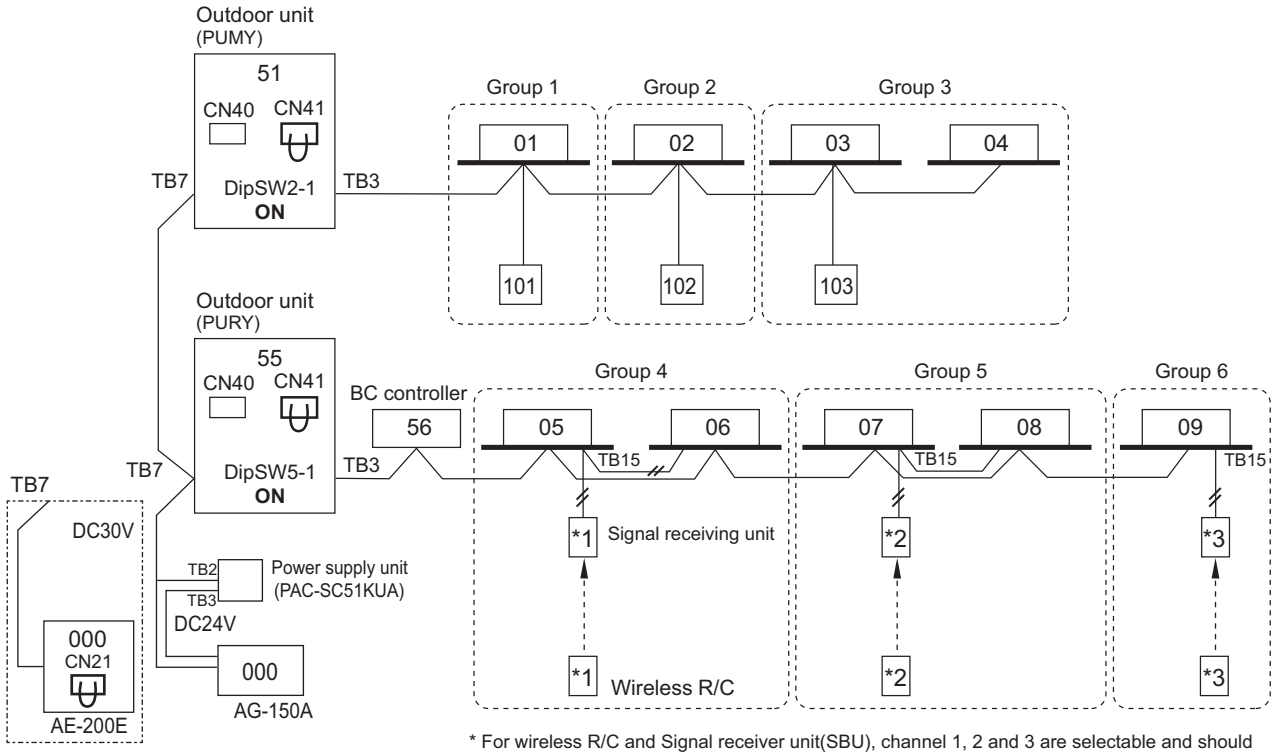

* For wireless R/C and Signal receiver unit(SBU), channel 1, 2 and 3 are selectable and should be set same channel.

10-4-3-5. TG-2000A(*1)+AE-200E/AE-50E/EW-50E
AE-200E can control max. 50 indoor units;
TG-2000A can control max. 40 of AE-200E/AE-50E/EW-50E;*2
TG-2000A can control max. 2000 indoor units.

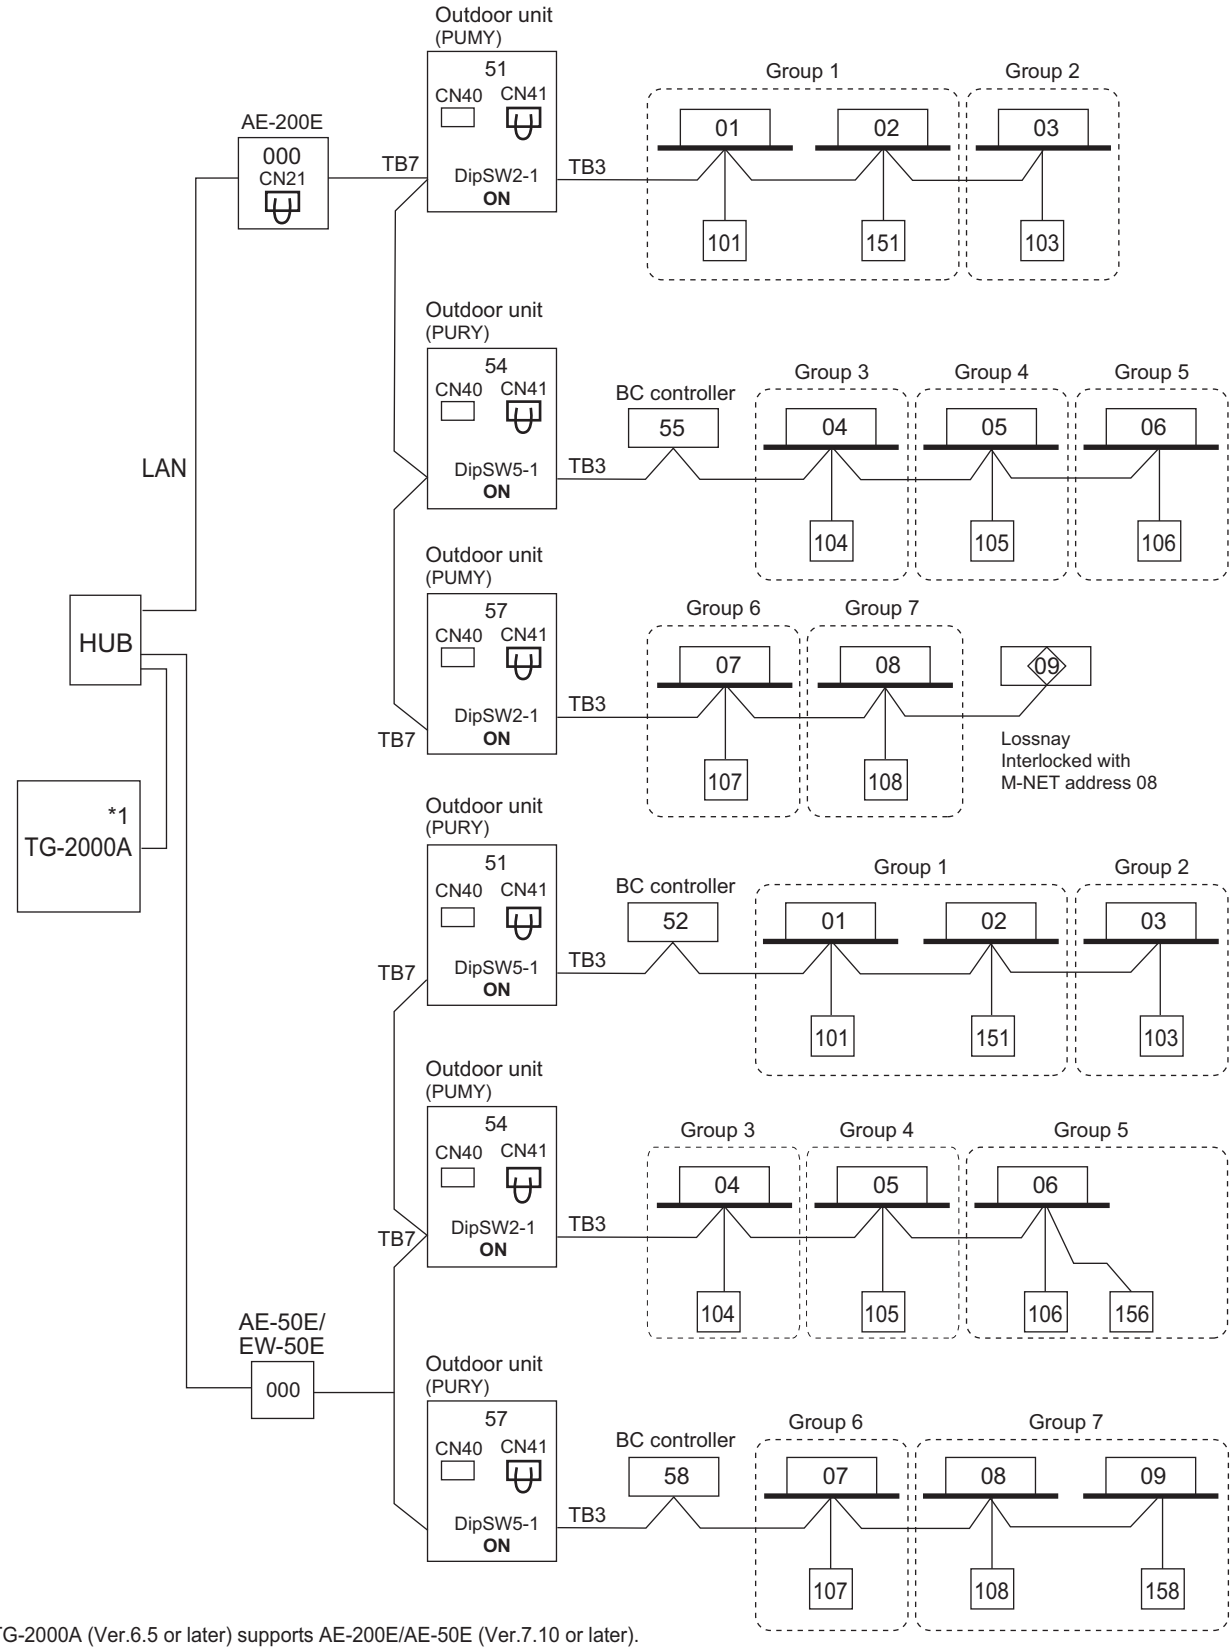

*1 TG-2000A (Ver.6.5 or later) supports AE-200E/AE-50E (Ver.7.10 or later).
TG-2000A (Ver.6.60 or later) supports EW-50E.
*2 When AE-200E connected with AE-50E/EW-50E is connected, the number of AE-50E/EW-50E will be the maximum controllable number.
TG-2000A can control up to 40 AE-200E/AE-50E/EW-50E or AE-200E without AE-50E/EW-50E connection.

10-4-3-6. AE-200E + AE-50E/EW-50E
AE-200E can control max. 200 indoor units/via AE-50E/EW-50E.

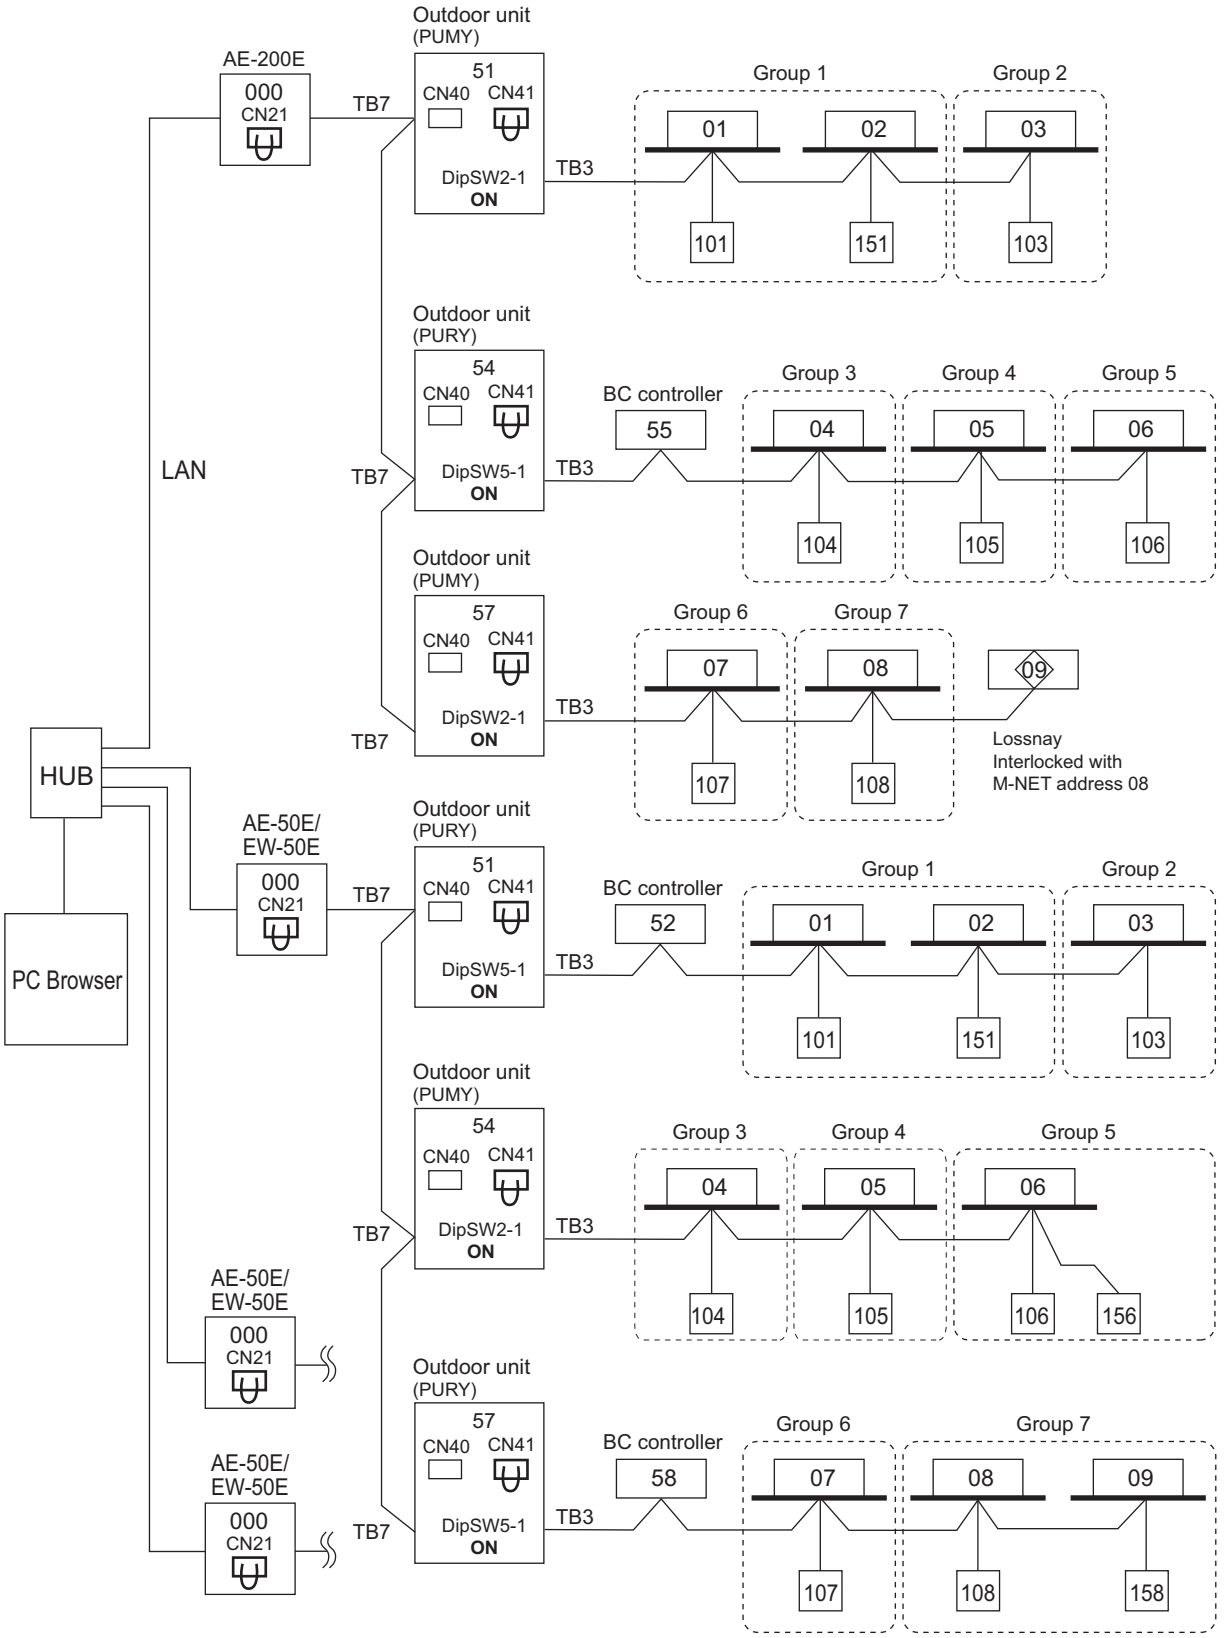

10-4-3-7. LM-AP

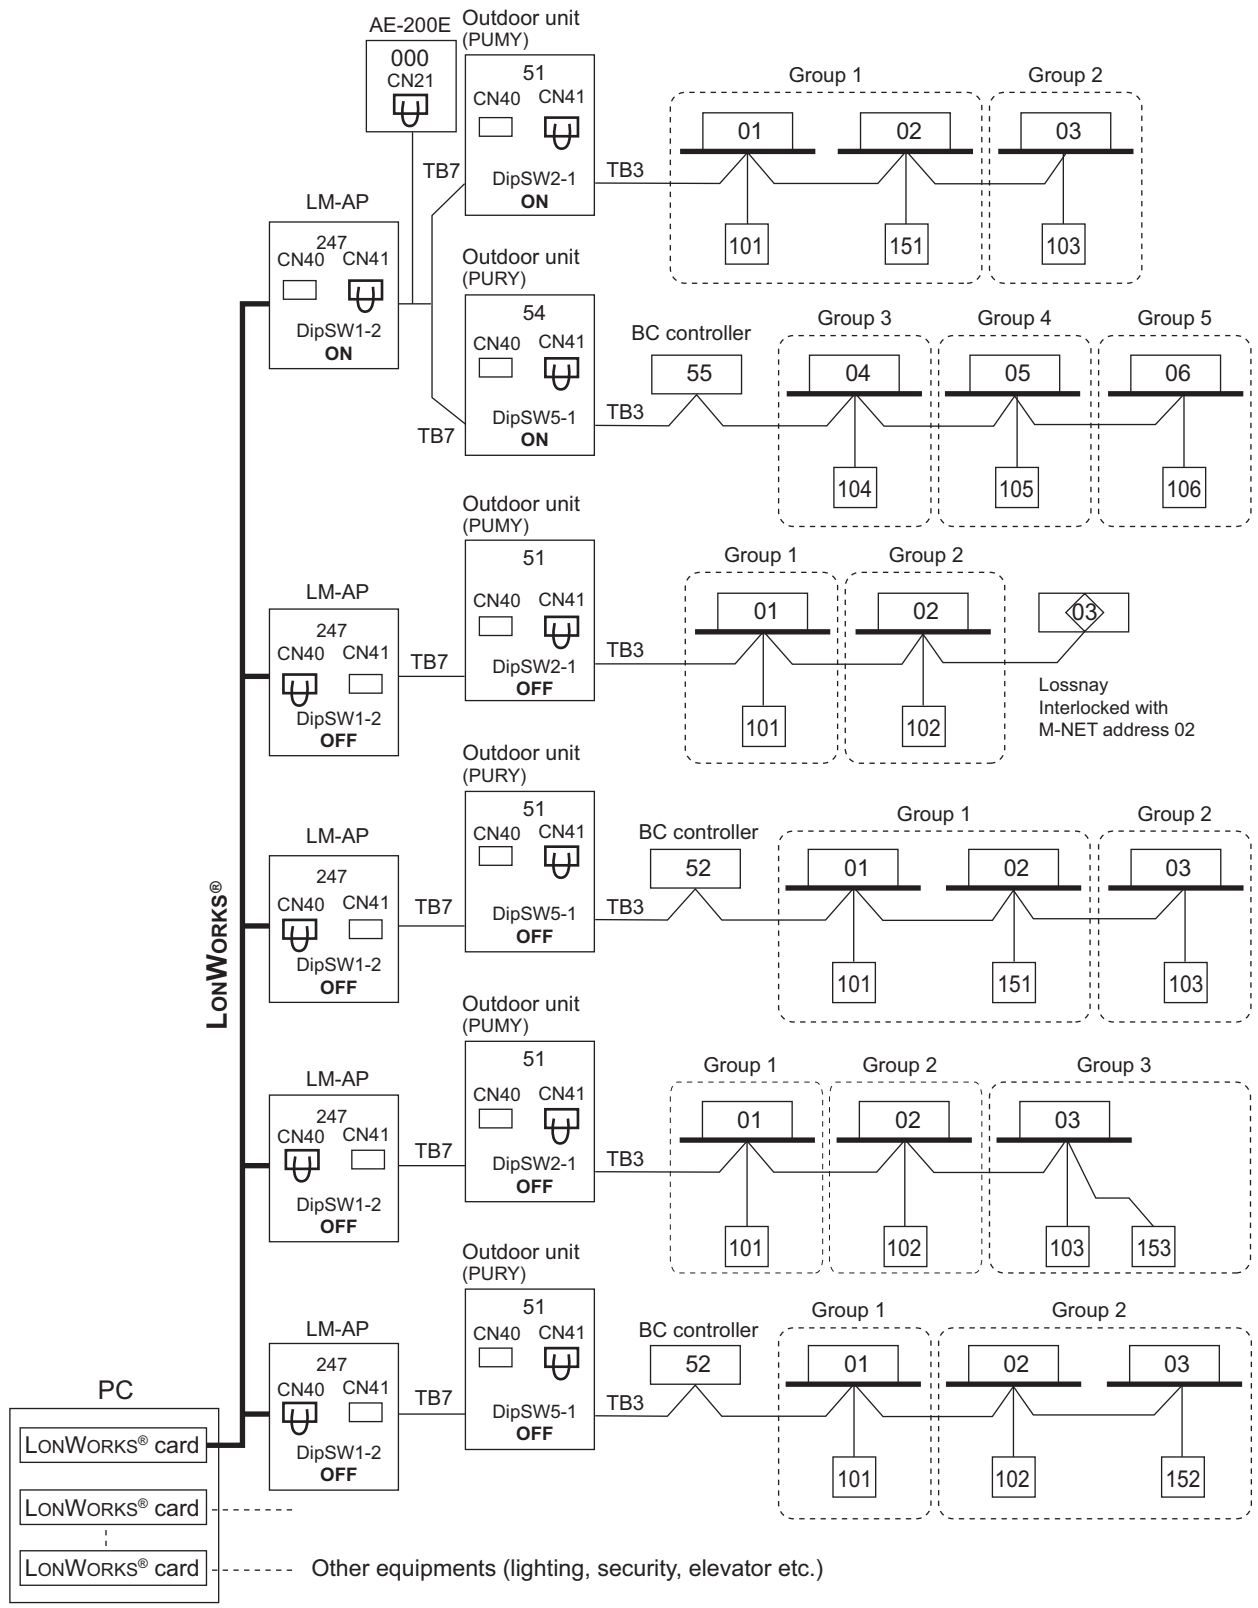

NOTE

- LM-AP can control 50 indoor units.
- It is necessary to turn on the DipSW1-2 on the LM-AP control board and the DipSW2-1 on the outdoor unit (heat source unit) control board with centralized controller (Power supply unit).
- It is necessary to change the connector to CN40 on the LM-AP control board without centralized controllers (Power supply unit).

10-4-3-8. BM ADAPTER

BM ADAPTER can transmit for max. 50 indoor units;
Change Jumper from CN41 to CN40 to activate power supply to BM ADAPTER itself for those BM ADAPTER connected without the power supply unit.

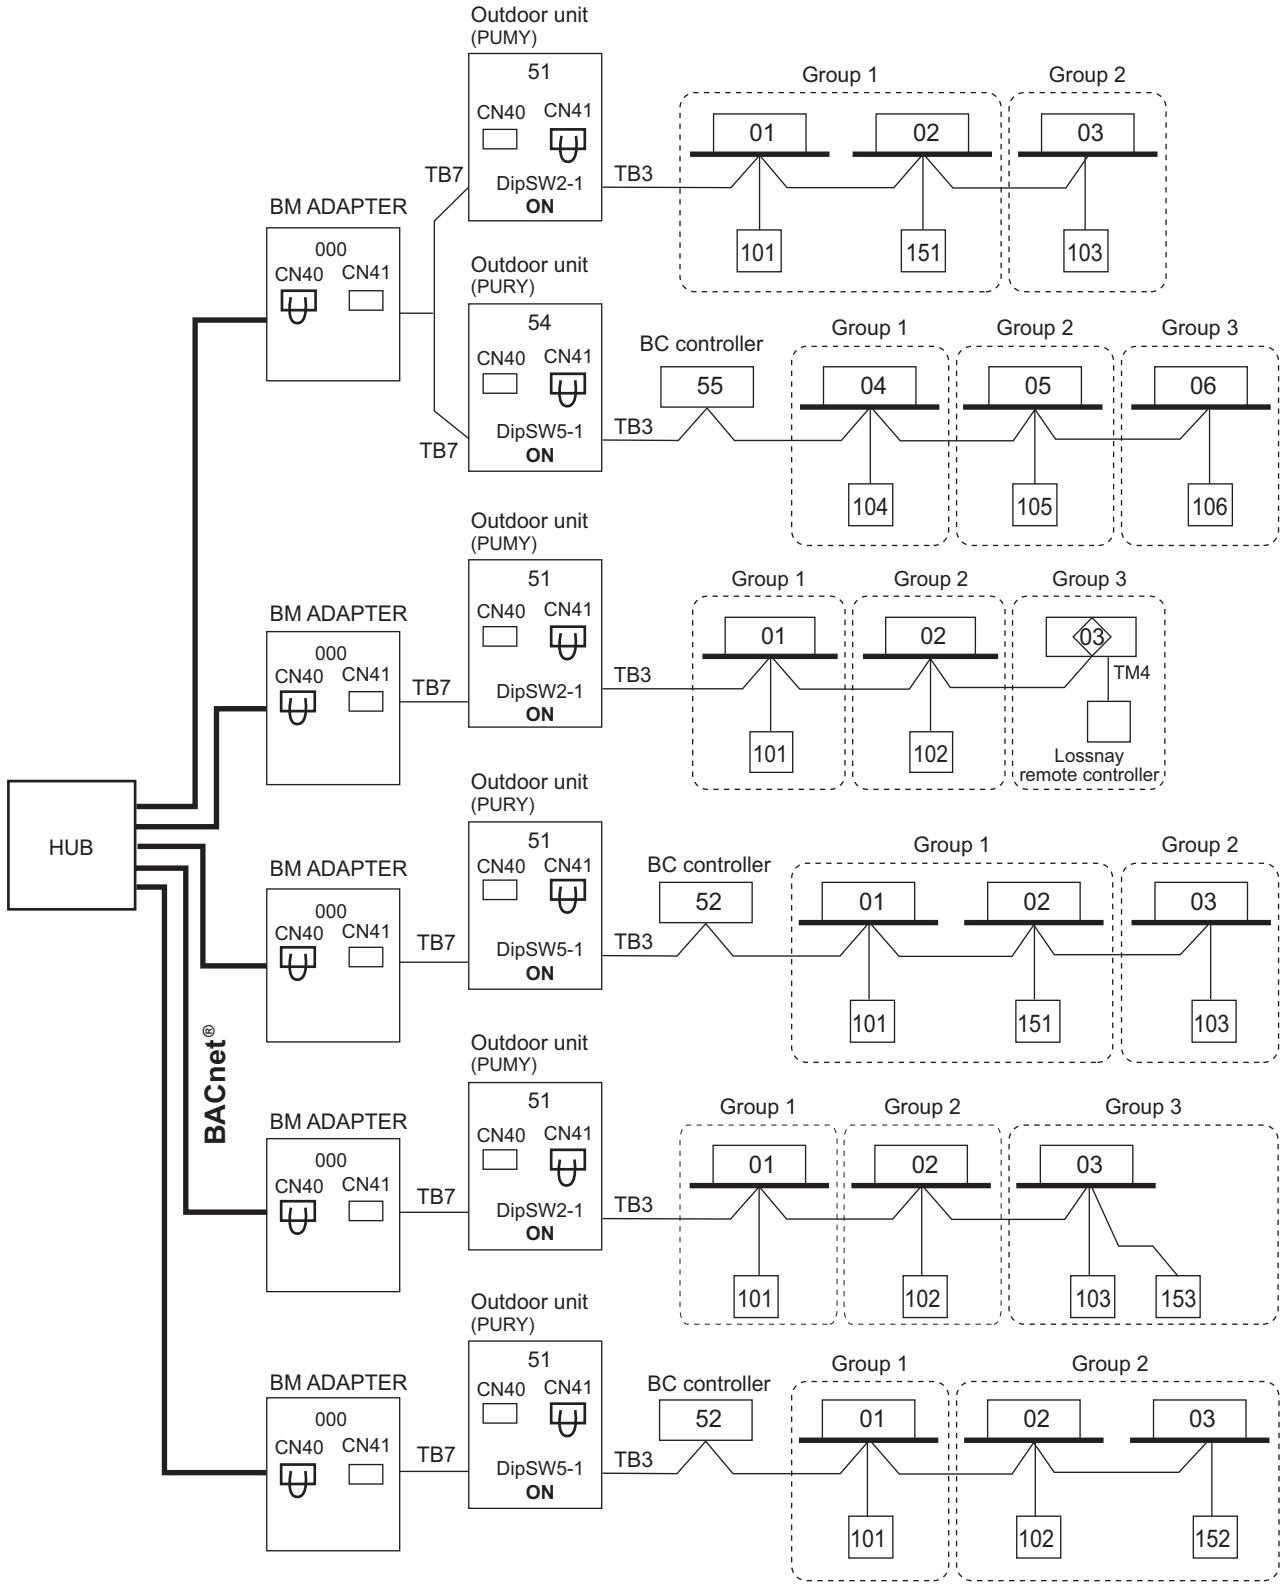

10-4-3-9. BM ADAPTER+PAC-YG50ECA (Expansion controller)

BM ADAPTER(*1) can transmit for max. 150 indoor units/via expansion controllers (PAC-YG50ECA).
When the dual-set-point function is used, no expansion controllers can be connected, and only up to 50 units can be controlled from each BAC-HD150.

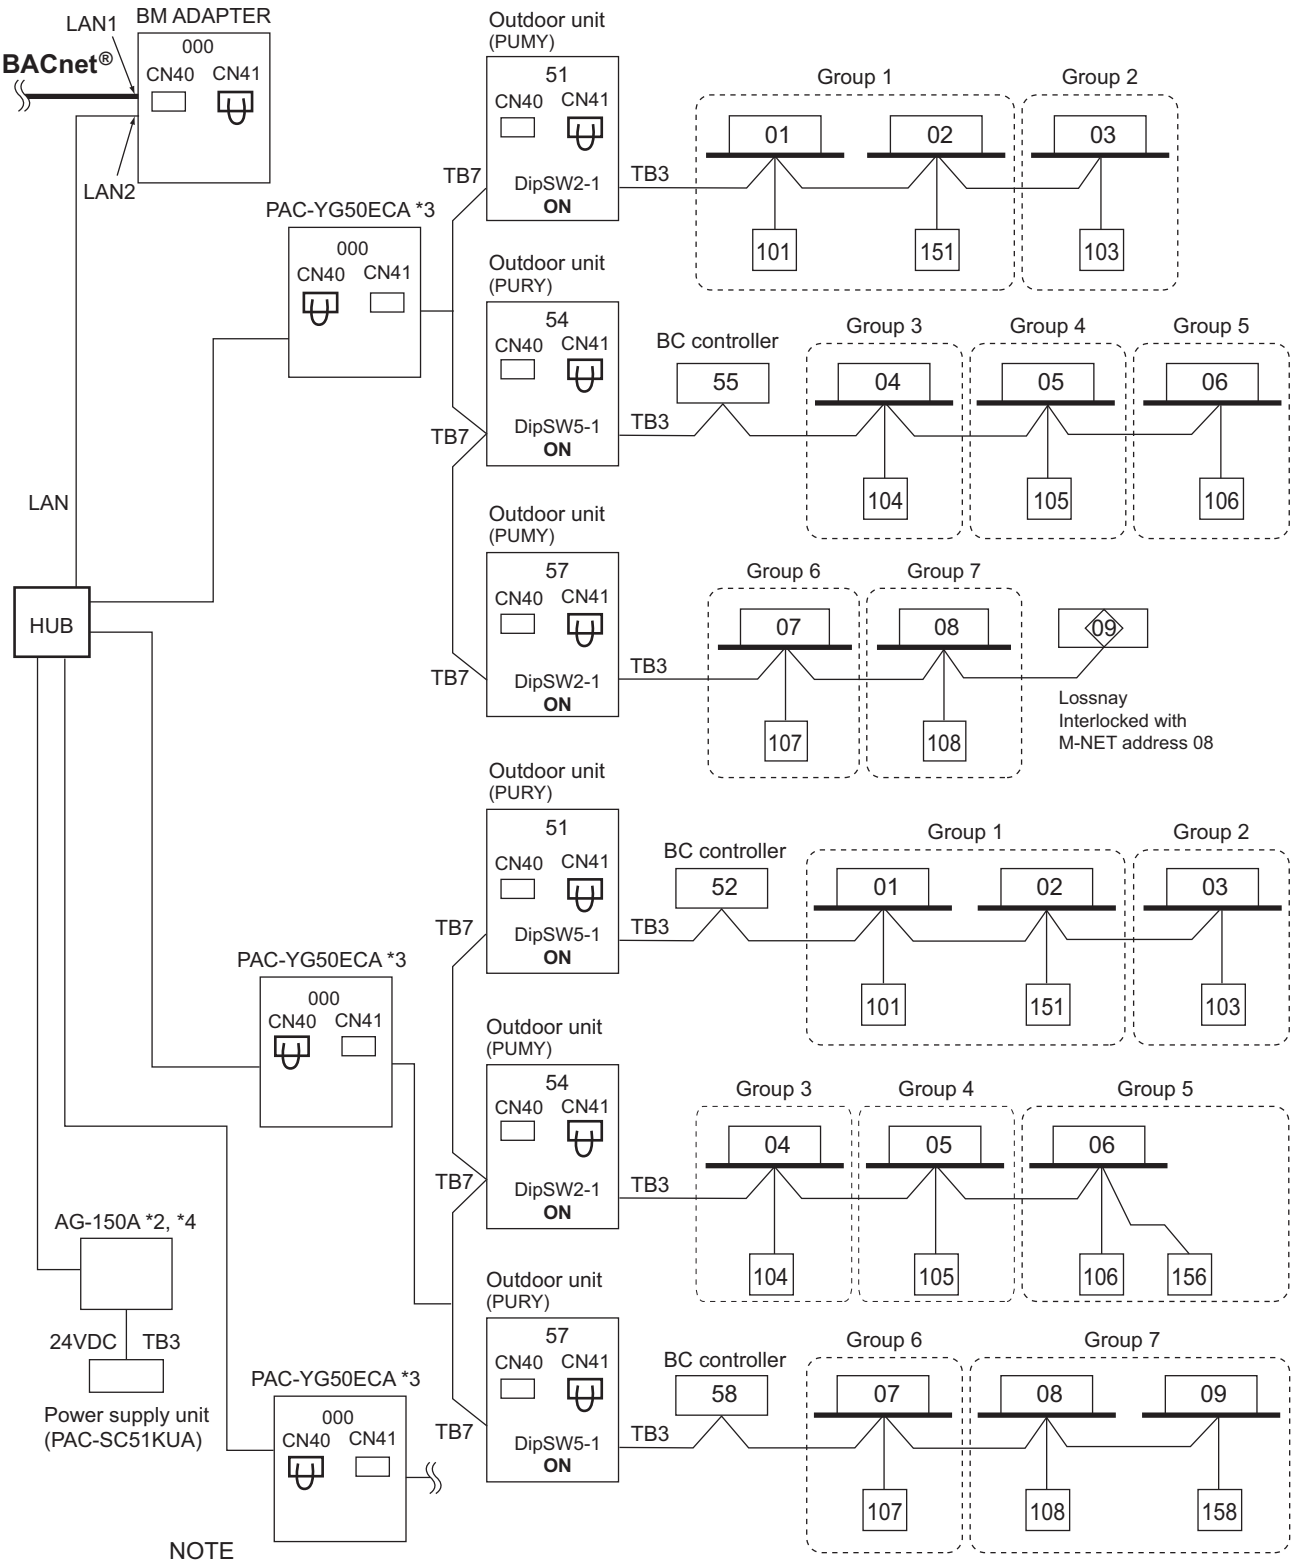

NOTE
•It is not necessary to connect the M-NET transmission line to the TB3 on BM ADAPTER. Leave the power jumper of BM ADAPTER connected to CN41.
*1 BM ADAPTER (Ver.2.00 or later) supports the expansion controller.
*2 AG-150A (Ver.2.30 or later) supports the BM ADAPTER.
*3 PAC-YG50ECA (Ver.1.30 or later) supports the BM ADAPTER.
*4 Consult your dealer for restrictions when connecting both AG-150A and BM ADAPTER to PAC-YG50ECA.

10-4-3-10. BM ADAPTER+AE-200E/AE-50E/EW-50E

BM ADAPTER can transmit for max. 50 indoor units.

One BM ADAPTER is required for one AE-200E/AE-50E/EW-50E.

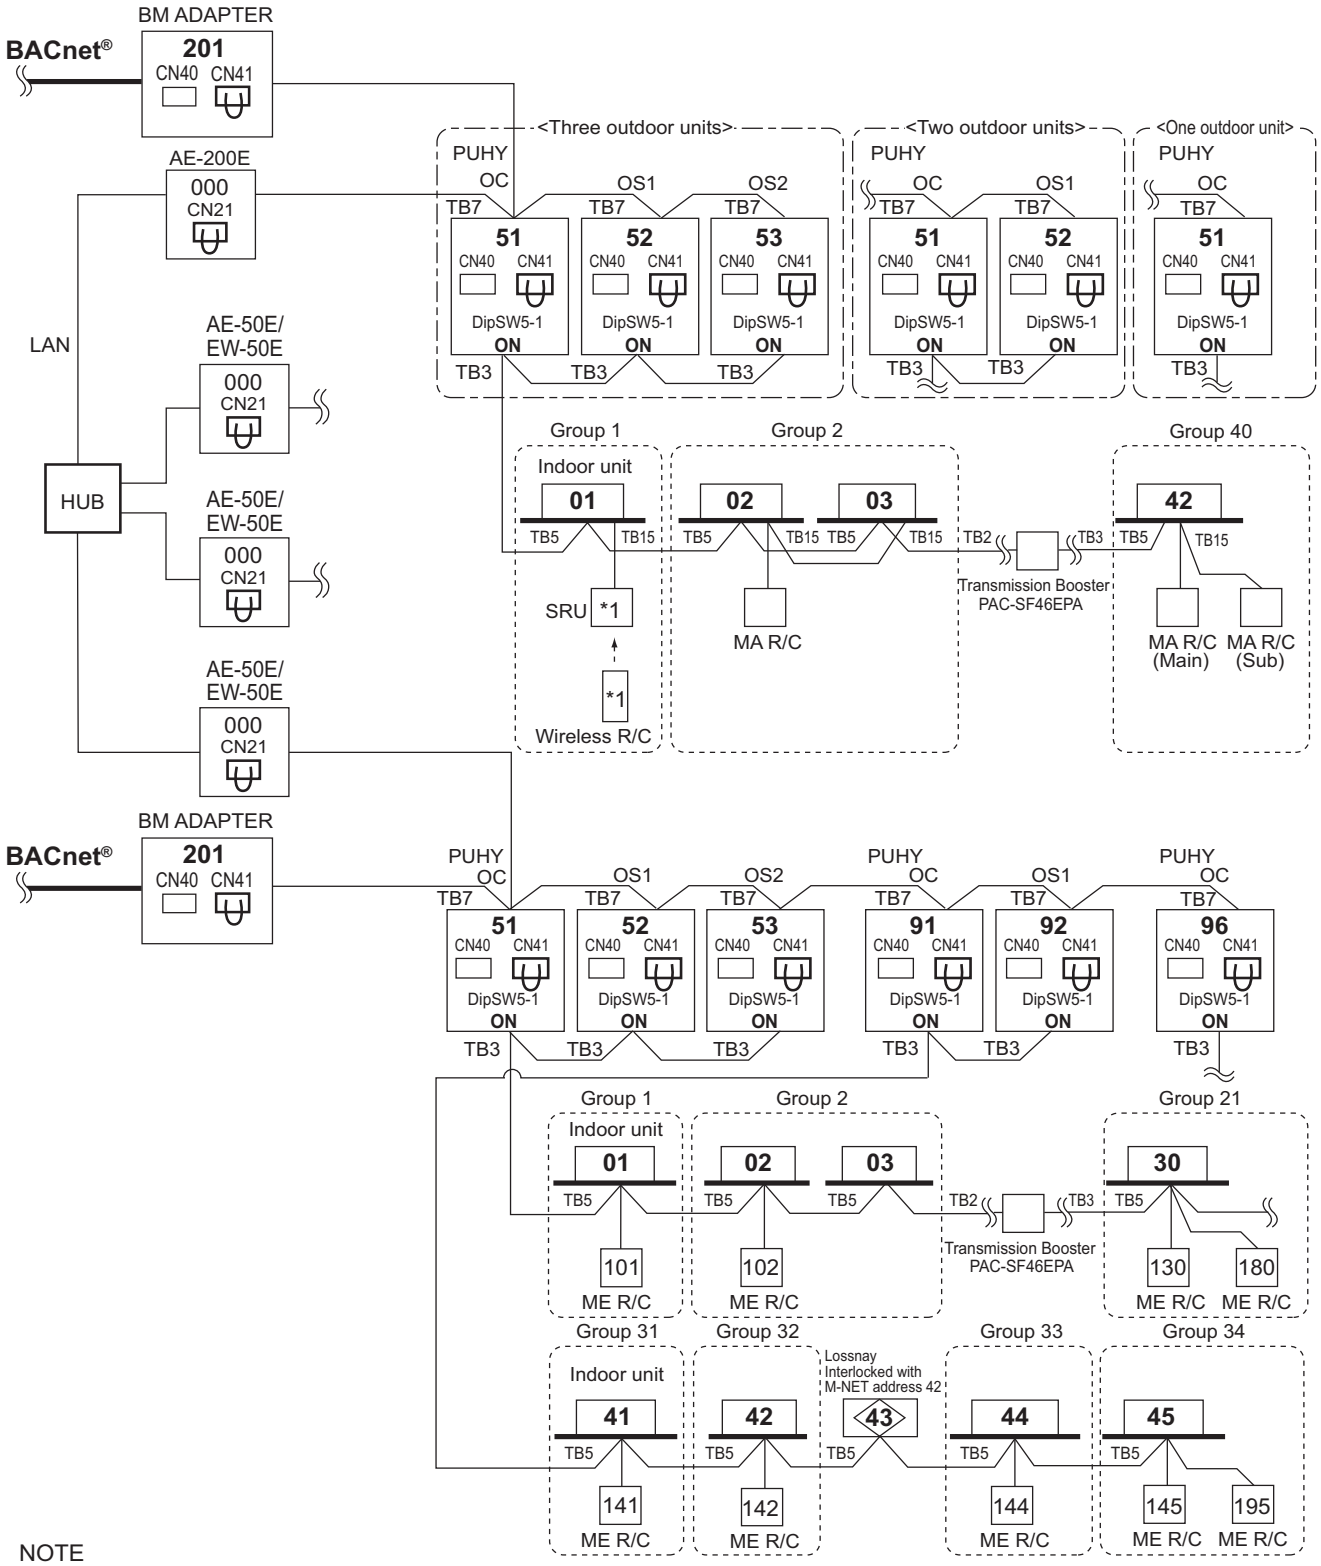

NOTE

•It is not necessary to connect the M-NET transmission line to the TB3 on BM ADAPTER. Leave the power jumper of BM ADAPTER connected to CN41.

*1 For Wireless R/C and Signal receiver unit (SRU), channel 1, 2 and 3 are selectable and should be set to same channel.

*2 Consult your dealer for restrictions when connecting both AE-200E/AE-50E/EW-50E and BM ADAPTER.

*3 When a PAR-CT01MA or PAR-3X MA-Series (X indicates 1, 2…) is connected to a group, no other MA remote controllers can be connected to the same group.

*4 In a system that uses AE-200E and/or AE-50E/EW-50E, each BM-ADAPTER must be connected to the M-NET line.